

DO NOT:

- Do not use any abrasive cleaners, cloths, or paper towels.
- Do not use any cleaning agents containing acids, polish abrasives, or harsh cleaners or soaps.

Regular and routine cleaning will reduce the need for heavy cleaning and polishing. If heavy cleaning is required, the following procedures are recommended:

- · Clear ammonia free liquid glass cleaners
- Non-acidic, non-abrasive gentle liquid or fully dissolved powder cleansers mixed according to manufacturers directions.
- Non-abrasive liquid polishers


Once clean, rinse faucet again with clear water to thoroughly remove cleaner or polish and blot dry with a soft cotton cloth.

Failure to follow these care instructions may damage the Faucet's finish.

TRIM INSTALLATION


1

- Remove PLASTER GUARD (1) if attached.
- Push CAPS (2 & 2a) as shown onto CONTROL VALVES (3).
- Push ESCUTCHEON HOLDER (4) with lightly greased O-RING SEALS (5) over CAPS (2, 2a). Attach with the two SCREWS (6) provided.
- Place ESCUTCHEON (7) over ESCUTCHEON HOLDER (4) and push evenly for a snap fit.

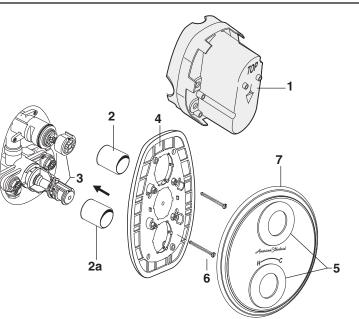

2 HANDLE INSTALLATION


- Install HANDLE ADAPTER (1) onto HANDLE BASE (2) and tighten with SCREW (3).
- Align HANDLE (4) and push onto HANDLE ADAPTER (1).
- Tighten SET SCREW (5) in handle with HEX WRENCH (6) SUPPLIED.
- Install HANDLE ADAPTER (7) onto KNOB MOUNT (8).
- Push VOLUME CONTROL KNOB (9) onto HANDLE ADAPTER (7). Use HEX WRENCH (6) supplied and tighten SET SCREW (10) to secure VOLUME CONTROL KNOB (9).

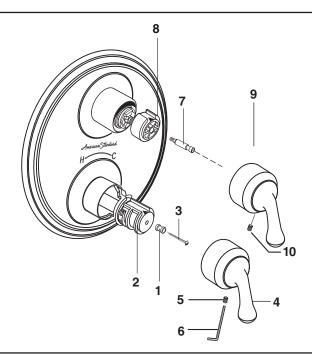

3 TRANSPOSED SUPPLY PIPING OR BACK TO BACK INSTALLATION

Should the hot and cold water supply pipes have been transposed making adjustment impossible, proceed as follows:

- Shut off water supply.
- Remove handle and rim. (Reverse steps 1 and 2)
- Remove check stops and re-install them transposed.
- Important Note: RED CHECK STOP is now on the right of the mixer body and the BLUE CHECK STOP is now on the left.
- Turn the water supply back on and perform the temperature adjustment in step 4.
- Assemble HANDLES and TRIM.

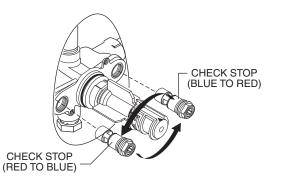

4 TEMPERATURE ADJUSTMENT

- Loosen SET SCREW (1) with HEX WRENCH (2). Pull off HANDLE (3). Remove HANDLE SCREW (4) and HANDLE ADAPTER (5). Pull off HANDLE BASE (5).
- Check that arrow marking B points to the 3 o'clock position. If not, push the RED CLAMP on the SECURING RING to the right, pull off KNOB MOUNT (6) and reinstall KNOB MOUNT (6) with arrow "B" 3 o'clock position. See Figure 1.

SET HOT LIMIT STOP

- The maximum mixed water temperature is set at 109°F at the factory. This setting can be changed if desired.
- Remove the TEMPERATURE LIMIT STOP (4) (H shaped Red Plastic part). Re-install it at the desired notch as indicated in the diagram to limit the maximum mixed water temperature to 104°F or 112°F.
- For 100°F adjustment, turn the water supply on. Turn KNOB MOUNT (6) until the spout temperature is 100°F. Check that arrow "A" on the KNOB MOUNT (6) still points 3 o'clock position after adjusting the thermostat to 100°F. If not, pull out the RED LOCKING DEVICE. Remove KNOB MOUNT (6) by pulling it towards you while standing directly in front of the valve.
- Reinstall the KNOB MOUNT (6) with arrow "A" 3 o'clock position.
- Re-install RED LOCKING DEVICE (5).
- See step 2 for HANDLE (3) installation.

