

Item	Parts Description	BTN 120	BTN 154	BTN 180	BTN 199
1	Blower, Exhaust	9005748205	9005748205	9005748205	9005748205
2	Burner Orifice	076243-32	9006070215	9006069215	076243-32
3	Burner Assembly w/o Igniter Bracket	9005297205	9005297205	9005297205	9005297205
4	Burner Assembly with Ignitor Bracket	9005161205	9005161205	9005161205	9005161205
5	Cleanout Gasket	9004099215	9004099215	9004099215	9004099215
6	Collar, Pipe Nipple	9005783205	9005783205	9005783205	9005783205
7	Ignition Control Board	9004569205	9004569205	9004569205	9004569205
8	Ignitor, Flame Sensor	9004606205	9004606205	9004606205	9004606205
9	Probe/ECO, Upper Thermostat	9006161215	9006161215	9006161215	9006161215
10	Probe/Lower Thermostat	9006160215	9006160215	9006160215	9006160215
11	Switch, Blower/Prover	9004575215	9004579215	9004573215	9004578215
12	Switch, Low Gas Pressure	9004475215	9004475215	9004475215	9004475215
13	The Eliminator	9006051205	9006050205	9006050205	9006050205
14	Thermostat, Digital	9004570205	9004570205	9004570205	9004570205
15	Tube, Inlet	9006044205	9006044205	9006044205	9006044205
16	Valve, Drain	9003907015	9003907015	9003907015	9003907015
17	Valve, Gas - Natural	9006918005	9006918005	9006918005	9006918005
18	Valve, T&P	9005903205	9005903205	9005903205	9005903205

Item	Parts Description	BTN 199C	BTN 200/A	BTN 250/A	BTN 275/A
1	Blower, Exhaust	9005748205	9005748205	9005748205	9005748205
2	Burner Orifice	076243-32	076243-32	076243-30	076243-32
3	Burner Assembly w/o Igniter Bracket	9005297205	9005297205	9005297205	9005297205
4	Burner Assembly with Ignitor Bracket	9005161205	9005161205	9005161205	9005161205
5	Cleanout Gasket	9004099215	9004099215	9004099215	9004099215
6	Collar, Pipe Nipple	9005783205	9005783205	9005783205	9005783205
7	Ignition Control Board	9004569205	9004569205	9004569205	9004569205
8	Ignitor, Flame Sensor	9004606205	9004606205	9004606205	9004606205
9	Probe/ECO, Upper Thermostat	9006161215	9006161215	9006161215	9006161215
10	Probe/Lower Thermostat	9006160215	9006160215	9006160215	9006160215
11	Switch, Blower/Prover	9007484015	9004578215	9004573215	9003815215
12	Switch, Low Gas Pressure	9004475215	9004475215	9004475215	9004475215
13	The Eliminator	9006050205	9006050205	9006050205	9006050205
14	Thermostat, Digital	9004570205	9004570205	9004570205	9004570205
15	Tube, Inlet	9006044205	9006044205	9006044205	9006044205
16	Valve, Drain	9003907015	9003907015	9003907015	9003907015
17	Valve, Gas - Natural	9006918005	9006918005	9006918005	9006918005
18	Valve, T&P	9005903205	9005903205	9005903205	9005903205

Item	Parts Description	BTN 310/A	BTN 366/A	BTN 400/A
1	Blower, Exhaust	9005748205	9005748205	9005748205
2	Burner Orifice	076243-32	076243-30	9006068215
3	Burner Assembly w/o Igniter Bracket	9005297205	9005297205	9005297205
4	Burner Assembly with Ignitor Bracket	9005161205	9005161205	9005161205
5	Cleanout Gasket	9004099215	9004099215	9004099215
6	Collar, Pipe Nipple	9005783205	9005783205	9005783205
7	Ignition Control Board	9004569205	9004569205	9004569205
8	Ignitor, Flame Sensor	9004606205	9004606205	9004606205
9	Probe/ECO, Upper Thermostat	9006161215	9006161215	9006161215
10	Probe/Lower Thermostat	9006160215	9006160215	9006160215
11	Switch, Blower/Prover	9004576215	9006184215	9004574215
12	Switch, Low Gas Pressure	9004475215	9004475215	9004475215
13	The Eliminator	9006050205	9006050205	9006050205
14	Thermostat, Digital	9004570205	9004570205	9004570205
15	Tube, Inlet	9006044205	9006044205	9006044205
16	Valve, Drain	9003907015	9003907015	9003907015
17	Valve, Gas - Natural	9004582205	9004582205	9004582205
18	Valve, T&P	9005903205	9005903205	9005903205

NOTES



A.O. Smith Water Heater Parts Fulfillment
125 Southeast Parkway
Franklin, TN 37068
1-800-433-2545
www.hotwater.com