



W2430,W2730,W3030,W3330,W3630,W2430GD,W3030GD,W3930 W3936
W2436,W2736,W3036,W3336,W3636,W2436GD,W3036GD
W2442,W2742,W3042,W3342,W3642,W2442GD,W3042GD
ASSEMBLY INSTRUCTIONS


STEP 1: Joint side panel with back panel
STEP 2: Joint top panel with side panel
STEP 3: Joint bottom panel with side panel
STEP 4: Attach frame on
STEP 5: Put on the adjustable shelves
STEP 6: Fix door onto the frame and adjust the cover-space

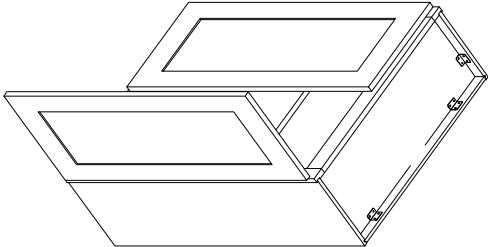


PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	TOP&BOTTOM PANEL	2
D	FACE FRAME	1
E	ADJUSTABLE SHELF	2 OR 3
F	CABINETS DOOR	2

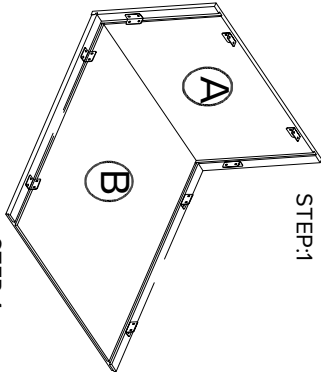


STEP:1

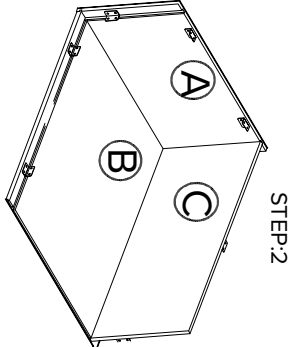


STEP:2

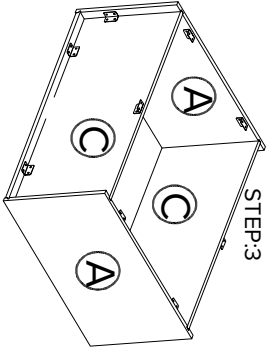


STEP:3

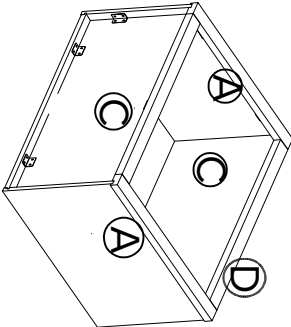

STEP:4

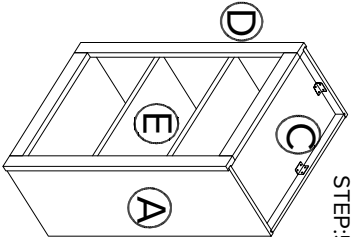

STEP:5

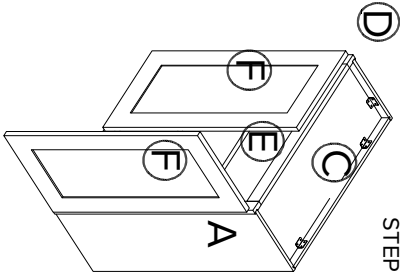

STEP:6

7	SOFTCLOSE HINGE	4	
6	3/4" ROUND HEAD SCREW	4	
5	BUMPER	4	
4	SHELF CLIP	8	
3	9/16"ROUND HEAD SCREW	56	
2	CLEAT	14	
1	1"FLAT HEAD SCREW FOR CARCASS	6	
NO.	Description	QTY	PICTURE

HARDWARE LIST