



WER2430, WER2436, WER2442
ASSEMBLY INSTRUCTIONS


- STEP 1: Joint right side panel with right side back panel
STEP 2: Fix the bottom/top panel on
STEP 3: Joint left side panel with left side back panel
STEP 4: turn the carcass stand,insert back panel through the groove
STEP 5: Attach face frame(long and short), then screw up
STEP 6: Put on the adjustable shelves
STEP 7: Hinge the door onto the face frame and adjust the cover-space

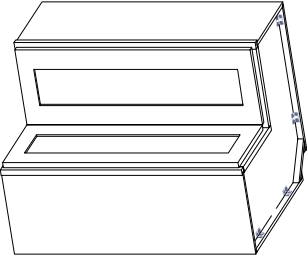


PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	SIDE BACK PANEL	2
C	TOP&BOTTOM PANEL	2
D	BACK PANEL	1
E	FACE FRAME	1
F	FACE FRAME	1
G	ADJUSTABLE SHELF 2 OR 3	
H	CABINET'S DOOR	2

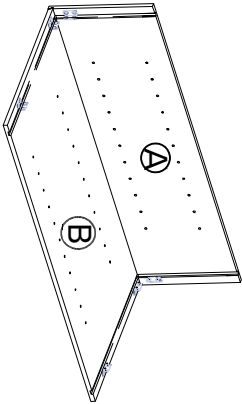


STEP:1

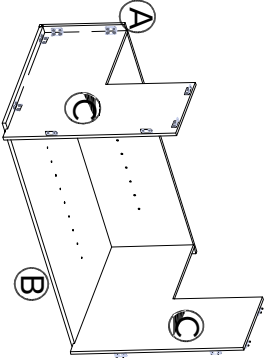


STEP:2

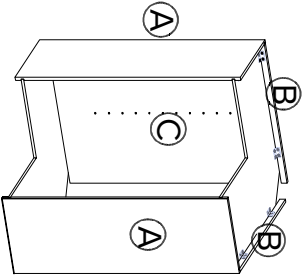


STEP:3

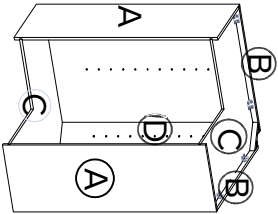


STEP:4

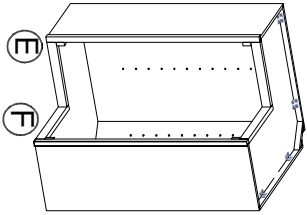


STEP:5

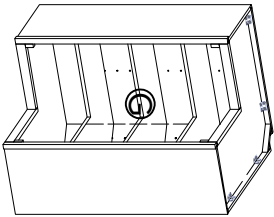

STEP:6

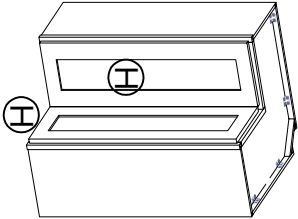

STEP:7

 9	135 DEGREE HINGE 3 OR 2		
8	3/4" ROUND HEAD SCREW 12 OR 4		
7	BUMPER		
6	165 DEGREE HINGE 3 OR 2		
5	SHELF CLIP		
4	9/16"ROUND HEAD SCREW 88		
3	DOWEL		
2	T*FLAT HEAD SCREW FOR CARCASS		
1	CLEAT		
NO.	Description	QTY	PICTURE
HARDWARE LIST			

HARDWARE LIST