

SERVICE MANUAL SUPPLEMENT-QUICK SERVICE GUIDE

ICON HD - EF Series Direct Spark

RROR CODE	DEFINITION	SERVICE ACTION	POSSIBLE PARTS NEEDED
4	Low flame sense signal	Check micro amps	1) Flame sensor 2) Control board
6	Flame sensed out of normal sequence	Verify if flame is present	1) Control board
23	Flame detected before ignition	Verify if flame is present Verify blower turns off	1) Control board
24	Flame detected after heating cycle	Verify if flame is present Verify blower turns off Is gas valve powered by 24V?	1) Control board
29	Pressure switch failed to close	Verify if pressure switch is open Check for condensation blockage Check for vent restriction	Pressure switch Control board
32	Temp sensor fault	Measure resistance of temp sensor	Temp sensor Control board
57	Spark rod shorted to ground	Check spark rod	1) Spark rod
58	Power supply problem (line voltage)	Verify proper supply voltage, grounding/polarity	1) None
59	Line voltage too low or high	Verify dedicated circuit is being used	1) Transformer
61	DC voltage unstable	Verify transformer output is 22-27 Vac	 Control board Transformer
62	Ignition failure	Verify ignition sequence Clean spark rod Clean flame sensor	1) Burner 2) Spark rod 3) Control board
63	Ignition failure	Verify ignition sequence Clean spark rod Clean flame sensor	1) Burner 2) Spark rod 3) Control board
64	Electronics failure	Verify all electrical connections Check wire connections/ground	1) Control board 2) Display 3) Spark rod
65	High water temperature (200F)	Measure resistance of temp sensor	1) Temp sensor
NOTE:	Check all wire connections		

Check all wire connections
Check vent restrictions
Check gas inlet pressure
Check for grounding connections

Technical Support **800-334-3393**