

Installation and Operation Instructions for

# **Brute**

Modulating Boiler Model BNTH Sizes 080–210 MBTU/h

**FOR YOUR SAFETY:** This product must be installed and serviced by a professional service technician, qualified in hot water boiler and heater installation and maintenance. Improper installation and/or operation could create carbon monoxide gas in flue gases which could cause serious injury, property damage, or death. Improper installation and/or operation will void the warranty.

#### **AWARNING**

If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

#### WHAT TO DO IF YOU SMELL GAS

- · Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a nearby phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

#### **AVERTISSEMENT**

Assurez-vous de bien suivres les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables dans le voisinage de cet appareil ou de tout autre appareil.

QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:

- · Ne pas tenter d'allumer d'appareils.
- Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones dansle bâtiment où vous vous trouvez.
- Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
- Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le sservice des incendies.

L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.



# **Table of Contents**

1.2   Model Identification (Nomenclature)	Sect	ion 1 -	Sect	ion 6	
1.2   Model Identification (Nomenclature)	Gen	eral Information	Water Connections		
1.3 Appliance Overview	1.1	Introduction1	6.1	System Piping: Hot Supply	
1.4       Warranty       3       6.3       Condensate Drain       16         1.5       Unpacking.       3       6.4       Freeze Protection       16         1.6       Dimensions       4       6.5       Suggested Piping Schematics       16-23         6.6       Recognized Chemicals       16         Section 2 -         Locating Appliance       5       Electrical and Wiring Diagrams         2.2       Locating Appliance for Correct Vent Distance from Outside Wall or Roof Termination       5       7.1       Installation Warnings       24         7.2       Main Power Connections       24         7.3       Pump Connections and Operation       24         7.4       Hydronic Heating Using External Mod       25         7.5       Optional Field Connections       25         8.1       Combustion Air       7.6       Lead Lag Connections       26         3.1       General Venting       6       7.7       System Wiring Diagram       28         3.2       Combustion Air       6       7.8       Ladder Diagram       30         3.3       Venting       8       A Locating Vent & Combustion Air Terminals       10       8         3.4       Locating Vent &	1.2	Model Identification (Nomenclature)1		Connections	15
1.4       Warranty       3       6.3       Condensate Drain       16         1.5       Unpacking       3       6.4       Freeze Protection       16         1.6       Dimensions       4       6.5       Suggested Piping Schematics       16-23         6.6       Recognized Chemicals       16-23         6.6       Recognized Chemicals       16-23         8       Section 7 -       Electrical and Wiring Diagrams         7.1       Installation Warnings       24         7.2       Locating Appliance for Correct Vent Distance from Outside Wall or Roof Termination       5       7.1       Installation Warnings       24         7.2       Locating Appliance for Correct Vent Distance from Outside Wall or Roof Termination       5       7.2       Main Power Connections       24         7.3       Pump Connections and Operation       24       7.3       Pump Connections and Operation       25         8 Section 3 -       7.6       Lead Lag Connections       25       25         9.1       4.4       Hydronic Heating Using External Mod       25         1.5       7.5       Optional Field Connections       25         1.6       7.7       System Wiring Diagram       28         1.6       7.7	1.3	Appliance Overview2	6.2	Cold Water Make-Up	15
1.5   Unpacking	1.4	• •	6.3	Condensate Drain	16
1.6   Dimensions	1.5		6.4	Freeze Protection	16
Section 2 -			6.5	Suggested Piping Schematics	16-23
Section 7 -			6.6	Recognized Chemicals	16
2.1   General Information					
2.2   Locating Appliance for Correct Vent Distance from Outside Wall or Roof Termination	Loca	ting the Appliance			
From Outside Wall or Roof Termination	2.1	General Information5	Elec		
7.3   Pump Connections and Operation   24	2.2		7.1	<u> </u>	
7.4   Hydronic Heating Using External Mod.   25		from Outside Wall or Roof Termination5	7.2		
Section 3 -         7.5 Optional Field Connections         25           Venting and Combustion Air         7.6 Lead Lag Connections         26           3.1 General Venting         6 7.7 System Wiring Diagram         28           3.2 Combustion Air         6 7.8 Ladder Diagram         30           3.3 Venting         8         8           3.4 Locating Vent & Combustion Air Terminals         10         3.5 Common Vent Test         13           Section 8-         The User Interface         8.1 About the User Interface         31           Section 4 -         8.2 Navigating the User Interface         31           Gas Supply and Piping         8.3 The Home Display         32           4.1 Gas Supply and Piping         13 8.4 Customizing your Home Display         32           8.5 Entering / Changing Control Settings         32           8.6 Quick Start Menu         35           8.7 24 VAC Transformer with Integral         36           9 Anti-Short-Cycle         36           8.9 Anti-Short-Cycle         36           8.10 Outdoor Air Temperature Sensor         36           8.11 Outdoor Reset         37           8.12 Warm Weather Shutdown         38           8.13 Domestic Hot Water         39           8.14 About Lead Lag Operation			7.3	Pump Connections and Operation	24
Venting and Combustion Air         7.6 Lead Lag Connections         26           3.1 General Venting         6         7.7 System Wiring Diagram         28           3.2 Combustion Air         6         7.8 Ladder Diagram         30           3.3 Venting         8         3.4 Locating Vent & Combustion Air Terminals         10         3.5 Common Vent Test         13           3.5 Common Vent Test         13         Section 8- The User Interface         31           Section 4 - Gas Supply and Piping         8.1 About the User Interface         31           4.1 Gas Supply and Piping         8.3 The Home Display         32           4.1 Gas Supply and Piping         8.4 Customizing your Home Display         32           8.5 Entering / Changing Control Settings         32           8.6 Quick Start Menu         35           Section 5 -         Configuration and Setup           Pump Requirements         8.7 24 VAC Transformer with Integral Circuit Breaker         36           5.1 Boiler Flow and Head Requirements         14         8.8 Hydronic Heating Demand         36           8.9 Anti-Short-Cycle         36           8.10 Outdoor Air Temperature Sensor         36           8.11 Outdoor Reset         37           8.12 Warm Weather Shutdown         38           <	• 4		7.4	Hydronic Heating Using External Mod	25
3.1 General Venting				·	
3.2 Combustion Air		•		_	
Section 8	3.1	General Venting6	7.7		
Section 8-   Section 8-   Section 8-   Section 8-   Section 4 -   Sas Supply and Piping   Section 5 -   Section 5 -   Section 5 -   Section 8-   Section 9-   S	3.2	Combustion Air6	7.8	Ladder Diagram	30
Section 8-   The User Interface   8.1   About the User Interface   8.1   About the User Interface   3.1   About Abo	3.3	Venting8			
The User Interface  8.1 About the User Interface	3.4	Locating Vent & Combustion Air Terminals 10	04	ion 0	
Section 4 -   8.2   Navigating the User Interface   31	3.5	Common Vent Test13			
Section 4 -       8.2       Navigating the User Interface       31         Gas Supply and Piping       8.3       The Home Display       32         4.1       Gas Supply and Piping       13       8.4       Customizing your Home Display       32         8.5       Entering / Changing Control Settings       32         8.6       Quick Start Menu       35         Configuration and Setup         8.7       24 VAC Transformer with Integral         5.1       Boiler Flow and       Circuit Breaker       36         Head Requirements       14       8.8       Hydronic Heating Demand       36         8.9       Anti-Short-Cycle       36         8.10       Outdoor Air Temperature Sensor       36         8.11       Outdoor Reset       37         8.12       Warm Weather Shutdown       38         8.13       Domestic Hot Water       39         8.14       About Lead Lag Operation       41					
Gas Supply and Piping         8.3         The Home Display         32           4.1         Gas Supply and Piping         13         8.4         Customizing your Home Display         32           8.5         Entering / Changing Control Settings         32           8.6         Quick Start Menu         35           Configuration and Setup           8.7         24 VAC Transformer with Integral           5.1         Boiler Flow and         Circuit Breaker         36           Head Requirements         14         8.8         Hydronic Heating Demand         36           8.9         Anti-Short-Cycle         36           8.10         Outdoor Air Temperature Sensor         36           8.11         Outdoor Reset         37           8.12         Warm Weather Shutdown         38           8.13         Domestic Hot Water         39           8.14         About Lead Lag Operation         41					
4.1 Gas Supply and Piping       13       8.4 Customizing your Home Display       32         8.5 Entering / Changing Control Settings       32         8.6 Quick Start Menu       35         Section 5 -       Configuration and Setup         8.7 24 VAC Transformer with Integral       Circuit Breaker       36         5.1 Boiler Flow and Head Requirements       14       8.8 Hydronic Heating Demand       36         8.9 Anti-Short-Cycle       36         8.10 Outdoor Air Temperature Sensor       36         8.11 Outdoor Reset       37         8.12 Warm Weather Shutdown       38         8.13 Domestic Hot Water       39         8.14 About Lead Lag Operation       41	Sect	ion 4 -	8.2		
8.5   Entering / Changing Control Settings   32   8.6   Quick Start Menu   35   35   35   35   36   Quick Start Menu   36   37   38   38   38   38   38   38   38	Gas	Supply and Piping	8.3		
8.6 Quick Start Menu       35         Section 5 -       Configuration and Setup         Pump Requirements       8.7 24 VAC Transformer with Integral         5.1 Boiler Flow and Head Requirements       14 8.8 Hydronic Heating Demand       36         8.9 Anti-Short-Cycle       36         8.10 Outdoor Air Temperature Sensor       36         8.11 Outdoor Reset       37         8.12 Warm Weather Shutdown       38         8.13 Domestic Hot Water       39         8.14 About Lead Lag Operation       41	4.1	Gas Supply and Piping13	8.4	Customizing your Home Display	32
Section 5 -         Configuration and Setup           Pump Requirements         8.7         24 VAC Transformer with Integral           5.1 Boiler Flow and Head Requirements         14         8.8 Hydronic Heating Demand         36           8.9 Anti-Short-Cycle         36           8.10 Outdoor Air Temperature Sensor         36           8.11 Outdoor Reset         37           8.12 Warm Weather Shutdown         38           8.13 Domestic Hot Water         39           8.14 About Lead Lag Operation         41			8.5	Entering / Changing Control Settings	32
Pump Requirements         8.7         24 VAC Transformer with Integral           5.1         Boiler Flow and Head Requirements         14         8.8         Hydronic Heating Demand         36           8.9         Anti-Short-Cycle         36           8.10         Outdoor Air Temperature Sensor         36           8.11         Outdoor Reset         37           8.12         Warm Weather Shutdown         38           8.13         Domestic Hot Water         39           8.14         About Lead Lag Operation         41			8.6		
5.1       Boiler Flow and Head Requirements       Circuit Breaker       36         Head Requirements       14       8.8       Hydronic Heating Demand       36         8.9       Anti-Short-Cycle       36         8.10       Outdoor Air Temperature Sensor       36         8.11       Outdoor Reset       37         8.12       Warm Weather Shutdown       38         8.13       Domestic Hot Water       39         8.14       About Lead Lag Operation       41	Sect	ion 5 -	C	Configuration and Setup	
Head Requirements       14       8.8       Hydronic Heating Demand       36         8.9       Anti-Short-Cycle       36         8.10       Outdoor Air Temperature Sensor       36         8.11       Outdoor Reset       37         8.12       Warm Weather Shutdown       38         8.13       Domestic Hot Water       39         8.14       About Lead Lag Operation       41	Pum	p Requirements	8.7	24 VAC Transformer with Integral	
8.9       Anti-Short-Cycle       36         8.10       Outdoor Air Temperature Sensor       36         8.11       Outdoor Reset       37         8.12       Warm Weather Shutdown       38         8.13       Domestic Hot Water       39         8.14       About Lead Lag Operation       41	5.1	Boiler Flow and			
8.10       Outdoor Air Temperature Sensor       36         8.11       Outdoor Reset       37         8.12       Warm Weather Shutdown       38         8.13       Domestic Hot Water       39         8.14       About Lead Lag Operation       41		Head Requirements14			
8.11       Outdoor Reset					
8.12 Warm Weather Shutdown					
8.13 Domestic Hot Water					
8.14 About Lead Lag Operation41					

Section First S	on 9 - Start-up and Adjustment Instructions					
9.1	Filling the Boiler System46					
9.2	First Operation46					
9.3	Restarting the Brute Unit47					
9.4	Shutting Down the Brute Unit 47					
Sectio						
	enance					
10.1	System Maintenance					
10.2	Appliance Maintenance and Component					
40.0	Description					
10.3	Gas Conversion					
Section						
-	ting Details and Troubleshooting					
11.1	Normal Startup and Initialization					
11.2	Sequence of Operation					
11.3	Modulation Control					
11.4	Pump Control					
11.5	Anti-Short-Cycle					
11.6 11.7	Temperature Sensors					
11.7	Diagnostics					
11.0	Elloi Codes					
•	cement Parts					
13.1	General Information54					
13.2	Parts List54-60					
Apper	ndices -					
Appendix A - Software Control Functions						
Append	ix B - Error Messages66					



# Section 1 -GENERAL INFORMATION

# **A**WARNING

Brute units must be installed in accordance with the procedures detailed in this manual, or the Bradford White warranty will be voided. The installation must conform to the requirements of the local jurisdiction having authority, and, in the United States, to the latest edition of the National Fuel Gas Code, ANSI Z223.1/NFPA54. In Canada, the installation must conform to the latest edition of CSA B149.1 Natural Gas and Propane Gas Installation Code, and/or local codes. Where required by the authority having jurisdiction, the installation of Brute boilers must conform to the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ ASME CSD-1. Any modifications to the boiler, its gas controls, or wiring may void the warranty. If field conditions require modifications, consult the factory representative before initiating such modifications.

#### 1.1 Introduction

This manual provides information necessary for the installation, operation, and maintenance of Bradford White Brute appliances. Read it carefully before starting the installation.

All application and installation procedures should be reviewed completely before proceeding with the installation. Consult the Bradford White factory, or local factory representative, with any problems or questions regarding this equipment. Experience has shown that most operating problems are caused by improper installation.

The Brute is protected against over pressurization. A pressure relief valve is included with each unit. Some may require that the PRV be installed prior to filling the system.

# **A** DANGER

The inlet gas pressure to the appliance must not exceed 13" W.C. (3.2kPa).

All installations must be made in accordance with

1) American National Standard Z223.1/NFPA54-Latest

Edition "National Fuel Gas Code" or

2) CSA B149.1 "Natural Gas and Propane Installation Code" or In Canada reference the B149.1 latest edition, and with the requirement of the local utility or other authorities having jurisdiction. Such applicable requirements take precedence over the general instructions contained herein.

All electrical wiring is to be done in accordance with the local codes, or in the absence of local codes, with:


- 1) The National Electrical Code ANSI/NFPA No. 70-latest Edition, or
- 2) CSA STD. C22.1 "Canadian Electrical Code Part 1". This appliance must be electrically grounded in accordance with these codes.

### 1.2 Model Identification (Nomenclature)

Consult the rating plate on the unit. The following information describes the model number structure.

- (1-3) Model Series Designation B N T = Brute
- (4) **Usage** H = Hvdronic
- (5-7) **Size**0 8 0 = 80,000 BTU/hr input
  1 0 5 = 105,000 BTU/hr input
  1 5 0 = 150,000 BTU/hr input
  2 1 0 = 210,000 BTU/hr input
- (8) Fuel
  N = Natural Gas
  P = LP Gas
- (9) **Options Code** X = Standard Unit
- (10) Pump Options
   N = Pump included (80-210 only)
   X = No pump (configuration available for all sizes)
   W = HLW w/ Pump
   L = HLW w/out Pump
- (11) **Revision** 3 = Third version

### **Model Nomenclature**

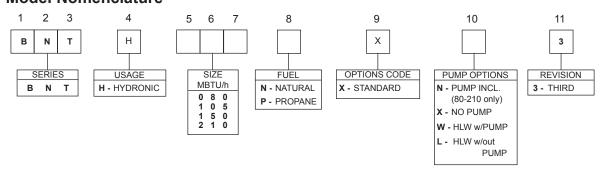

Page 2 BRADFORD WHITE

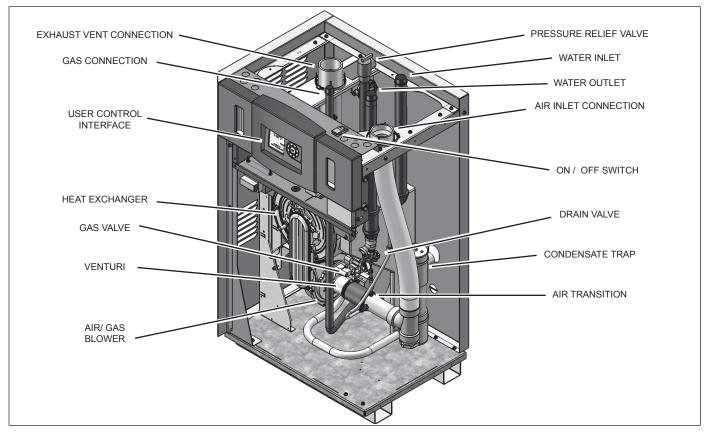


Figure 1. - Location of Components, Sizes 80–105

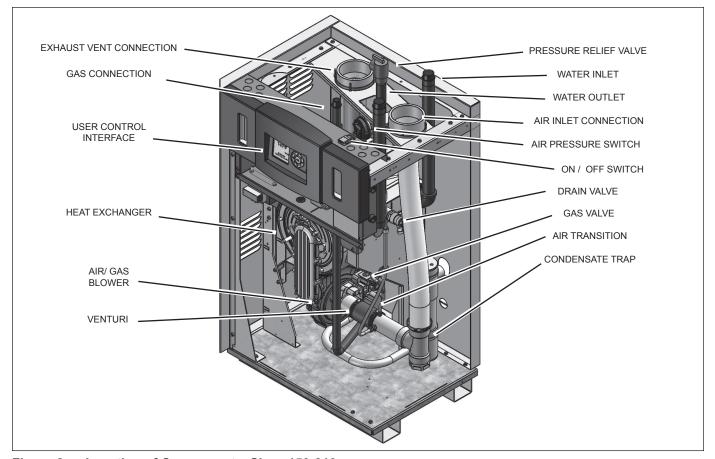


Figure 2. - Location of Components, Sizes 150-210

### 1.4 Warranty

Bradford White Brute appliances are covered by a limited warranty. The owner should complete the warranty registration at **www.Bradford White.com**.

All warranty claims must be made to an authorized Bradford White representative. Claims must include the serial number and model (this information can be found on the rating plate), installation date, and name of the installer. Shipping costs are not included in the warranty coverage.

Some accessory items may be shipped in separate packages. Verify receipt of all packages listed on the packing slip. Inspect everything for damage immediately upon delivery, and advise the carrier of any shortages or damage. Any such claims should be filed with the carrier. The carrier, not the shipper, is responsible for shortages and damage to the shipment whether visible or concealed.

# 1.5 Unpacking

The Brute Residential unit is shipped in a single crate with a boxed Installation Kit that contains these components. (See Figure 3)

- 1. Temperature / pressure gauge kit
- 2. Air intake terminal
- 3. Exhaust vent terminal (US only)
- 4. Jumper Terminal
- 5. CPVC exhaust pipe section (US only)
- 6. Alternate size vent/terminal screens
- 7. Outdoor/system sensor kit

#### Optional:

- 8. Circulator pump & wire harness (included with pump mounted units only)
- 1. Remove all packing and tie-down materials.
- 2. Check the contents of the box (the Installation Kit) to the items shown in Figure 3.

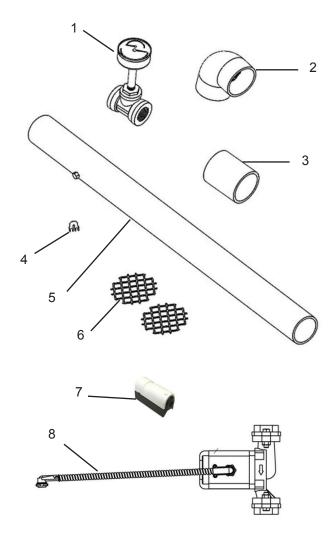


Figure 3. - Contents of Installation Kit

Page 4 BRADFORD WHITE

#### 1.6 Dimensions

	Α	В	С	D	E	F	G	J	K	M	N
Size	in cm	in cm	in cm	in cm	in cm	in cm	in cm	in cm	in cm	in cm	in cm
80	<b>13</b> ½ 34	<b>9</b> ½ 24	<b>18</b> 1⁄4 46	<b>7</b> ½ 19	<b>10</b> ¾ 28	<b>11</b> ¾ 30	<b>13</b> ¾ 35	<b>21</b> 53	<b>10</b> ¾ 27	<b>15</b> 1/ <sub>4</sub> 39	<b>13</b> 33
105	<b>13</b> ½ 34	8 21	<b>18</b> 1⁄4 46	<b>6</b> 16	<b>10</b> ¾ 28	<b>11</b> ¾ 30	<b>14</b> ½ 36	<b>21</b> 53	<b>8</b> <sup>3</sup> / <sub>4</sub> 22	<b>15</b> 1/ <sub>4</sub> 39	<b>13</b> 33
150	<b>13</b> 1⁄4 34	51/4 14	<b>18</b> 1⁄4 46	<b>3</b> ½ 8	<b>10</b> ¾ 28	<b>7</b> ½ 19	<b>14</b> ½ 36	<b>19</b> ½ 49	<b>7</b> ½ 19	<b>15</b> 1⁄ <sub>4</sub> 39	<b>13</b> 33
210	<b>20</b> ½ 52	51/4 14	<b>18</b> 1⁄4 46	<b>3</b> 1⁄4 8	<b>17</b> ¾ 45	<b>7</b> ½ 19	<b>14</b> ½ 36	<b>19</b> ½ 49	<b>11</b> ¾ 30	<b>15</b> ½ 39	<b>13</b> 33

Table 1. - Piping Location Dimensions, Sizes 80-210

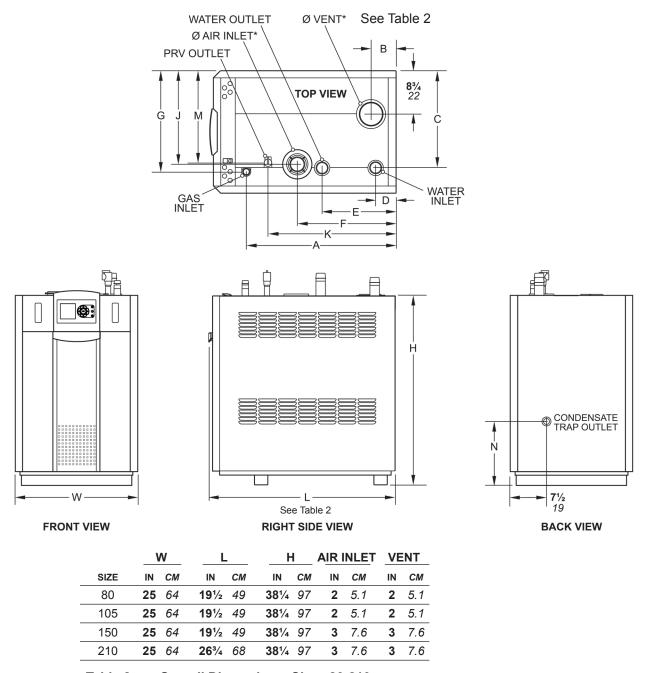


Table 2. - Overall Dimensions, Sizes 80-210

# Section 2 - LOCATING THE APPLIANCE

#### 2.1 General Information

#### The Brute unit is designed for indoor installations only.

The appliance should be located to provide clearances on all sides for maintenance and inspection. It should not be located in an area where leakage of any connections will result in damage to the area adjacent to the appliance or to lower floors of the structure.

When such a location is not available, it is recommended that a suitable drain pan, adequately drained, be installed under the appliance.

The appliance is design certified by CSA-International for installation on combustible flooring; in basements; in closets, utility rooms or alcoves. Brute Boilers must never be installed on carpeting. The location for the appliance should be chosen with regard to the vent pipe lengths and external plumbing and on a level surface. The unit shall be installed such that the gas ignition system components are protected from water (dripping, spraying, rain, etc.) during operation and service (circulator replacement, control replacement, etc.). When vented vertically, the Brute must be located as close as practical to the vertical section of the vent. If the vent terminal and/or combustion air terminal terminate through a wall, and there is potential for snow accumulation in the local area, both terminals should be installed at an appropriate level above grade or the maximum expected snow line.

The dimensions and requirements that are shown in Table 4 should be met when choosing the locations for the appliance.

# 2.2 Locating Appliance for Correct Vent Distance from Outside Wall or Roof Termination

The forced draft combustion air blower in the appliance has sufficient power to vent properly when the guidelines in Table 2 are followed.

**NOTE:** When located on the same wall, the Brute combustion air intake terminal must be installed a minimum of 12" below the exhaust terminal. Models 399-850 (commercial models) also require a minimum horizontal distance from intake to exhaust terminal of 36".

For concentric vent terminal kit (optional), follow installation instructions included with the kit.

APPLIANCE	SUGGESTED SERVICE	ACCESS CLEARANCE
SURFACE	INCHES	CM
Left Side	1	2.5
Right Side	12	31
Тор	24	61
Back	6	15
Closet, Front	6	15
Alcove, Front	24	61
Front	24	61
Vent	_	_

Certified by CSA for zero clearance to combustible materials on all sides.

Table 3. - Clearances

	INTAKE / EXHAUST						
	STANDARD	MAX	EQUIV.	OPTIONAL	MAX	EQUIV.	
SIZE	VENT	FT.	М	VENT	FT.	М	
80	2"	40	6.1	3"	100	30.5	
105	2"	40	6.1	3"	100	30.5	
150	3"	100	30.5	n/a	_	_	
210	3"	100	30.5	n/a	_	_	

Combustion Intake and Vent must be the same size.

Installations in the U.S. require exhaust vent pipe that is a combination of PVC & CPVC complying with ANSI/ASTM D1785 F441 or stainless steel complying with the stainless steel vent suppliers listed in Section 3. Installations in Canada require exhaust vent pipe that is certified to ULC S636.

Intake (air) pipe must be PVC or CPVC that complies with ANSI/ASTM D1785 F441, ABS that complies with ANSI/ASTM D1527 or galvanized material

The installer must comply fully with the manufacturer's installation instructions, including use of minimum exhaust length CPVC, to maintain ANSI Z21.13 safety certification.

Closet and alcove installations do not allow the use of PVC under any circumstances

To calculate max equivalent length, measure the linear feet of the pipe, and add 5 feet (1.5m) for each  $90^{\circ}$  elbow used. Add 2 1/2 feet (.76 meters) for each 45 elbow used.

Table 4. - Vent / Air Pipe Sizes

Page 6 BRADFORD WHITE

# Section 3 - VENTING AND COMBUSTION AIR

### 3.1 General Venting

This product requires a special venting system. Refer to venting supplier's instructions for complete parts list and method of installation. The manufacturers and product lines listed on the following tables have been tested and authorized to safely operate with Bradford White equipment. Suppliers of stainless steel and polypropylene venting that are not listed on these tables are not permitted for use with Bradford White vent category III/ IV products.

Do not mix venting suppliers and models in venting systems. Failure to comply could result in personal injury, property damage, or death.

Installations must comply with applicable national, state and local codes.

#### MFR MODEL NUMBER (ABBREVIATED)

	Selkirk	DuraVent	NovaFlex			
Example Components	Trade Name / Model					
	Safe-T Vent EZ Seal	FasNSeal	Z Flex			
90° Elbow	9x14	FSELB90xx	2SVEExx90			
Pipe	9x07	FSVLxxxx	2SVEPxxxx			
Doiler Adenter	5x01BOI	FSAAUx	2SVSAxx (OD)			
Boiler Adapter		FSAAUX	2SVSTTAxx (ID)			
Horizontal Termination (bird screen	9x92	FSBSx	2SVSTPXxx			
Vertical Termination (rain cap)	5X00CI	FSRCx	2SVSRCxx			
Inlet Air Termination	9xTERM	FSAIHXX*	2SVSTEXxx90			
Adapter, SS to CPVC		FSA-xxFNSM-xPVCF				
Adapter SS to PP		FSAAUx-xPP	2ZDCPVCx**			

Table 5. - Allowable Single Wall Stainless Steel Vent Suppliers and Part Numbers.

#### MFR MODEL NUMBER (ABBREVIATED)

	CentroTherm	DuraVent	Selkirk	NovaFlex		
Example Components	Trade Name / Model					
Example Components	InnoFlue	PolyPro	PolyFlue	Z-Dens		
Single Wall Pipe	ISVLxxxx	xPPS-x	83x002	ZDPx		
Elbow	ISELxxxx	xPPS-E90L	83x08	2ZDEx87		
PVC Adapter	ISAGLxxxx	xPPS-ADL (to 4") xPPS-xxPVCM-xPPF (>4")	83x040	2ZDCPVCx		
Horizontal Termination (bird screen)	IASPPxx (2" - 4") IASSSxx (5" - 12")	xPPS-BG (2" - 6")	83x050	2ZDESx		
Vertical Termination	IASPPxx (2" - 4") IASSSxx (5" - 12")	xPPS-VKL (<5") xPPS-VTML (5"-8")	83x050	2ZDESx		
Air Inlet				2ZDESx		

#### Table 6. - Allowable Polypropylene Vent Manufacturers / Trade Names

NOTE: 1. "x", "xx", and "xxxx" refer to variations in nominal size. See manufacturer's catalog for a particular application.

#### 3.2 Combustion Air

Brute boilers and water heaters must have provisions for combustion and ventilation air in accordance with the applicable requirements for Combustion Air Supply and Ventilation in the National Fuel Gas Code, ANSI Z223 1; or in Canada, the Natural Gas and Propane Installation Code, CSA B149.1. All applicable provisions of local building codes must also be adhered to.

A Brute unit can take combustion air from the space in which it is installed, or the combustion air can be ducted directly to the unit. Ventilation air must be provided in either case.

### **Combustion Air From Room**

In the United States, the most common requirements specify that the space shall communicate with the outdoors in accordance with method 1 or 2, which follow. Where ducts are used, they shall be of the same cross-sectional area as the free area of the openings to which they connect.

Method 1: Two permanent openings, one commencing within 12" (300mm) of the top and one commencing within 12" (300mm) of the bottom, of the enclosure shall be provided. The openings shall communicate directly, or by ducts, with the outdoors or spaces that freely communicate with the outdoors. When directly communicating with the outdoors, or when communicating to the outdoors through vertical ducts, each opening shall have a minimum free area of 1 square inch per 4000 Btu/hr (550 square mm/kW) of total input rating of all equipment in the enclosure. When communicating to the outdoors through horizontal ducts, each opening shall have a minimum free area of not less than 1 square inch per 2000 Btu/hr (1100 square mm/kW) of total input rating of all equipment in the enclosure.

**Method 2**: One permanent opening, commencing within 12" (300mm) of the top of the enclosure, shall be permitted. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces that directly communicate with the outdoors and shall have a minimum free area of 1 square inch per 3000 Btu/hr (734 square mm/kW) of the total input rating of all equipment located in the enclosure. This opening must not be less than the sum of the areas of all vent connectors in the confined space.

Other methods of introducing combustion and ventilation air are acceptable, providing they conform to the requirements in the applicable codes listed above.

In Canada, consult local building and safety codes or, in absence of such requirements, follow CAN/CSA B149.

#### **Ducted Combustion Air**

The combustion air can be taken through the wall, or through the roof. When taken from the wall, it must be taken from out-of-doors by means of the Bradford White horizontal wall terminal, shown in Table 7. See Table 4 to select the appropriate diameter air pipe. When taken from the roof, a field-supplied rain cap or an elbow arrangement must be used to prevent entry of rain water. (See Figure 10.)

Use ABS, PVC, CPVC or galvanized pipe for the combustion air intake. (See Table 8) The pipe should be sized per Table 2. Route the intake to the boiler as directly as possible. Seal all joints. Provide adequate hangers. The unit must not support the weight of the combustion air intake pipe. Maximum linear pipe length allowed is shown in Table 4. Subtract 5 allowable linear ft. (1.5m) for every elbow used.

The connection for the intake air pipe is at the top of the unit. In addition to air needed for combustion, air shall also be supplied for ventilation, including air required for comfort and proper working conditions for personnel. Refer to the applicable codes.

		2" PVC			3" PVC	
Size	Standard	Concentric CA006000	Flush Mount CA010100	Standard CA005900	Concentric 239-44069-01	Flush Mount CA010101
80	incl.	opt.	opt.	opt.	opt.	opt.
105	incl.	opt.	opt.	opt.	opt.	opt.l
150	n/a	n/a	n/a	incl.	opt.	opt.
199/210	n/a	n/a	n/a	incl.	opt.	opt.

Concentric vent terminal = 10 ft. pipe length

Table 7. - PVC Horizontal Intake and Exhaust Vent Terminal Kits

	INSTALLATION STANDARDS		
MATERIAL	UNITED STATES	CANADA	
ABS	ANSI/ASTM D1527		
PVC, sch 40	ANSI/ASTM D1785 or D2665	Air pipe material must be chosen	
CPVC, sch 40	ANSI/ASTM F441	based upon the intended application of the boiler.	
Single wall galv. steel	26 gauge		

Table 8. - Required Combustion Air Pipe Material

Page 8 Bradford White

### 3.3 Venting

# **M** WARNING

Failure to use polypropylene CPVC or stainless steel venting for the first 30" of vent material or for any part of the venting that is installed inside a closet may lead to property damage, personal injury or death. The proper length of this material is supplied with boiler. Boilers in the U.S. may use pipe included with the boiler.

Failure to use the appropriate vent material, installation techniques, glues/sealants could lead to vent failure causing property damage, personal injury or death.

Use of cellular core PVC (ASTM F891), cellular core CPVC, or Radel® (polyphenolsulfone) in non-metallic venting systems is prohibited and that covering non-metallic vent pipe and fittings with thermal insulation is prohibited.

All venting must be installed according to this manual and any other applicable local codes, including but not limited to, ANSI Z223.1/NFPA 54, CSA B149.1, CSAB149.2 and ULC-S636. Failure to follow this manual and applicable codes may lead to property damage, severe injury, or death.

The flue temperature of the Brute changes dramatically with changes in operating water temperature. Therefore, it is necessary to assess the application of the boiler to determine the required certified vent class. If the Brute is installed in an application where the ambient temperature is elevated, and/or installed in a closet/alcove, polypropylene, CPVC or stainless steel material is required. If the system temperatures are unknown at the time of installation, Class IIB or higher venting material is recommended.

The Brute is a Category IV appliance and may be installed with PVC and CPVC that complies with ANSI/ASTM D1785 F441, polypropylene that complies with ULC-S636 Class IIb, or a stainless steel venting system that complies with the vent suppliers and part numbers in Section 3. (See Table 5.)

The unit's vent can terminate through the roof, or through an outside wall.

When using PVC/CPVC for vent material, venting must be connected to the CPVC section included with Brute sizes 80-210. The CPVC vent section included with the Brute may be broken by CPVC fittings if necessary, but never reduced

in total length. See Table 4 to select the appropriate vent pipe diameter. When using polypropylene, all vent material must be produced by the same manufacturer, and have a ULC-S636 rating.

All installations should be done following the vent supplier's recommended installation techniques. If manufacturer's instructions are not available for the material used, follow the Bradford White recommendations.

The vent pipe must pitch upward, toward the vent terminal, not less than 1/4" per foot, so that condensate will run back to the Brute to drain. Route vent pipe to the heater as directly as possible. Seal all joints and provide adequate hangers as required in the venting system manufacturer's Installation Instructions. Horizontal portions of the venting system must be supported to prevent sagging and may not have any low sections that could trap condensate. The unit must not support the weight of the vent pipe. Please

see Table 4 for proper diameter vs. length allowed.

#### **IMPORTANT NOTE ABOUT COMMON VENTING:**

A single vent that is shared by multiple Brute units MUST be engineered by a competent venting specialist, and involves the selection of draft inducing equipment, hardware and controls to properly balance flue gas pressures. Do not common vent Brute units unless the vent system meets this requirement. Brute units are never permitted to share a vent with Category I appliances.

#### **Venting Requirements Unique to Canada**

Brute boilers and water heaters are Vent Category IV appliances. Per the requirements of CAN/CSA-B149.1, only BH vent systems can be connected to these units and such vent systems, either ULC S636 certified stainless steel or other ULC S636 certified BH vent (eg. plastics) must be installed per the vent manufacturer's certified installation instructions.

As a result, two items listed in the Unpacking section (Figure 8) are **not included** with Brute units for Canada (underlined):

- A <u>exhaust vent terminal</u> (not included)
- B. air intake terminal
- C. temperature/pressure gauge kit
- D. circulator pump/wire harness (units with pump)

	INSTALLATION STANDARDS		
MATERIAL	UNITED STATES	CANADA	
Stainless Steel	UL 1738	Venting must be ULC-S636 certified for use as	
PVC, sch 40	ANSI/ASTM D1785	venting material. The venting material class must be	
CPVC, sch 40	ANSI/ASTM F441	chosen based upon the maximum flue gas temperature	
Polypropylene	ULC-S636	and the intended application of the boiler.	

Table 9. - Required Exhaust Vent Material

- E. <u>CPVC exhaust pipe section (80-500)</u> (not incl.)
- F. outdoor/system sensor kit
- G. flow switch kit (399-850 MBH, Commerical Only)
- H. alternate size vent/terminal screens
- J. exhaust vent adapter CPVC/ST ST (750-850 MBH)

It is the responsibility of the appropriately licensed technician installing this Brute unit to use ULC S636 certified vent material consistent with the requirements as described in the Venting and Combustion Air section.

Class I venting systems are suitable for gas-fired appliances producing flue gas temperature of more than 135°C, but not more than 245°C.

Class II venting systems are suitable for gas-fired appliances producing flue gas temperatures of 135°C or less.

Class II venting systems are further classified into four temperature ratings as follows:

- A Up to and including 65°C
- B Up to and including 90°C
- C Up to and including 110°C, and
- D Up to and including 135°C

IMPORTANT! It is also the responsibility of the installer to ensure that a flue gas sampling port is installed in the vent system. This flue gas sampling port must be installed near the flue connection of the Brute unit: within 2 feet of the flue connection. There is no flue gas sampling port internal to the Brute, so one must be installed in the vent system external to the Brute unit. A flue gas sampling port available as a component of the ULC S636 certified vent system is preferred. However, if one is not available with the certified vent system, Bradford White suggests using a tee with the branch connection sized to allow for insertion of a flue gas analyzer probe. The branch connection must be resealable with a cap or other by other means to ensure the vent system remains sealed. (See Figure 5.)

Consideration must be given to the placement and orientation of the flue gas sampling port to ensure that condensate is free to flow back into the Brute unit and not collect anywhere in the vent system - including in the flue gas sampling port.

An exhaust vent terminal must be installed. If an exhaust vent terminal is not available with the certified vent system, Bradford White suggests the use of a coupler fitting from the certified vent system into which the vent terminal screen, included with the Brute and shown in the Unpacking section, be installed. Be sure to install and terminate both vent and combustion air pipes per the Venting and Combustion Air section of the Brute instructions.

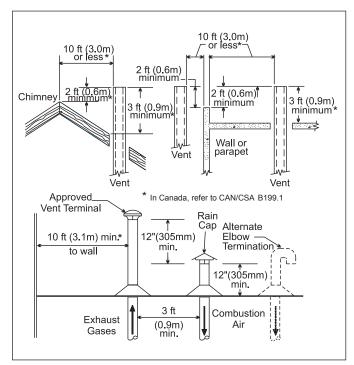


Figure 4. - Combustion Air and Vent Through Roof

# 3.4 Locating Vent and Combustion Air Terminals

#### **Side Wall Vent Terminal**

The appropriate side wall vent terminal must be used. The terminal must be located in accordance with ANSI Z223.1/ NFPA 54 and applicable local codes. In Canada, the installation must be in accordance with CSA B149.1 or .2 and local applicable codes. Consider the points listed on the following page when installing the terminal.

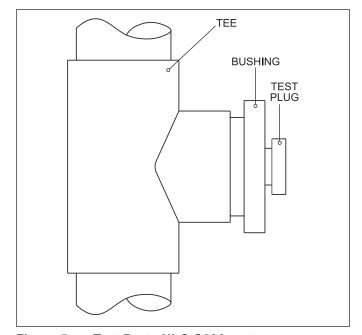


Figure 5. - Test Port - ULC-S636 system

Page 10 Bradford White

# 3.4 Locating Vent and Combustion Air Terminals (continued)

- 1. Figure 6 shows the requirements for mechanical vent terminal clearances for the U.S. and Canada.
- Vent terminals for condensing appliances or appliances with condensing vents are **not** permitted to terminate above a public walkway, or over an area where condensate or vapor could create a nuisance or hazard.
- 3. Locate the vent terminal so that vent gases cannot be drawn into air conditioning system inlets.
- Locate the vent terminal so that vent gases cannot enter the building through doors, windows, gravity inlets or other openings. Whenever possible, avoid locations under windows or near doors.
- 5. Locate the vent terminal so that it cannot be blocked by snow. The installer may determine that a vent terminal must be higher than the minimum shown in codes, depending upon local conditions.
- Locate the terminal so the vent exhaust does not settle on building surfaces or other nearby objects. Vent products may damage surfaces or objects.
- 7. If the boiler or water heater uses ducted combustion air from an intake terminal located on the same wall, see Figure 6 through Figure 7 for proper spacing and orientation.

If the vent termination is located in an area exposed to high winds, an optional PVC tee (the same diameter as the vent pipe) may be used. The tee'd vent termination offers greater protection from wind related operating issues.

#### **Side Wall Combustion Air Terminal**

The Bradford White side wall combustion air terminal, or concentric terminal must be used when the heater takes air from a side wall. (See Table 7.) Contact Bradford White for AL29-4C termination fittings. Consider the following when installing the terminal. (See Figure 6 through Figure 7.)

- 1. Do not locate the air inlet terminal near a source of corrosive chemical fumes (e.g., cleaning fluid, chlorine compounds, etc.)
- Locate the terminal so that it will not be subject to damage by accident or vandalism. It must be at least 7 feet (2.1m) above a public walkway.
- 3. Locate the combustion air terminal so that it cannot be blocked by snow. The National Fuel Gas Code requires that it be at least 12 inches (30cm) above grade, but the installer may determine it should be higher, depending upon local conditions.
- 4. If the Brute is side-wall vented to the same wall, locate the vent terminal at least 1 foot (0.3m) above the combustion air terminal.
- 5. For concentric vent, follow instructions included with vent kit.

- 6. Multiple vent kits should be installed such that the horizontal distance between the outlet group and the inlet group is 36" (90cm). (See Figure 8.)
- 7. The vent outlet for models 80-285 must be no lower than the center of the air inlet, and must be at least 12" (30cm) away from the air inlet. Vent outlets for models 399-850 MBH must be at least 12" above the top of the air inlet, and must be at least 36" (90cm) horizontally from the air inlet. (See Figure 7.)

#### **Vertical Vent Terminal**

When the unit is vented through the roof, the vent must extend at least 3 feet (0.9m) above the point at which it penetrates the roof. It must extend at least 2 feet (0.6m) higher than any portion of a building within a horizontal distance of 10 feet (3.0m), and high enough above the roof line to prevent blockage from snow. The vent terminal included with the Brute can be used in both vertical and horizontal applications. When the combustion air is taken from the roof, the combustion air must terminate at least 12" (30cm) below the vent terminal. (See Figure 4.)

#### **Vertical Combustion Air Terminal**

When combustion air is taken from the roof, a field-supplied rain cap or an elbow arrangement must be used to prevent entry of rain water. (See Figure 4.) The opening on the end of the terminal must be at least 12" (30cm) above the point at which it penetrates the roof, and high enough above the roof line to prevent blockage from snow. When the vent terminates on the roof, the combustion air must terminate at least 12" (30cm) below the vent terminal.

# Installations in the Commonwealth of Massachusetts

In Massachusetts the following items are required if the side-wall exhaust vent termination is less than seven (7) feet above finished grade in the area of the venting, including but not limited to decks and porches. From Massachusetts Rules and regulations 248 CMR 5.08 (begininning on 2nd page following):

#### 1. Installation of Carbon Monoxide Detectors

At the time of installation of the side wall vented gas fueled appliance, the installing plumber or gas-fitter shall observe that a hard-wired carbon monoxide detector with an alarm battery back-up is installed on the floor level where the gas appliance is to be installed. In addition, the installing plumber or gasfitter shall observe that a battery operated or hard-wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side-wall horizontally vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professionals for installation of hard-wired carbon monoxide detectors.

		U.S. Installations (see note 1)	Canadian Installations (see note 2)
A=	Clearance above grade, veranda, porch, deck, or balcony	12 inches (30 cm) See note 6	12 inches (30 cm) See note 6
B=	Clearance to window or door that may be opened	Direct vent only: 12 inches (30cm); Other than Direct vent: 4 ft (1.2m) below or to side of opening; 1 ft (30cm) above opening	36 inches (91 cm) NT 80 only - 12 inches (30 cm)
C=	Clearance to permanently closed window	See note 4	See note 5
D=	Vertical clearance to ventilated soffit located above the terminal within a horizontal distance of 2 feet (61cm) from the center line of the terminal	See note 4	See note 5
E=	Clearance to unventilated soffit	See note 4	See note 5
F=	Clearance to outside corner	See note 4	See note 5
G=	Clearance to inside corner	See note 4	See note 5
H=	Clearance to each side of center line extended above meter/regulator assembly	See note 4	3 feet (91 cm) within a height 15 feet above the meter/regulator assembly
<b> =</b>	Clearance to service regulator vent outlet	See note 4	3 feet (91 cm)
J=	Clearance to nonmechanical air supply inlet to building or the combustion air inlet to any other appliance	Direct vent only: 12" (30cm) 80-285; 36" (91cm) 399-850. Other than Direct vent: 4 ft (1.2m) below or to side of opening; 1 ft (30cm) above opening	36 inches (91 cm) BNT 80 only - 12 inches (30 cm)
K=	Clearance to a mechanical air supply inlet	3 feet (91 cm) above if within 10 feet (3 m) horizontally	6 feet (1.83 m)
L=	Clearance above paved sidewalk or paved driveway located on public property	Vent termination not allowed in this location for category IV appliances.	7 ft (2.1 m) See note 5
M=	Clearance under veranda, porch, deck, or balcony	See note 4	12 inches (30 cm) (see note 3)

#### Notes:

- 1. In accordance with the current ANSI Z223.1 / NFPA 54 National Fuel Gas Code.
- 2. In accordance with the current CAN/CSA-B149.1 Installation Codes.
- 3. Permitted only if veranda, porch, deck, or balcony is fully open on a minimum of two sides beneath the floor.
- 4. For clearances not specified in ANSI Z223.1 / NFPA 54, clearance is in accordance with local installation codes and the requirements of the gas supplier.
- 5. For clearances not specified in CAN/CSA-B149, clearance is in accordance with local installation codes and the requirements of the gas supplier.
- 6. IMPORTANT: Terminal must be placed such that it remains a minimum 12" above expected snow line. Local codes may have more specific requirements, and must be consulted.

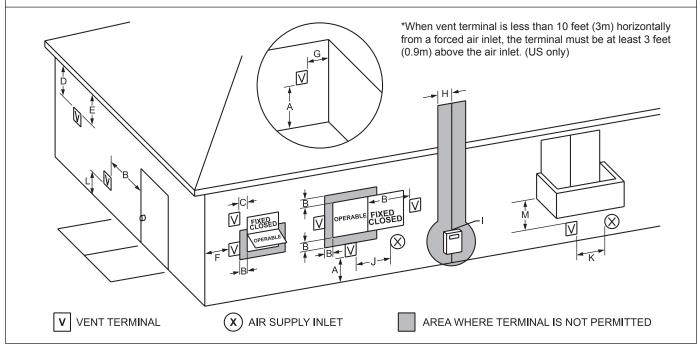


Figure 6. - Combustion Air and Vent Through Side Wall

Page 12 BRADFORD WHITE

# 3.4 Locating Vent and Combustion Air Terminals (continued)

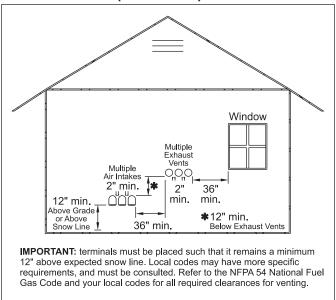


Figure 8. - Multiple Side-Wall Terminals, Air and Vent

a. In the event that the side-wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard-wired carbon monoxide with alarm and battery back-up may be installed on the next adjacent floor level.

b. In the event that the requirements of the subdivision cannot be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements, provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm be installed.

#### 2. Approved Carbon Monoxide Detectors

Each carbon monoxide detector shall comply with NFPA

720 and be ANSI/UL 2034 listed and IAS certified.

#### 3. Signage

A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print no less than one-half (1/2) inch in size: "GAS VENT DIRECTLY BELOW, KEEP CLEAR OF ALL OBSTRUCTIONS."

#### 4. Inspection

The state or local gas inspector of the side-wall horizontally vented gas fueled appliance shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2) (a) 1-4.

#### 3.5 Common Vent Test

**NOTE:** This section does not describe a method for common venting Brute units. It describes what must be done when a unit is removed from a common vent system. Brute units require special vent systems and fans for common vent. Contact the factory if you have questions about common venting Brute units.

When an existing boiler is removed from a common venting system, the common venting system is likely to be too large for proper venting of the appliances remaining connected to it.

At the time of removal of an existing boiler, the following

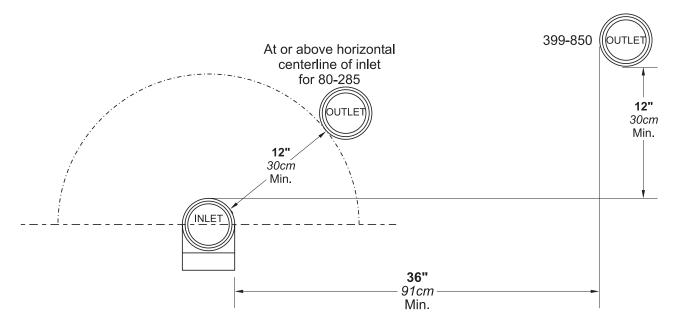


Figure 7. - Minimum Venting Distance

steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

- 1. Seal any unused openings in the common venting system.
- Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
- 3. Insofar as it is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
- 4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust the thermostat so the appliance will operate continuously.
- 5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
- 6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas burning appliance to their previous conditions of use.
- 7. Any improper operation of the common venting system should be corrected so that the installation conforms to the National Fuel Gas Code, ANSI Z223.1/NFPA 54 and/or CSA B149.1, Installation Codes. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables and guidelines in the National Fuel Gas Code, ANSI Z223.1 NFPA 54 and/or CSA B149.1, Installation Codes.

**NOTE**: The Brute appliance and all other gas appliances sharing the gas supply line must be firing at maximum capacity to properly measure the inlet supply pressure. The pressure can be measured at the supply pressure port on the gas valve. Low gas pressure could be an indication of an undersized gas meter, undersized gas supply lines and/or an obstructed gas supply line. Some Brute units are equipped with low and high pressure gas switches that are integrally vent limited. These types of devices do not require venting to atmosphere.

# Section 4 - GAS SUPPLY AND PIPING

All Installations must conform to the National Fuel Gas Code ANSI Z223.1/NFPA54, and/or local codes. In Canada, the installation must conform to the latest edition of CSA B149.1 Natural Gas and Propane Gas Installation Code, and/or local codes. Gas piping should be supported by suitable hangers or floor stands, not the appliance.

Review the following instructions before proceeding with the installation.

- 1. Verify that the appliance is fitted for the proper type of gas by checking the rating plate. Brute will function properly without the use of high altitude modification at elevations up to 10,000 feet (3050 m).
- The maximum inlet gas pressure must not exceed 13" W.C. (3.2kPa). The minimum inlet gas pressure is 4" W.C. (1.0kPa).
- 3. Refer to Table 10 thru Table 13 to size the piping.
- 4. Run gas supply line in accordance with all applicable codes.
- 5. Locate and install manual shutoff valves in accordance with state and local requirements.
- A sediment trap must be provided upstream of the gas controls.
- 7. All threaded joints should be coated with piping compound resistant to action of liquefied petroleum gas.
- 8. The appliance and its individual shutoff valve must be disconnected from the gas supply piping during any pressure testing of that system at test pressures in excess of 1/2 PSIG (3.45kPa).
- 9. The unit must be isolated from the gas supply system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSIG (3.45kPa).
- 10. The appliance and its gas connection must be leak tested before placing it in operation.
- 11. Purge all air from gas lines.

# A WARNING:

Open flame can cause gas to ignite and result in property damage, severe injury, or loss of life.

Page 14 BRADFORD WHITE

Brute NATURAL GAS REQUIRED			
	CU FT		
SIZE	/ HR.		
80	80		
105	105		
150	150		
210	210		

#### TO SIZE PIPING:

Measure linear distance from meter outlet to last boiler. Add total input of all boilers and divide by 1000 to obtain cu ft / hr required. Add total equivalent length of fittings used according to Table 6B. Align total length (pipe and fittings) on left side column of Table 6C with highest cubic feet of gas required.

Table 10.

#### Notes:

Consult and confirm with Applicable Fuel Gas Code before beginning work. Verify gas inlet pressure is between 4 and 13 in W.C. before starting boiler.

EQUIVALEN	EQUIVALENT LENGTHS OF STRAIGHT PIPE FOR TYPICAL SCH 40 FITTINGS					
	NOMINAL PIPE SIZE					
FITTING	1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
	LINEAR FEET					
90° ELBOW	3.6	4.4	5.2	6.6	7.4	8.5
TEE	4.2	5.3	6.6	8.7	9.9	12

Table 11.

SCH 40 ME	TAL PIPE	CAPACITY F	OR 0.60 SF	PECIFIC GRA	VITY NATU	RAL GAS
	NOMINA	L PIPE SIZE	@ 0.30" W	.C. PRESSU	JRE DROP	
LENGTH	1/2"	3/4"	1"	1-1/4"	1-1/2"	2"
FT		CUBI	C FEET OF	GAS PER I	HOUR	
20	92	190	350	730	1100	2100
40		130	245	500	760	1450
60		105	195	400	610	1150
80		90	170	350	530	990
100			150	305	460	870

Table 12.

SCH	SCHED 40 METAL PIPE CAPACITY FOR 1.50 SPECIFIC GRAVITY UNDILUTED PROPANE						
NOMINA	L PIPE SIZ	ZE @ 11" W.	C. INLET A	ND 0.5" W.C	. PRESSUF	RE DROP	
SIZE	1/2"	3/4"	1"	1-1/4"	1-1/2"	2"	
LENGTH	MAXI	MUM CAPA	CITY IN TH	HOUSANDS	OF BTU PE	R HOUR	
20	200	418	787	1616	2422	4664	
40	137	287	541	1111	1664	3205	
60	110	231	434	892	1337	2574	
80	94	197	372	763	1144	2203	
100	84	175	330	677	1014	1952	

#### NOTES:

- 1. Follow all local and national LP gas codes for line sizing and equipment requirements.
- 2. Verify that inlet gas pressure remains between 4 and 13 inches of water column before and during operation.

  Source: ANSI Z223.1-80 National Fuel Gas Code.

Table 13.

# Section 5 - PUMP REQUIREMENTS

# 5.1 Brute Boiler Flow and Head Requirements

		TEMPE	RATURE RISE	N °F	
	20°F	25°F	30°F	35°F	40°F
SIZE	FLOW H/L GPM FT				
80	7.6 14.	9 6.1 10.1	5.1 7.1	4.3 5.8	3.8 4.6
105	10 23.	1 8 17	6.7 12.4	5.7 9.6	5 7.6
150	14.3 28.	5 11.4 19	9.5 13.6	8.1 11.2	7.1 8.8
210	20 24.	1 16 16.7	13.4 11.6	11.3 9	9.9 6.9

	TEMPERATURE RISE IN °C									
	11	°C	14	°C	17	°C	19	°C	22	°C
SIZE	FLOW Ipm	H/L m	FLOW Ipm	H/L m	FLOW Ipm	H/L m	FLOW Ipm	H/L m	FLOW Ipm	H/L m
80	29	4.5	23	3.1	19	2.2	16	1.8	14	1.4
105	38	7.0	30	5.2	25	3.8	22	2.9	19	2.3
150	54	8.7	43	5.8	36	4.1	31	3.4	27	2.7
210	76	7.3	61	5.1	51	3.5	43	2.7	37	2.1

Table 14. Water Flow Requirements

# Section 6 WATER CONNECTIONS BNTH BOILER

# 6.1 BNTH System Piping Hot Supply Connections

**NOTE:** This appliance must be installed in a closed pressure system with a minimum of 12 psi (82.7kPa) static pressure at the boiler.

Hot water piping should be supported by suitable hangers or floor stands. Do not support piping with this appliance. Due to expansion and contraction of copper pipe, consideration should be given to the type of hangers used. Rigid hangers may transmit noise through the system resulting from the piping sliding in the hangers. It is recommended that padding be used when rigid hangers are installed. Maintain 1" (2.5cm) clearance to combustibles for hot water pipes.

Pipe the discharge of the relief valve (full size) to a drain or in a manner to prevent injury in the event of pressure relief. Install an air purger, an air vent, a diaphragm-type expansion tank, and a hydronic flow check in the system supply loop. Minimum fill pressure must be 12psig (82.7kPa). Install shutoff valves where required by code.

Brute's efficiency is higher with lower return water temperatures. Therefore, to get the most of low return temperature with multiple boilers, pipe as shown in Figure 9 through Figure 15.

Brute BNTH models can also be ordered with or without a pump included.

Brute with a pump MUST be piped in a primary-secondary fashion (using either piping or a hydraulic separator) such that the pump that is mounted on the boiler ONLY serves the

BNTH SIZE	PIPE SIZE, INCHES	
80	1	
105	1	
150	1	
210	1¼	

Table 15. - Water Connection Pipe Sizes

boiler.

When the pump is supplied by Bradford White, the Brute boiler must be located within 15 feet (4.6m) of the supply and return header (or the hydraulic separator). Pumps supplied by Bradford White are sized for a maximum of 30 feet (9.1m) of connection size piping and the headloss of the boiler only. (See Table 14.)

If longer pipe lengths are required, the pump should be sized for the boiler and for the piping it will serve, and should be supplied to the job separately. Even with pumps supplied by others, Bradford White strongly recommends primarysecondary piping.

### 6.2 BNTH Cold Water Make-Up

- Connect the cold water supply to the inlet connection of an automatic fill valve.
- 2. Install a suitable back flow preventer between the automatic fill valve and the cold water supply.
- 3. Install shut off valves where required.

The boiler piping system of a hot water heating boiler connected to heating coils located in air handling appliances where they may be exposed to refrigerated air circulation must be equipped with flow control valves or other automatic means to prevent gravity circulation of the boiler water during the cooling cycle.

A boiler installed above radiation level, or as required by the authority having jurisdiction, must be provided with a low water cutoff device either as a part of the boiler or at the time of boiler installation.

Page 16 Bradford White

#### 6.3 Condensate Drain

A condensate drain trap is built into the Brute unit.

Connect a 3/4" PVC pipe between the drain connection and a floor drain (or a condensate pump if a floor drain is not accessible).

The condensate drain must be installed so as to prevent accumulation of condensate. When a condensate pump is not used, the tubing must continuously slope downward toward the drain with no spiraling.

Consult local codes for the proper disposal method for the condensate.

# **A** Caution

Condensate is mildly acidic (pH = 5), and may harm some floor drains and/or pipes, particularly those that are metal. Ensure that the drain, drainpipe, and anything that will come in contact with the condensate can withstand the acidity, or neutralize the condensate before disposal. Damage caused by failure to install a neutralizer kit or to adequately treat condensate will not be the manufacturer's responsibility.

#### 6.4 Freeze Protection

Brute units are certified for indoor use only, and are not design-certified for placement outdoors.

Proper precautions for freeze protection are recommended for boiler installations in areas where the danger of freezing exists.

Power outage, interruption of gas supply, failure of system components, activation of safety devices, etc., may prevent a boiler from firing. Any time a boiler is subjected to freezing conditions, and the boiler is not able to fire, and/or the water is not able to circulate, there is a risk of freezing in the boiler or in the pipes in the system. When water freezes, it expands which may result in bursting of pipes, or damage to the boiler, which could result in leaking or flooding conditions.

Do not use automotive antifreeze. To help prevent freezing, Bradford White recommends the use of inhibited glycol concentrations between 20% and 35% glycol. Typically, this concentration will serve as burst protection for temperatures down to approximately -5°F (-20°C). If temperatures are expected to be lower than -5°F (-20°C), glycol concentrations up to 50% can be used. When concentrations greater than 35% are used, water flow rates must be increased to maintain a 20°F to 25°F temperature rise through the boiler.

NOTE: Bradford White supplied pumps are not all capable of maintaining the reduced temperature rise required with glycol concentrations greater than 35%. If glycol concentrations required are greater than 35% a field supplied pump should be used.



Different glycol products may provide varying degrees of protection. Glycol products must be maintained properly in a heating system, or they may become ineffective. Consult the glycol specifications, or the glycol manufacturer, for information about specific products, maintenance of solutions, and set up according to your particular conditions.

### 6.5 BNTH Suggested Piping Schematics

Figure 9 through Figure 15 shows suggested piping configurations for BNTH boilers. These diagrams are only meant as a guide. All components or piping required by local code must be installed.

# 6.6 Recognized Chemicals

The following manufacturers offer glycols, inhibitors, and anti foamants that are suitable for use in the Brute. Please refer to the manufacturers instructions for proper selection and application.

- 1. Sentinel Performance Solutions Group
- 2. Hercules Chemical Company
- 3. Dow Chemical Company

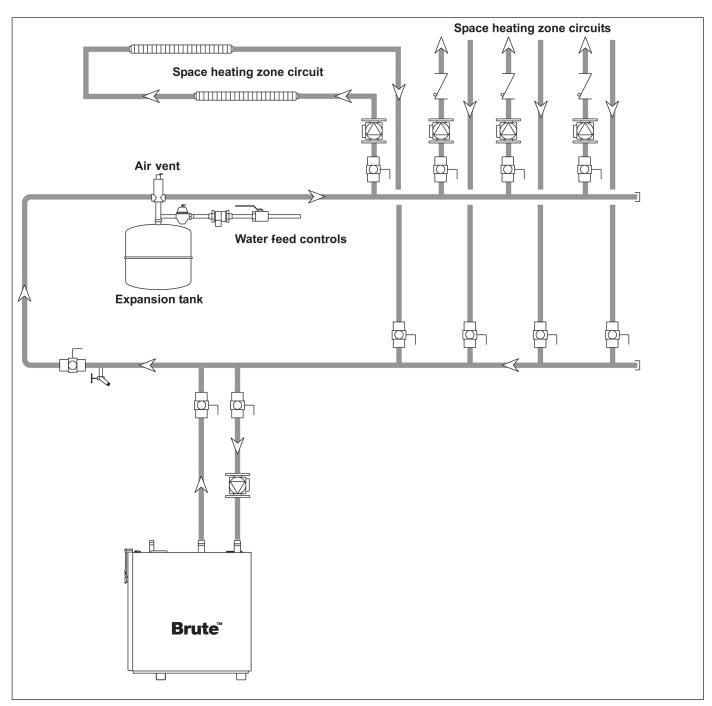


Figure 9. - Hydronic Piping — Single Boiler, Zoning with Circulators

Page 18 BRADFORD WHITE

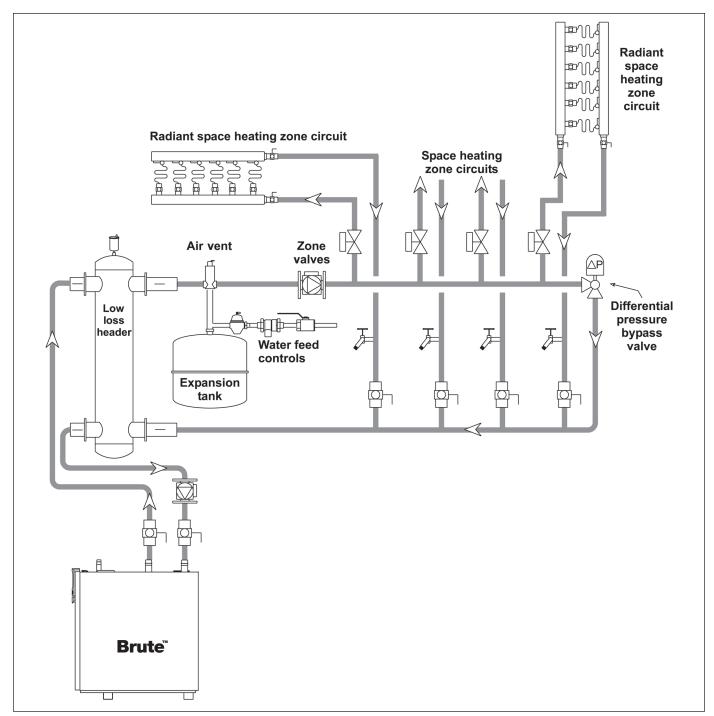


Figure 10. - Hydronic Piping — Single Boiler, Low Temp Radiant Space Heating Using Low Loss Header and Zone Valves

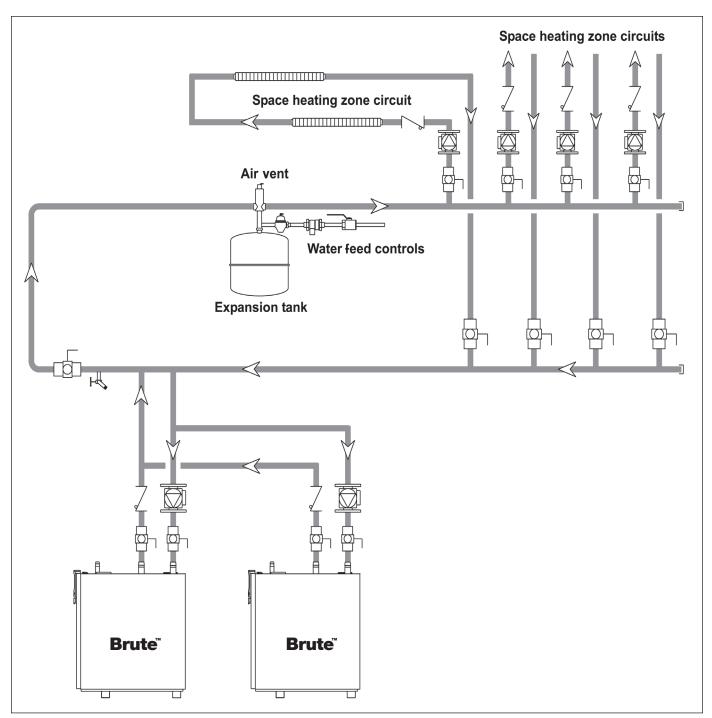


Figure 11. - Hydronic Piping — Multiple Boilers, Zoning with Circulators

Page 20 BRADFORD WHITE

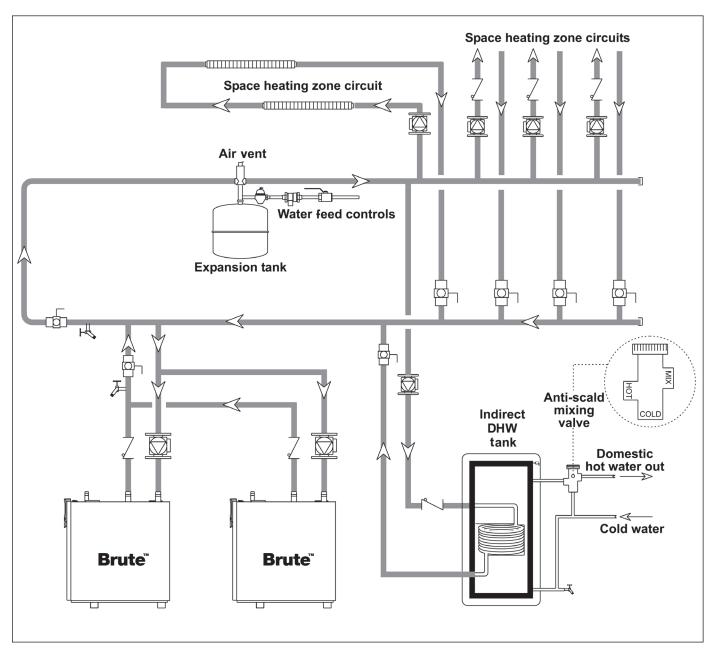


Figure 12. - Hydronic Piping — Multiple Boilers with Indirect DHW Tank Piped from System Loop

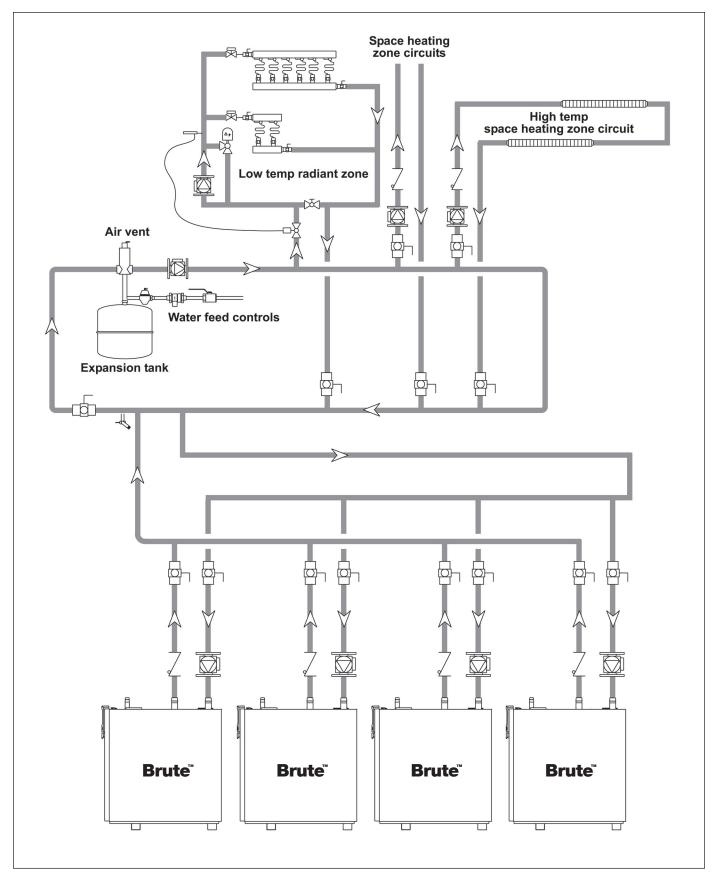


Figure 13. - Hydronic Piping — Multiple Boilers, Reverse Return, Multi-Temp Zones, Zoning with Circulators

Page 22 BRADFORD WHITE

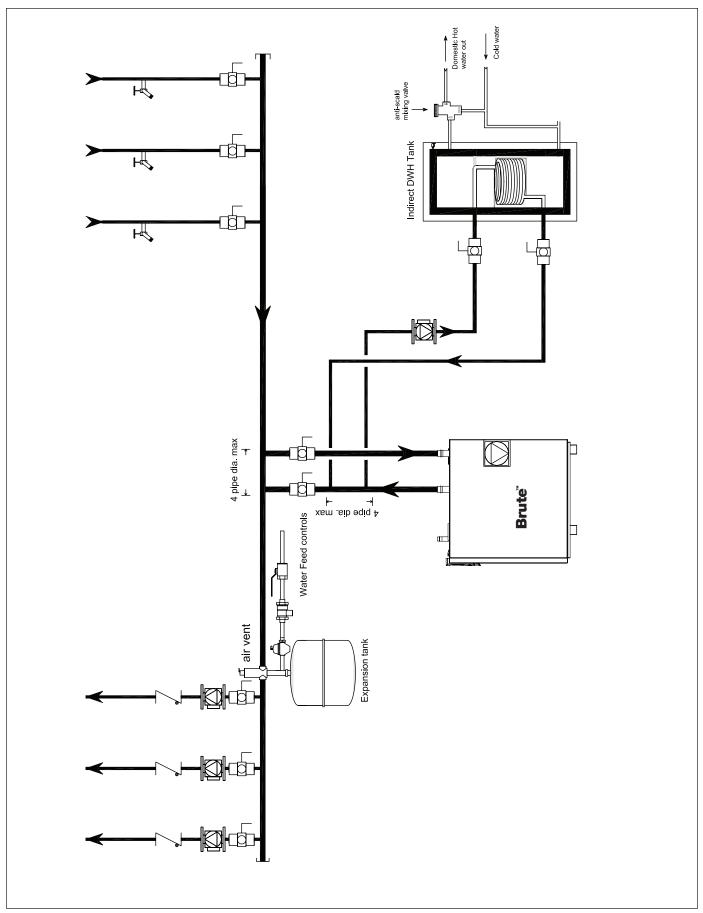


Figure 14. - Hydronic Piping — Heating Zones with Indirect DHW Tank Piped with Zone Pumps The indirect DHW tank is piped directly off of the boiler. The boiler pump must shut down during DHW operation.

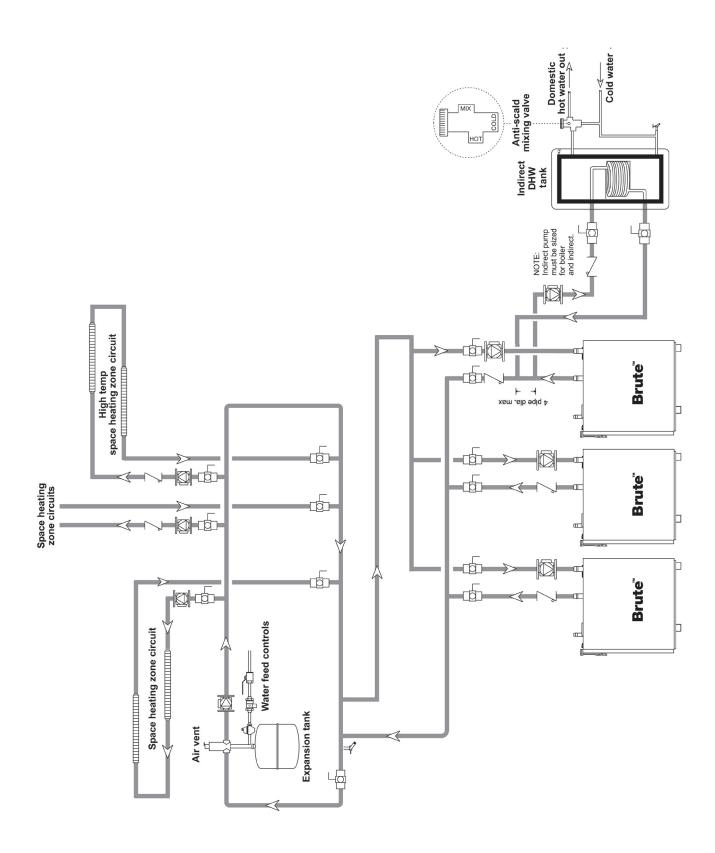


Figure 15. - Hydronic Piping, Multiple Boilers with Indirect DHW Off of One Boiler

The boiler pump must shut down during DHW operation.

Page 24 BRADFORD WHITE

# Section 7 - ELECTRICAL AND WIRING DIAGRAMS

# 7.1 Installation Warnings

# **A**WARNING

The appliance must be electrically grounded in accordance with the requirements of the authority having jurisdiction or, in the absence of such requirements, with the latest edition of the National Electrical Code, ANSI/NFPA 70, in the U.S. and with the latest edition of CSA C22.1 Canadian Electrical Code, Part 1, in Canada. Do not rely on the gas or water piping to ground the metal parts of the boiler. Plastic pipe or dielectric unions may isolate the boiler electrically. Service and maintenance personnel, who work on or around the boiler, may be standing on wet floors and could be electrocuted by an ungrounded boiler. Electrocution can result in severe injury or death.

Single pole switches, including those of safety controls and protective devices, must not be wired in a grounded line.

All electrical connections are made on the terminal blocks that are located inside the control panel. Wiring connections are shown in Figure 16.

All internal electrical components have been prewired. No attempt should be made to connect electrical wires to any other location except the terminal blocks.

# **A** Caution

The supply voltage to the Brute unit must not be disconnected, except for service or isolation, or unless otherwise instructed by procedures outlined in this manual. To signal a call for heat, use the 24V field interlock, as shown in the wiring diagram.

DO NOT MAKE AND BREAK THE LINE VOLTAGE TO THE Brute UNIT TO SIGNAL A CALL FOR HEAT. A call for heat/ end call for heat MUST be connected to the field interlock terminals. Some Brute components are designed to have constant voltage during normal operation. If the Brute's supply voltage is toggled as a call for heat signal, premature failure of these components may result.

The Brute unit does not recognize 4mA as a signal to shut off. If the call for heat is not connected between the field interlock terminals, the Brute will remain in low fire when it sees 4mA as a modulating signal.

Connect a 15A fused, 120-volt supply to the main power switch. (The hot leg is connected directly to the switch.) The neutral leg is connected directly to the white wire. The ground wire can be connected to the grounding lug on the control panel. (See Figure 16.)

# 7.3 Pump Connections and Operation

The controller in the Brute energizes the pump contacts when it receives a call for heat. Once the call for heat is satisfied, the pump will remain on for the defined pump overrun time.

The Boiler Pump terminals (TB5 - max 7.4 FLA) are fed by 120V (violet wire) internally from the main power feed. The System and DHW contacts are dry contacts. Appropriate voltage must be supplied to the System and DHW pumps for proper operation.

The System pump connections are located on terminal block 5 (TB5) in the control panel. (See Figure 34.) The System pump contacts are rated for 120Vac, 7.4 Amps. To use the contacts, power must be supplied on one terminal with the other terminal wired to the pump or a relay controlling the pump.

The DHW pump connections are located on terminal block 5 (TB5) in the control panel and are rated for 120Vac, 7.4 Amps. To use the contacts, power must be supplied on one terminal, and the other terminal wired to the pump or a relay controlling the pump.

Additional 120VAC circuits may be required for the pumps.

Once the unit has been installed and set up, the Quick Start menu provides a simple way to change the most common settings used in a typical installation. (If your installation is more complex, refer to Section 8C.) To reach the Quick Start menu, press the "I" button ("Info/Install"), then press the Quick Start menu item.

		BOILER		PUMP CONNECTIONS RATINGS
SIZES	VOLTS	PHASE	AMPS	(Boiler, System Pump and DHW Pump Connections)
80–210 No Pump	120	Single	2*	115V – Maximum 1HP or 7.4A max
80-210 With Pump	120	Single	Less than 6*	115V – Maximum 1HP or 7.4A max

<sup>\*</sup>Minimum 15A circuit required

Table 16. - BNTH Electrical Data

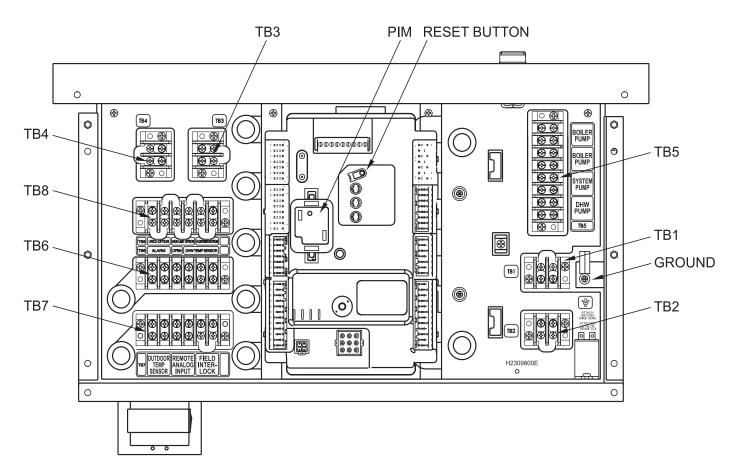


Figure 16. - Control Panel Layout

# 7.4 Hydronic Heating Using External Modulation Control

#### **About External Control -**

When the Brute is used for hydronic heating with external modulation control, a call for heat must be supplied to the "T-T or Interlock" terminal. Once the call is supplied the control starts the Boiler and System pumps and begins the ignition process. Once in Run, the Brute monitors the flame signal, call for heat, safeties, and water temperatures. The boiler setpoint is used to limit the maximum water temperature leaving the boiler only. The modulation rate is controlled by a 4-20mA signal supplied by an external control. (This can also be 0-10Vdc using a converter - Bradford White part number CA006100.) When setting up a system using an external control, take care to set Anti-Short Cycle feature to prevent "hunting" and possible premature component failure.

# 7.5 Optional Field Connections

Terminal block 8 (TB8) in the control panel is used for the 'Safety Chain' and for connecting optional components such as low water cutoffs, flow switches, additional high limits, and other field-supplied devices that must be interlocked with the boiler. These are non-powered dry contacts only. All safeties or end switches must be wired in series by removing the supplied jumpers.

See Figure 16

Page 26 BRADFORD WHITE


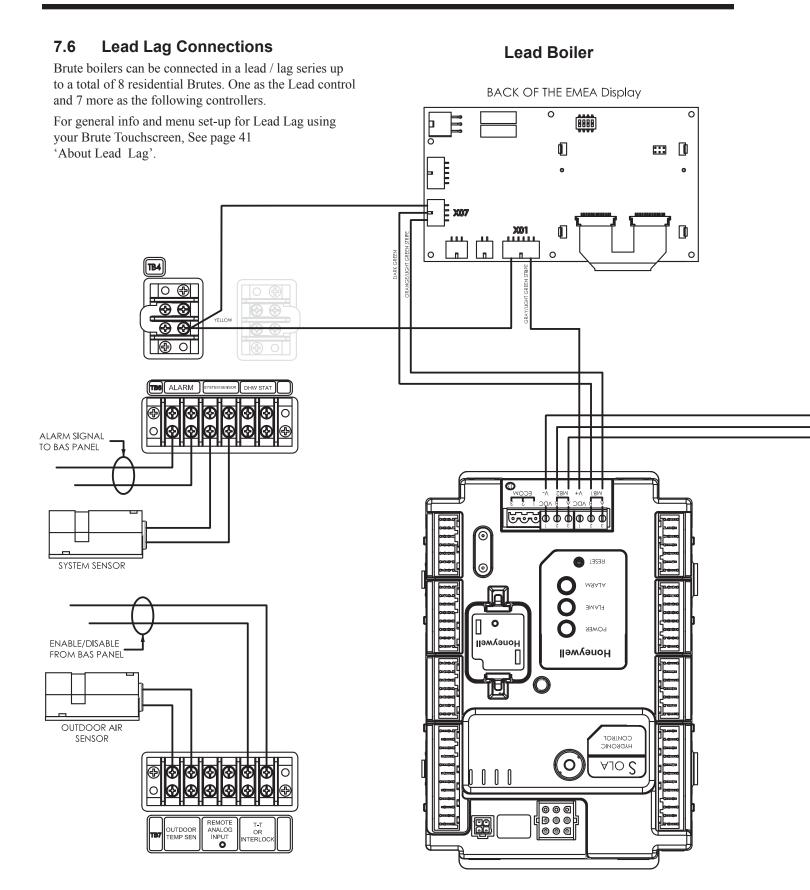


Figure 17. Wiring Diagram for Lead Lag Connections

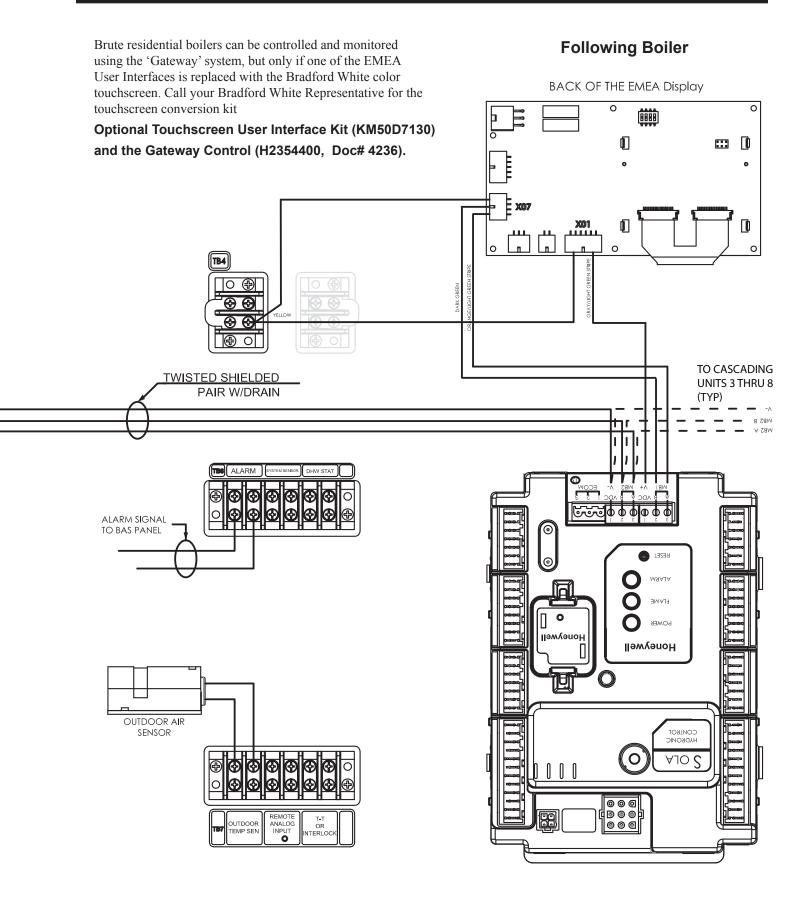

Page 28 BRADFORD WHITE

# 7.8 System Wiring Diagram


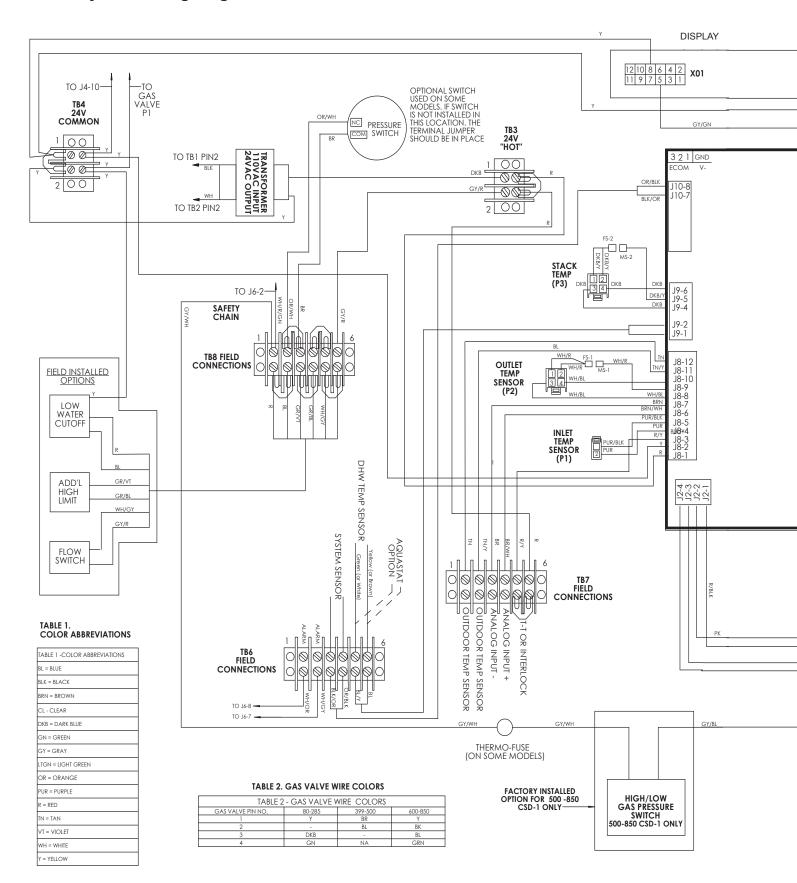


Figure 18. - Wiring Diagram, All Sizes

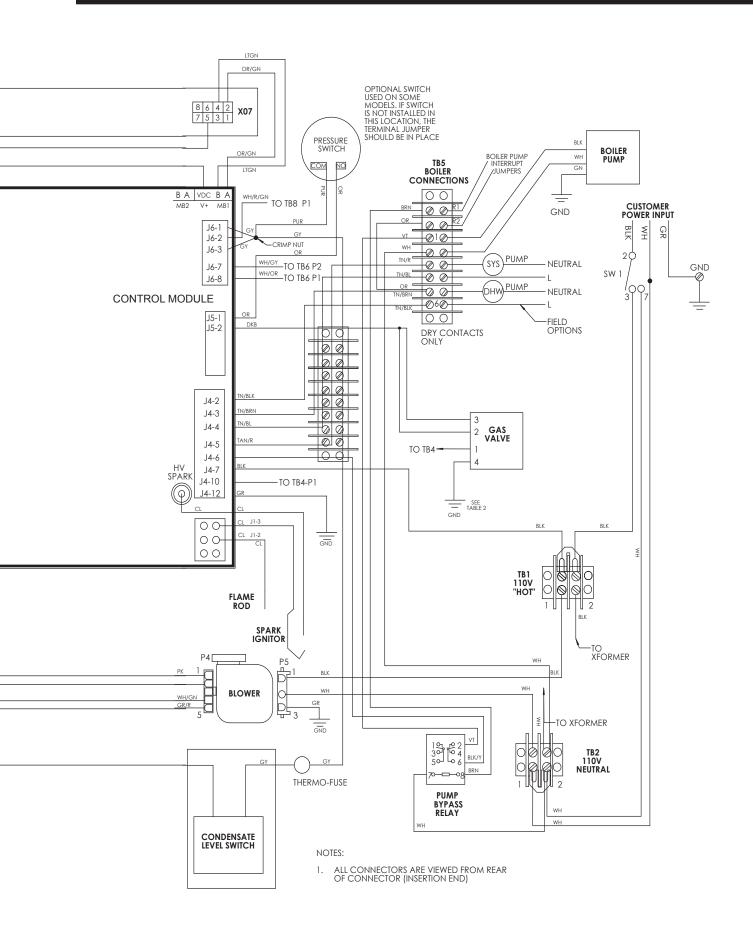

Page 30 BRADFORD WHITE

## 7.9 Ladder Diagram

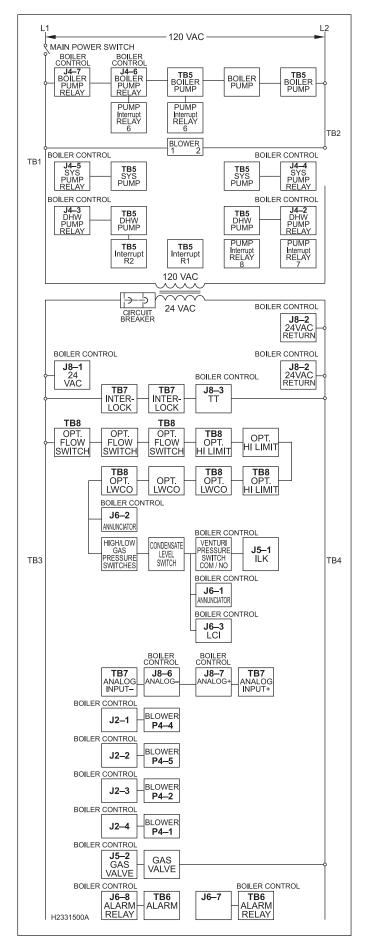


Figure 19. - Ladder Diagram

# Section 8 -THE USER INTERFACE

#### 8.1 About the User Interface

The User Interface of the Brute has two main parts:

- the 'Display' area and
- · the 'Buttons'

The User Interface displays operating and setup information sent from the Brutes electronic burner controller and allows the user to set all parameters of the electronic burner controller.

### 8.2 Navigating the User Interface

Navigating into the Display area menus is as easy as it looks. The Info/Install button will be the primary button that you will use to start, and the OK button is what you press to select and approve the parameters that you have set on the Display.

The arrow keys are for moving up and down, left and right within the menus. The Back button gets you back to the previous screen. And the Home button gets you back to the Home Display.

See Figure 27 for more details.

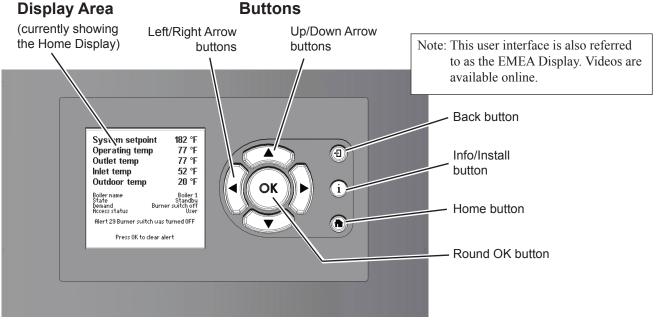


Figure 27. The User Interface (EMEA Display)

Display area	This area displays several different kinds of information, including current operating information, setup parameters, and messages from the SOLA controller.
Up/ Down Arrow buttons	Use these to go to the choice you want to select in the display area, then press the round OK button.
Left/ Right Arrow buttons	Use these to go to the choice you want to select in the display area, then press the round OK button.
Back button	Use this to go back to the previous display.
Info/ Install button	Press this button at any time to go to the sub-menus that allow you to set up and monitor the controller.
Home button	Press this button at any time to go back to the Home display. (See the section on "Home Display.")
Round OK button	Use the round OK button to confirm a value or action.  Note – Sometimes the system will present the Keyboard display screen, which also includes a separate "OK" area. This is not the same as the round OK button – the two have different functions.)

Table 17. - Button Functions on User Interface

Page 32 BRADFORD WHITE

# 8.3 The Home Display

When the boiler is operating normally, the controller will display the Home display. See Figure 20.

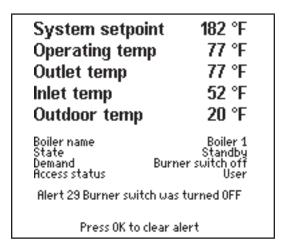


Figure 20. - Home Display

The Home Display has three sections:

- The upper section (customizable) displays the most important operating information for the unit. In the example shown here, the display is showing the system setpoint, the operating temperature, the outlet and inlet temperatures for the water entering and leaving the boiler, and the outdoor temperature.
- The central section shows some additional operating and setup information. In this case, this area lists the boiler name, boiler state, current demand, and the current password level (the "access status").
- The lower section shows any current lockouts, holds, or alerts.

# 8.4 Customizing your Home Display

To customize the upper section of your Home Display

- · Press "I" Info/Install button
- Scroll to highlight "Display Setup", press OK
- Highlight the line you would like to change, (example "Line 2 Operating Temp"), press OK
- Scroll to highlight the parameter that you do want displayed and then press OK. The new parameter is now displayed on the Home Display.

Repeat this step for the other parameters, if desired.

# 8.5 Entering/Changing Control Settings Info/Install Display

The Info/Install Display is where you will start every time.

All of your Controls, Diagnostics, Setups, and more, are accessed starting with the Info/Display screen.

• From the Home display shown in Figure 20, press the "I" button ("Info/ Install"). The display will change to show the six sub-menus available. See Figure 21.

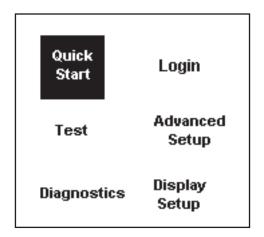


Figure 21. - Info/ Install Display

- To move from one choice to another, use the Left- and Right-Arrow buttons or the Up- and Down-Arrow buttons.
- Once you have highlighted the choice you want, press the round OK

Table 18 shows the functions listed under each of the submenus. For details, see Sections 8A and 8C.

### **Changing a Value**

The procedure for changing a control value used by the system is listed below. (In this example, we will use the screen for the CH Setpoint.)

- Use the Up- and Down-Arrow buttons to step down through the list until you have highlighted the correct line on the display.
- Press the round OK button to select that line. Figure 22 shows a typical screen for this type of setting.

Quick Start	This menu gives you an easy way to check or change the most common settings on the unit:  • CH setpoint  • DHW setpoint  • Outdoor reset  • Low water temperature  • Maximum outdoor temperature  • Minimum outdoor temperature  • Adjustable high limit  • Adjustable low limit  See Section 8B for more information.
Login	If you want to change a setup value or function, and the system requires a password, you can enter it here. See the section on "Login Display."
Test	These parameters let you turn the burner on and off, and control the fan and pump speeds. See the section on "Test Menu."
Advanced Setup	The sub-menus listed here allow you to set up most of the functions on the controller. In the section on "Advanced Setup" we will explain how to reach all of the setup functions. (For many of these functions, the system will require a password before it will allow you to make changes.)
Diagnostics	Use the Diagnostics to check the status of the sensors and the digital inputs and outputs. The system also records a history of lockouts and alarms. See the section on "Diagnostics."
Display Setup	You can use this option to adjust the contrast of the display or change the items which appear at the top of the Home display. See the section on Display Setup.

Table 18. - Functions on Info/ Install Menu

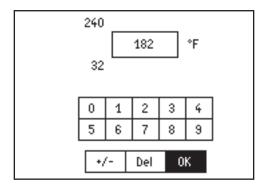


Figure 22. - Changing a Value

- The current setting for the setpoint appears in the box at the top of the screen. In this example, this is 182°F.
- The numbers near the left edge of the screen show the allowable range for this value. In this case, the setpoint can be set anywhere between 240°F and 32°F.
- Press the Up- and Down-Arrow buttons to scroll the setpoint until you see the correct value in the box.
- When the value is correct, press the round OK button.

You will notice that the system did not ask you for a password, so this is one of the values that can be changed by anyone.

# **Entering a Time**

The controller uses several different timing functions, and you can change some of these. (In this example, we will use the screen for the Anti Short-Cycle Time.

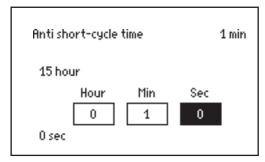


Figure 23. - Changing a Timing Function

- The current setting appears in the upper right-hand corner of the screen. In this example, this is 1 minute.
- The numbers near the left edge of the screen show the allowable range for this value. In this case, the time can be set anywhere between 0 seconds (function turned off) and 15 hours.

Page 34 BRADFORD WHITE

In this example we will change the time delay to 5 minutes.

- Press the Left- and Right-Arrow buttons to move to the box you want. In this case, we want to change the middle box - the box for Minutes.
- Use the Up- and Down-Arrow buttons to change the value in that box.
- You can change the numbers in the other boxes in the same way.
- When the new setting is correct, press the round OK button.

#### **Entering a Password or Name**

The system uses a different type of screen to enter a password or name. If you want to change a setup value or function, and the system requires a password, you can enter it using the Login screen.

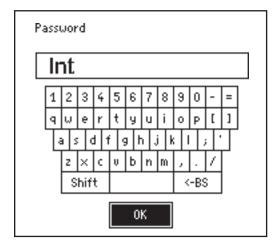


Figure 24. - Login Screen

There are two ways you can reach this screen:

- From the Info/ Install screen (Figure 21), select Login.
- If you try to change a function that requires a password, the unit will automatically bring you to the Password screen.

The controller for this unit uses three levels of password protection:

User Level Some of the settings can be changed or read by anyone, without a password. These non-critical adjustments and functions include setting the Central Heat and Domestic Hot Water setpoints, monitoring the input and output variables, reading parameters from the controller, and reading the error log.

Installer Level Settings that might affect the safe operation of the unit can only be changed by a trained technician who enters a password. These

include setup and parameter changes made when the system is installed, and some diagnostic and troubleshooting functions. The installer level password is "Int" (lower case "LNT").

OEM Level Some of the settings can only be changed at the Bradford White factory.

Once you enter a password, the password access remains valid until you exit to the normal no-password state. If you do not make any edits for 10 minutes, the password access will be cancelled.

The areas on the Login display are arranged a bit like a computer keyboard.

- To enter a letter or number, use the Up-, Down-, Left- and Right-Arrow buttons to highlight the character you want to use, then press the round OK button. You will see the character appear in the line at the top of the screen.
- Notice that, in the example shown here, all of the letters are lower-case (not capitals). If you want to use an uppercase letter, first move to the area for Shift and press the round OK button. Now, any letters that you enter will appear as capitals. To go back to lower-case letters, go back to the area for Shift and press the round OK button again.
- The blank area at the bottom of the screen is a space bar.
- The "BS" (BackSpace) area acts as a delete key. To delete a letter, move down and highlight the "BS" area. Now, each time you press the round OK button, the system will delete one character from the right end of the line.
- When the characters in the line at the top of the screen are correct, move to the OK space at the bottom of the screen, and press the round OK button. This will send the new "string" of characters to the controller.

# **Turning a Function On and Off**

Some of the values can be enabled or disabled. See the example below.



Figure 25. - Enable/ Disable Screen

• Use the Up- and Down-Arrows to highlight the line you want, then press the round OK button.

# Changing a Value Using a "Slider"

There is another type of control screen you may see. This type of screen uses a "slider" to set the value. This system is used on the LCD Contrast screen (available under Display Setup.) See Fig. 33.

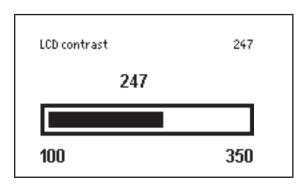


Figure 26. - Changing LCD Contrast

- Use the Left- and Right-Arrow buttons to move the bar and adjust the contrast.
- When the setting is correct, press the round OK button.

# 8.6 Quick Start

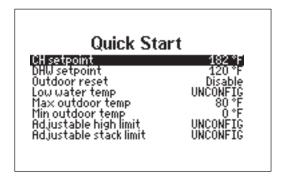


Figure 28. - Quick Start Menu

# Changing the CH (Central Heat) Setpoint -

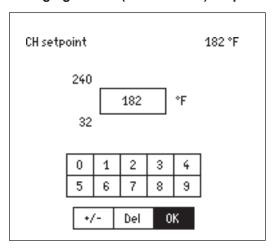


Figure 29. - Changing the CH Setpoint

- On the Quick Start menu, use the Up- and Down-Arrows to go to the line for CH Setpoint. Press the large OK button to select the line.
- Use the Up- and Down-Arrow buttons to select the value you want.
- Press the round OK button to enter the new value.

# Changing the DHW (Domestic Hot Water) Setpoint -

See the procedure described above for the CH setpoint.

Page 36 BRADFORD WHITE

#### **Outdoor Reset Functions -**

The next four lines in the display are used to set up the Outdoor Reset functions:

- Outdoor Reset Enable/Disable Note: This function can be Enabled/Disabled only by a factory trained technician.
- Low Water Temperature Use the Up- and Down-Buttons to select the function, use Up- and Down- to select the new value, then press the round OK button.
- Maximum Outdoor Temperature Use the Up- and Down-Buttons to select the function, use Up- and Down- to select the new value, then press the round OK button.
- Minimum Outdoor Temperature Use the Up- and Down-Buttons to select the function, use Up- and Down- to select the new value, then press the round OK button

For a complete explanation of the setup for Outdoor Reset, see Section 8C.5.

## Adjustable High Limit -

The absolute high limit setting for the water outlet temperature for this unit is set at the factory to 195°F (90.5°C). If you wish, you can also set a second or "adjustable" limit setting that is lower.

Use the Up- and Down-Buttons to select the function, use Up- and Down- to select the new value, then press the round OK button.

#### Adjustable Stack Limit -

The absolute high limit setting for the stack for this unit is set at the factory to 195°F (90.5°C). If necessary, you can set the unit to use a second or "adjustable" limit setting that is lower.

Use the Up- and Down-Buttons to select the function, use Up- and Down- to select the new value, then press the round OK button.

# **Configuration and Setup**

# 8.7 24 VAC Transformer with Integral Circuit Breaker

24Vac is supplied by a transformer mounted underneath the control panel. All 24Vac power is supplied through a circuit breaker that is part of the transformer. The transformer is then connected to terminal blocks 3 and 4 (TB3 and TB4). See Figure 31.

# 8.8 Hydronic Heating Demand

When using the Brute for hydronic heating, a call for heat must be supplied to the "T-T or Interlock" terminal. Once the call is supplied, the control starts the Boiler and System pumps, and begins the ignition process. The ignition process consists of a prepurge, trial for ignition, and run period. The prepurge period starts on a call for heat once the fan RPM reaches a preset level. The trial for ignition period follows once the start-up RPM of the fan has been reached. The trial for ignition period lasts four seconds, During this period the direct spark ignition system and gas valve are energized. At the end of the trial for ignition period, the flame signal is compared with the preset flame threshold value. If the flame signal is higher than the flame threshold, the Brute enters Run. If the flame signal is below the threshold, the Brute returns to prepurge and starts the ignition process over. When operating in Run, the Brute monitors the flame signal, call for heat input, safety switches, and water temperatures and modulates as needed between 100% and 20% of rate to satisfy the call

Connect the call for heat to terminal block 7 (TB7), See Figure 31, connections labeled "T-T or interlock" in the control panel.

The CH Setpoint can be set from the Quick Start menu.

How to get there: From the "Home" screen, press "I" to go to "Info/ Install." Choose "Quick Start," then go to "CH Setpoint."

# 8.9 Anti-Short-Cycle (ASC)

The anti short cycle function helps to prevent short-cycling when the call for heat switches on and off quickly.

To reach the anti-short-cycle function, select Info/ Advanced Setup/ System Config./ System Config.

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then "System Configuration," then "System Configuration" again.

# 8.10 Outdoor Air Temperature Sensor

The outdoor air temperature sensor is used with the Outdoor Reset and Warm Weather Shutdown functions.

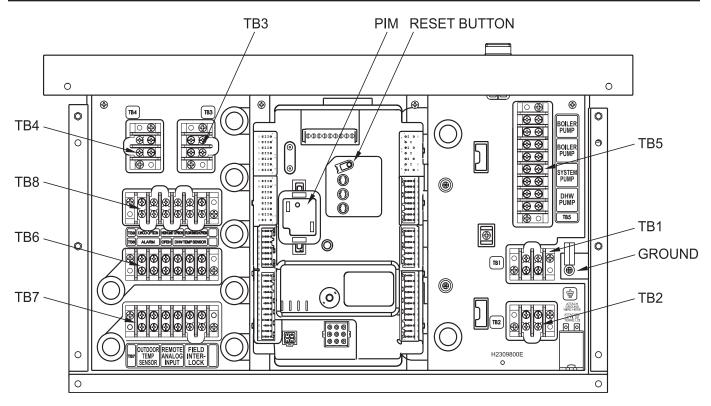


Figure 31. - Control Panel Layout

Connect the outdoor air temperature sensor to terminal block 7 (TB7), using the connections labeled Outdoor Temp Sensor.

# 8.11 Outdoor Reset

#### **About Outdoor Reset -**

The Outdoor Reset feature calculates a correction for the hydronic (Central Heat) setpoint depending on the outdoor temperature. This allows the system to compensate for changes in the outdoor temperature and run more efficiently. (If the unit will operate as part of a Lead Lag system, the Outdoor Reset function will adjust the Lead Lag setpoint. For details, see "Cascading Lead Lag Operation" - Section 8.14.)

The graph below shows how the system will behave at different outdoor temperatures:

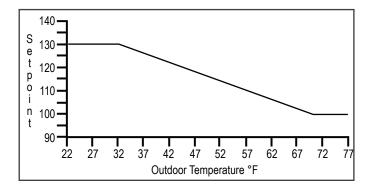


Figure 30. - Outdoor Reset Operation

In the graph shown above, the sloping line shows the setpoint which is actually used by the system. Without Outdoor Reset, this would be a constant 130°F (or whatever other value you choose), regardless of the outdoor temperature. The line in the graph would run straight across the display. However, with the Outdoor Reset feature turned on, the system will adjust for changes in the outdoor temperature. Let's take a detailed look at the way the setpoint is adjusted.

- For cold outdoor temperatures (below 32°F), the setpoint remains unchanged (130°F).
- As the temperature begins to rise above 32°F, the Outdoor Reset function causes the setpoint to be lowered. At these warmer temperatures, the heating load on the system is not as great, so the system does not have to reach as high a temperature to handle the load.
- As you can see from the display, at an outdoor temperature of about 70°F, the system stops adjusting the setpoint. Above 70°F, the setpoint is constant at 100°F (or another value that you choose).

When Outdoor Reset is enabled, and the outdoor temperature falls between the maximum and minimum outdoor temperatures (70° and 32° in the example above), the setpoint will be adjusted down by about .8° for every 1° increase in the outdoor temperature (See Figure 30). For example, if the outdoor temperature rises by 10°, the Outdoor Reset function will adjust the setpoint down by about 5°. This ratio between outdoor temperature and water temperature is adjustable.

Page 38 Bradford White

Here are instructions for setting up the Outdoor Reset function. Notice that these instructions will be different, depending on whether you have a single boiler or more than one boiler (using Lead Lag operation).

#### Wiring Connections -

Connect the outdoor temperature sensor:

If your system has just one boiler –

Connect the sensor across terminals 1 and 2 on TB-7. See Figure 31 on page 37.

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

Connect the sensor across terminals 1 and 2 on TB-7 on the boiler which will be used as the Lead Lag Master.

#### **Setting Up the Control Functions -**

Enable the Outdoor Reset function:
 Note: This function can be Enabled/Disabled only by a factory trained technician.

## 2. Set the maximum outdoor temperature:

If the outdoor temperature reaches this value or above, the system will use the Low Water Temp value as the setpoint. In the example shown earlier, the Max. Outdoor Temp. is set to 70°F. If the outdoor temperature rises above 70°F, the system will use 100°F (the Low Water Temp.) as the setpoint.

If your system has just one boiler -

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Outdoor Reset Configuration." Set the value on the line for "Max. Outdoor Temp."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/ Lag Configuration." Select "Lead/ Lag Outdoor Reset." Set the value on the line for "Max. Outdoor Temp."

## 3. Set the minimum outdoor temperature:

If the outdoor temperature drops to this value or below, the system will not compensate for the outdoor temperature. In the example shown earlier, the Min. Outdoor Temp. is set to 32°F. If the outdoor temperature is below 32°F, the system will use the normal system setpoint (130°F in this example).

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Outdoor Reset Configuration." Set the value on the line for "Min. Outdoor Temp."

If your system has more than one boiler, and is controlled

using the Lead/ Lag function -

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/Lag Configuration." Select "Lead/Lag Outdoor Reset." Set the value on the line for "Min. Outdoor Temp."

#### 4. Set the low water temperature:

If the outdoor temperature reaches the Max. Outdoor Temp. or higher, the system will use the Low Water Temp value as the new setpoint. In the example shown earlier, the Max. Outdoor Temp. is set to 70°F. If the outdoor temperature reaches 70°F or above, the system will use the Low Water Temp. value (example - 100°F) as the setpoint.

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/ Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Outdoor Reset Configuration." Set the value on the line for "Low Water Temp."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/Lag Configuration." Select "Lead/Lag Outdoor Reset." Set the value on the line for "Low Water Temp."

# 5. Set the minimum boiler water temperature:

If a value is entered here, the temperature in the boiler will never be allowed to drop below this temperature. This will protect the boiler against possible damage due to expansion of ice inside the unit. (Notice that this is different from the "low water temperature" described above.)

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Outdoor Reset Configuration." Set the value on the line for "Min. Boiler Water Temp."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/Lag Configuration." Select "Lead/Lag Outdoor Reset." Set the value on the line for "Min. Water Temp."

#### 8.12 Warm Weather Shutdown

#### About Warm Weather Shutdown -

The Warm Weather Shutdown feature tells the unit to stop firing if the outdoor temperature rises above a temperature you set. Notice that this affects the central heat or hydronic function only. If a call for domestic hot water arrives, the unit will still fire and respond to that. Warm Weather Shutdown requires the connection of an outdoor temperature sensor. See Section 8.10. (If Outdoor Reset is active, the same sensor can

be used for both functions.)

Here are instructions for setting up the Warm Weather Shutdown function. Notice that these instructions will be different, depending on whether your system has a single boiler or more than one boiler (using Lead Lag operation).

#### Wiring Connections -

Connect the outdoor temperature sensor.:

If your system has just one boiler –

Connect the sensor across terminals 1 and 2 on TB-7. See Figure 31 on page 37.

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

Connect the sensor across terminals 1 and 2 on TB-7 on the boiler which will be used as the Lead Lag Master.

## **Setting Up the Control Functions -**

1. Enable the Warm Weather Shutdown function:

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Warm Weather Shutdown." On the line for "Warm Weather Shutdown," select "Immediately."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: On the unit used as the Lead/Lag Master only - From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Warm Weather Shutdown." On the line for "Warm Weather Shutdown," select "Immediately."

2. Enter the setpoint for this feature:

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Warm Weather Shutdown." Go to the line for "Warm Weather Shutdown Setpoint", and set the value.

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: On the unit used as the Lead/Lag Master only - From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "CH Configuration." Select "Warm Weather Shutdown." On the line for "Warm Weather Shutdown Setpoint," and set the value.

#### 8.13 Domestic Hot Water

A Brute unit can be configured to supply domestic hot water (DHW) as a stand-alone "volume" unit (DHW models) or as a secondary function while the unit also provides hydronic heating. The piping used to supply domestic hot water (DHW) can be set up in several different ways. See Section 6 for details. In this section, we will describe the wiring and control setup for several different types of DHW supplies.

## **DHW Temperature Setting -**

Regardless of the type of DHW setup, the setpoint adjustment is made the same way.

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "DHW Setpoint."

# Hydronic Heating with Domestic Hot Water (DHW) Priority -

When using the Brute for hydronic heating with domestic hot water priority, a call for heat must be supplied to the "T-T or Interlock" terminal. Once the call is supplied, the control starts the Boiler and System pumps and begins the ignition process. Once in Run, the Brute monitors the flame signal, call for heat, safeties, and water temperatures modulating as needed between 100% and 20% of rate to satisfy the call for heat. When a DHW demand is applied during a hydronic call for heat, the priority feature forces the boiler to switch to the DHW demand for the priority time. The DHW priority demand forces the control to operate to the DHW setpoint,

# **A** DANGER

- Water temperature over 125°F (52°C) can cause severe burns instantly or death from scalds.
- Children, disabled and elderly are at hightest risk of being scalded.
- Set the water temperature carefully as described below.
- Feel the water before bathing or showering.
- If this appliance is used to produce water that could scald if too hot, such as domestic hot water use, adjust the outlet

ed to HOT HOT BURN

control (limit) or use temperature limiting valves to obtain a maximum water temperature of 125°F (52°C).

Page 40 BRADFORD WHITE

de-energizes the System pump and energizes the DHW pump.

The domestic hot water temperature sensor or an aquastat is used to monitor the DHW demand. The control uses the DHW sensor to control the operation and modulation rate of the appliance when there is a DHW demand.

# Hydronic Heating Using Local Lead-Lag/Cascading Feature with Indirect Hot Water -

(For a complete explanation of the Lead Lag system, see Section 8.14.)

When using the Lead Lag boiler system to provide indirect domestic hot water heating, the DHW demand should be supplied to the Master boiler through the existing DHW terminals. The Lead Lag system will change the operating mode of just the Master boiler to supply water at the DHW setpoint. The remaining boilers on the system will continue to supply hydronic heating.

When the system is supplying both hydronic heat and domestic hot water at the same time, both the System pump and DHW pump contacts are closed, so special attention must be paid to allow for proper operation. In applications serving both hydronic and domestic heating, during a DHW call the Boiler pump on the Master boiler may need to be turned off. The DHW pump will provide flow through the boiler and indirect tank when there is a DHW call. (This means the DHW pump must be sized properly.) To turn off the boiler pump in this application, the "boiler pump interrupt" jumper must be installed. The terminal block location is terminal block 5 (TB5) at the contacts labeled "boiler pump interrupt" in the control panel.

#### Sensor Connection for Domestic Hot Water -

Connect the DHW sensor or aquastat.

If your system has just one boiler –

Connect the sensor across terminals 5 and 6 on TB6. See Figure 31 on page 37.

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

On the unit used as the Lead/ Lag Master only, connect the sensor across terminals 5 and 6 on TB6.

# Domestic Hot Water Heating Using External Modulation Control -

When the Brute is used for DHW heating with external modulation control, a call for heat must be supplied to the "T-T or Interlock" terminal. By supplying a call to the "T-T or interlock" terminal, the operating temperature setpoint defaults to the hydronic heating setpoint, so all of the temperature adjustments must be made to the hydronic setpoint. When the unit receives the call, the control starts the Boiler and System pumps and begins the ignition process. Once in Run, the Brute monitors the flame signal, call for heat, safeties,

and water temperatures. The heater setpoint is used to limit the maximum water temperature leaving the boiler only. The modulation rate is controlled by a 4-20mA signal supplied by an external control. (This can also be 0-10Vdc using a converter.) When setting up a system using an external control, take care to set Anti-Short Cycle feature to prevent "hunting" and possible premature component failure.

## **Boiler Pump Interrupt Function -**

The Boiler pump interrupt feature is used in some applications when the boiler is being used for both hydronic and domestic hot water heating. The interrupt jumper is used to turn off the boiler pump during a domestic hot water demand. For this to work properly the system must be plumbed and pumped to allow the DHW pump to supply the flow and head requirements for both the boiler and indirect water heater. It is not necessary to use the interrupt jumper in all applications.

To turn off the Boiler pump in this situation, the "boiler pump interrupt" jumper should be installed between R1 and R2 on TB5.

If your system includes several boilers, is controlled using the Lead Lag system, and the indirect DHW tank is connected to the boiler acting as the Lead Lag master, install the boiler interrupt jumper on the Lead Lag master only.

# **A** WARNING

Failure to plumb, pump and install the appliance correctly when using this feature may lead to reduced or no water flow through the heat exchanger, causing premature failure of the heat exchanger, personal injury or death. Please consult the factory with any questions regarding the use of this feature.

#### **Setup for DHW Control Functions -**

1. Set up the correct priority for the DHW function in relation to Central Heat or Lead/ Lag demands. If a call for heat and a DHW demand arrive at the same time, which will have the higher priority?

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "DHW Configuration." Select "DHW Priority vs Central Heat."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: On the unit used as the Lead Lag Master, from the "Home" screen, press "I" to go to "Info/ Install." Choose "Advanced Setup," then go to "DHW Configuration." Select DHW Priority vs Lead Lag."

2. Set the setpoint for the DHW function.

If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "DHW Configuration." Select "DHW Setpoint."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: On the unit used as the Lead Lag Master, from the "Home" screen, press "I" to go to "Info/ Install." Choose "Advanced Setup," then go to "DHW Configuration." Select "DHW Setpoint."

3. Set the DHW priority time. If the DHW function has the

priority, the priority will continue during the priority time. If your system has just one boiler –

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "DHW Configuration." Select "DHW Priority Time."

If your system has more than one boiler, and is controlled using the Lead/ Lag function –

How to get there: On the unit used as the Lead Lag Master, from the "Home" screen, press "I" to go to "Info/ Install." Choose "Advanced Setup," then go to "DHW Configuration." Select "DHW Priority Time."

# 8.14 About Lead Lag Operation

If an installation includes two or more boilers (up to 8 residential Brutes), they may be set up for "Lead Lag" operation. One boiler will be set up as the "Master", and the others will operate as "Followers." Figure 38 shows an installation with four boilers. (A Lead Lag system can include up to eight boilers.) The boiler controllers are connected in a "daisy chain" using a Modbus connection.

# For the full wiring diagram for lead lag, See Figure 17 on page 26.

A single System sensor is used to monitor the demand for heat. The input from this sensor is used by the Master controller to control the modulation rates of all of the operating boilers.

#### **Lead Lag Modulation Cycle -**

Note - We will explain the modulation cycle here, in case you need to understand how the Lead Lag system actually operates. If you are installing the unit(s) and want to skip this section, just remember that, as the heating demand increases, the Lead Lag system puts more boilers on-line. As the heating demand is reduced, the Lead Lag system shuts off some of the boilers.

The signal from the System sensor is sent to the unit operating as the Lead Lag Master. A Run sequence is initiated when the system temperature falls to the Lead Lag Central Heat setpoint. (Actually this is the LL CH setpoint less the On Hysteresis value. The default setting for On Hysteresis is 5°F, but this is adjustable.)

Notice that, when a boiler is operating as part of a Lead Lag system, it does not use the normal CH setpoint – it uses the special LL CH setpoint on the Lead Lag Master.

The unit acting as the Lead Lag Master decides which boiler is assigned to start first. This assignment is rotated across all of the available boilers so that any one boiler does not run significantly longer than the others. The

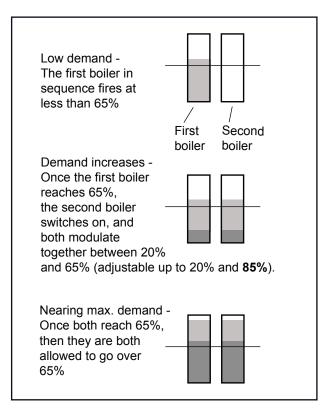



Figure 32. - Lead / Lag Operation, 2 boilers.

Lead Lag controller tracks the run times for all of the boilers, and uses this to calculate the starting order for the boilers. This means that each time the system starts up, a different boiler may start first.

- When the Run sequence is initiated, the boiler with the least amount of runtime will fire.
- If the heating demand increases so that the firing rate
  of that first boiler rises to your boiler configurations
  Base Load Value (see Table 19), the next boiler in the
  sequence will start up and begin firing at 20 to 35%
  fan speed (depending on your configuration). After

Page 42 BRADFORD WHITE

# 8.14 About Lead Lag Operation (continued)

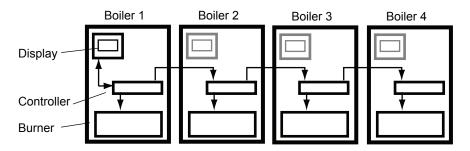

**Figure 33. – "Lead Lag" Operation in a System with Four Boilers.** Note - the Displays on Boilers 2 thru 4 will display information pertaining only to that specific boiler.

NOTE: If your Brutes are Lead Lag configured, you will find it very useful to customize your Home Display to show LL Operating Temp and LL Setpoint Temp.

**Please refer to Section 8.5** to learn how to customize your Home Display. Various parameters can be displayed on the Home Display to suit your needs.

this, the entire configuration of boilers will modulate up or down together, in reaction to the changes in demand. See Figure 34 through Figure 35.

# Control Settings for Lead Lag System - Part 1

- 1. Power up all of the boilers in the system.
- 2. In an installation with several boilers, you can give each boiler a different name. On each unit, go to the screen for "System ID and Access," and enter a unique name.

  How to get there: From the "Home" screen, press "I" to go to "Info/Install" Choose "Advanced Setup," then go to "System Configuration," then "System ID and Access," and select "Boiler Name."
- 3. The controller in each of the boilers needs a unique "Modbus address" so the Lead Lag Master can communicate with it. All of the units come from the factory with a Modbus address of "1," so you will need to change some of these addresses. The unit operating as the Lead Lag Master should have address "1," and the other boilers should each have unique Modbus address numbers.

# **A** Caution

You should set the Modbus addresses before you connect the Modbus wiring. If the wiring is attached before the Modbus addresses on the controls are changed, there will be multiple controls with the same address, and the system will not work.

Number of boilers installed	Base load value
1	NA
2	65%
3	50%
4	35%
5	35%
6	35%
7	35%
8	35%

Table 19. - Base Load Settings

# **A** WARNING

If the Modbus addresses are not assigned properly, the system could fail to operate correctly, or it might operate in an unsafe manner. This could lead to property damage, personal injury or death.

How to get there: On each boiler: From the "Home" screen, press "I" to go to "Info/Install." screen. Choose "Advanced Setup," then select "System Configuration". Then select "System ID & Access," and select "MB1 Modbus Address." Change it to its new unique Modbus address (1-8), then select "MB2 Modbus Address" and change it to the same address as the changed "MB1 Modbus Address" DO NOT CHANGE THE MENU LINE "ModBus Address". It will automatically change when you change the "MB1 Modbus Address"

- 4. The next job is to identify each boiler as a Lead Lag Master or Follower.
- On the boiler that will be used as the Lead Lag Master, identify the unit that will operate as the master by turning on "Master Enable."

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/ Lag Configuration." Select "Lead Lag Master Configuration." On the line for "Master Enable," select "Enable."

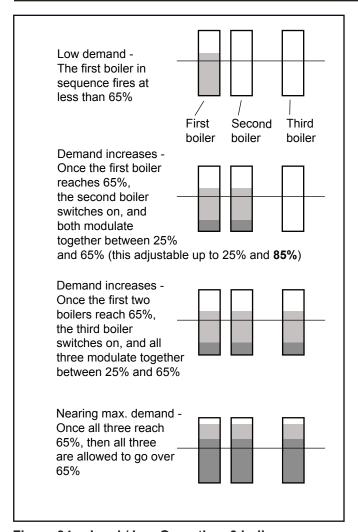


Figure 34. - Lead / Lag Operation, 3 boilers.

 On all of the boilers (including the Lead Lag Master), identify each unit as a Follower by turning on "Follower Enable."

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/ Lag Configuration". Select "Lead Lag Follower Configuration." On the line for "Follower Enable" select "Enable." When you select Follower Enable these options will be displayed "Enable via Modbus Master" or "Enable via Sola Master". Choose "Enable via Sola Master".

#### Wiring Connections for Lead Lag -

Now you can make the Modbus wiring connections between the units. The controller in each boiler includes two wiring terminals for the Modbus system, labeled "MB1" and "MB2." MB1 has the wiring connections to the User Interface display on each unit, and MB2 is used to communicate with the other boilers in the Lead Lag system. See Figure 17.

To reach the controller, open the cabinet of the boiler by

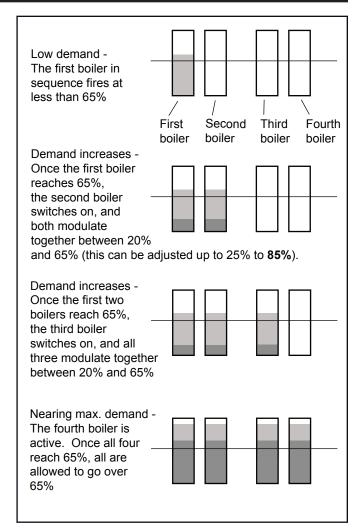


Figure 35. - Lead / Lag Operation, 4 or more boilers.

removing the plastic bezel.

The wiring from the controller on the first boiler runs to the controller on the next boiler. Use 22 AWG or thicker shielded twisted-pair wire with drain. Two twisted pairs or three conductors are needed. Wire A on MB2 of Boiler 1 must be connected to A on MB2 of Boiler 2, wire B on Boiler 1 goes to B on Boiler 2, and wire C on Boiler 1 goes to C on Boiler 2. Repeat this wiring for any other boilers in the system. Connect all of the drain wires and ground the drain wire on one end of the assembly only.

Page 44 BRADFORD WHITE

# 8.14 About Lead Lag Operation (continued)

# Control Settings for Lead Lag System - Part 2

1. On the Lead Lag Master, set the setpoint used by the Lead Lag system.

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/Lag Configuration." Select "Lead Lag Master Configuration," and go to the line for "Setpoint."

2. On the Lead Lag Master, set the Base Load to match the number of boilers in the system. We mentioned the Base Load setting in the explanation of the "Lead Lag Modulation Cycle." Whenever the heating demand causes the active burner(s) to run faster than the Base Load value, the Lead Lag system will put an additional burner on line. The Base Load value depends on the number of boilers in the system:

Note that you only need to enter the Base Load value on the Lead Lag Master.

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Advanced Setup," then go to "Lead/ Lag Configuration." Select "Lead Lag Master Configuration." Go to the line for "Base Load Common Rate."

# 8.15 Adjusting CO<sub>2</sub>

1. Measure the CO<sub>2</sub>/O<sub>2</sub> in the flue products at **high fire.** The Brute can be forced to high fire to allow for easier setup. The controller has a feature that makes it easy to go directly to the high fire condition. The unit will operate at high fire for 5 minutes, then modulate down automatically.

How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Test," then go to "Forced Rate." Select "Set High Fire," then select "Start Test."

The CO<sub>2</sub> readings should be between the values shown in Table 20. If the CO<sub>2</sub> is not within the range shown, adjustments may be made. To adjust the high fire CO<sub>2</sub>, locate the high fire adjuster screw according to the appropriate figure. Slowly make adjustments in 1/16 of a revolution increments until the CO<sub>2</sub> is within the range identified.

2. Measure the CO<sub>2</sub>/O<sub>2</sub> in the flue products at **low fire.** Brute can be forced to low fire to allow for easier setup.


How to get there: From the "Home" screen, press "I" to go to "Info/Install." Choose "Test," then go to "Forced Rate." Select "Set High Fire," then select "Start Test."

The  $CO_2$  readings should be between the values shown in Table 20. If the  $CO_2$  is not within the range shown, adjustments may be made. To adjust the low fire  $CO_2$ , locate the low fire adjuster screw according to the appropriate figure. Slowly make adjustments in 1/16 of a revolution increments until the  $CO_2$  is within the range identified.

- 3. Repeat steps 1 and 2 to confirm that the CO<sub>2</sub> ranges are within the required ranges. Adjust if necessary.
- 4. Confirm that the differential pressure is still within the appropriate range.
- 5. If any of the measurements cannot be adjusted to the specified ranges or the CO levels are above 150ppm when adjusted, please consult the factory for further information.

# **A** WARNING

Improper adjustment may lead to poor combustion quality, increasing the amount of carbon monoxide produced. Excessive carbon monoxide levels may lead to personal injury or death.

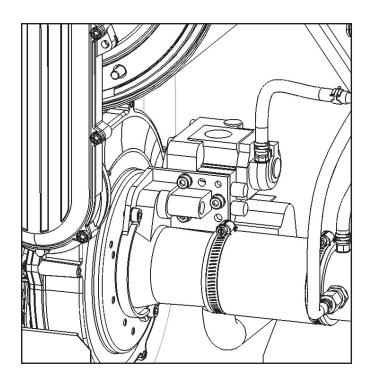

The Gas Valve in the 80 thru 210 is at the front of the unit and can be reached after the front panel is pulled forward and then off.

Always be patient with your combustion analyzer when making adjustments to the valve at both Hi-Fire and Low-Fire.

Be sure to put the cap back onto the valve when you are done making your adjustments at the gas valve.

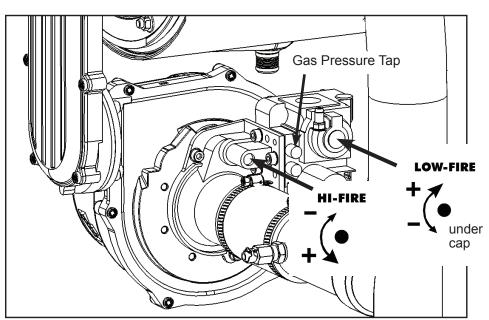


Figure 36. - Brute Gas Valve 80 - 210 Mbtu

GAS TYPE	HIGH FIRE, CO <sub>2</sub>	LOW FIRE, CO <sub>2</sub>	DIFFRNTL PRESSURE (inches wc)
Natural	8.8 to 9.8%	0.5% lower than	3.6" to 3.9"
Propane	9.8 to 10.2%	high fire setting	3.0 10 3.9

Table 20. Residential, sizes 80 - 210 Mbtu, CO<sub>2</sub> Range and Differential Pressure

Page 46 BRADFORD WHITE

# Section 9 -FIRST START-UP AND ADJUSTMENT INSTRUCTIONS

# 9.1 Filling the Boiler System

- 1. Ensure the system is fully connected. Close all bleeding devices and open the make-up water valve. Allow the system to fill slowly.
- 2. If a make-up water pump is employed, adjust the pressure switch on the pumping system to provide a minimum of 12 psi (81.8 kPa) at the highest point in the heating loop.
- 3. If a water pressure regulator is provided on the make-up water line, adjust the pressure regulator to provide at least 12 psi (81.8 kPa) at the highest point in the heating loop.
- 4. Open all of the bleeding devices on all radiation units at the high points in the piping throughout the system, unless automatic air bleeders are provided at these points.
  - **Note** There is an air bleed located on the left side of Brute unit, on top of the water manifold.
- 5. To remove all air from the heat exchanger, cycle the boiler pump on and off 10 times, 10 seconds on and 10 seconds off. Then run the system and appliance pumps for a minimum of 30 minutes with the gas shut off.

# **A** WARNING

Failure to remove all air from the heat exchanger could lead to property damage, severe injury or death.

- Open all strainers in the circulating system, check the operation of the flow switch (if equipped), and check for debris. If any debris is present, clean it out to ensure proper circulation.
- 7. Recheck all air bleeders as described in Step 4.
- 8. Start up the boiler according to the procedure listed in this manual. Operate the entire system, including the pump, boiler, and radiation units for one hour.
- 9. Shut down the entire system and vent all radiation units and high points in the system piping, as described in Step 4.
- Close the make-up water valve and check the strainer in the pressure reducing valve for sediment or debris from the make-up water line. Reopen the make-up water valve.
- 11. Check the gauge for correct water pressure and also check the water level in the system. If the height indicated above the boiler insures that water is at the highest point in the circulating loop, then the system is

ready for operation.

- 12. Prime the condensate trap with water.
- 13. Refer to local codes and the make-up water valve manufacturer's instructions as to whether the make-up water valve should be left open or closed.
- 14. After placing the unit in operation, the ignition system safety shutoff device must be tested.

First, shut off the manual gas valve, and call the unit for heat. The main gas terminals will be energized, and attempt to light, for four seconds, and then will deenergize. The unit will go into lockout after the required number of trial for ignition periods.

Next, turn the power Off, and then On again. Press the manual reset button on the boiler control, open the manual gas valve, and allow the unit to light. While the unit is operating, close the manual gas valve and ensure that power to the main gas valve has been cut.

15. Within three days of start-up, recheck all air bleeders and the expansion tank as described in Steps 4.

**Important Note:** The installer is responsible for identifying to the owner/operator the location of all emergency shutoff devices.

# **A** WARNING

Do not use this appliance if any part has been under water. Bradford White requires boilers and water heaters to be replaced, not repaired, if they have been partially or completely submerged.

# 9.2 First Operation

# **A** Caution

The initial setup must be checked before the unit is put in operation. Problems such as failure to start, rough ignition, strong exhaust odors, etc. can be due to improper setup. Damage to the boiler resulting from improper setup is not covered by the limited warranty.

**REQUIRED TOOLS:** differential pressure gauge capable of reading negative 0.01 inches W.C. (0.002kPa), screw drivers, Torx bits, combustion analyzer.

- 1. Using this manual, make sure the installation is complete and in full compliance with the instructions and all local codes.
- Determine that the appliance and system are filled with water and all air has been bled from both. Open all valves. If the unit has optional pressure gas resets then the low pressure gas switch will need to be reset by pushing the button.
- 3. Observe all warnings on the Operating Instructions label

- and turn on the gas and main electrical power (circuit breaker) to the unit.
- 4. Turn the Brute on at the On/Off switch.
- 5. The Brute unit will begin the start sequence. The blower and pump will energize for the pre-purge period, then the ignition sequence will start. After all safety devices have been verified, the gas valve will open. If ignition doesn't occur, turn off the Brute, and check that there is proper gas supply. Wait 5 minutes before restarting.
- 6. After placing the appliance in operation, the Burner Safety Shutoff Device must be tested:
  - Close the gas shutoff valve with the burner operating.
  - The flame will go out and the blower will continue to run for the post purge cycle. One or three additional attempts to light will follow. Each cycle will include pre-purge, ignitor on, valve/flame on, and post purge. Ignition will not occur because the gas is off. The ignition control will lockout after a single try or a third try depending on the controller model.
  - Open the gas shutoff valve. Reset the boiler control by pressing the Reset button on the control or on the display. Restart the appliance. The ignition sequence will start again and the burner will start. The appliance will return to its previous mode of operation.

# **A** DANGER

If you detect any odor of gas, or if the gas burner does not appear to be functioning in a normal manner, CLOSE THE MAIN SHUTOFF VALVE. Do not shut off the switch. Contact your heating contractor, gas company, or factory representative.

# 9.3 Restarting the Brute Unit

If the unit has been drained, see Section 9.1 in this manual for instructions on filling and purging the unit properly.

- 1. Turn off the main electrical disconnect switch.
- 2. Close all manual gas valves.
- 3. WAIT FIVE (5) MINUTES.
- 4. Set the aquastat or thermostat to its lowest setting.
- 5. Open all manual gas valves.
- 6. Reset all safety switches (pressure switch, manual reset high limit, etc.).
- 7. Set the temperature controller to the desired temperature setting, and switch on electrical power.
- 8. The burner will go through a prepurge period, followed by ignition.

# 9.4 Shutting Down the Brute Unit

- 1. Turn off the main electrical disconnect switch.
- 2. Close all manual gas valves.
- 3. If you think the Brute unit might freeze, drain it. All water must be removed from the heat exchanger, or damage from freezing may occur. Also be sure to protect the piping in the building from freezing.



This step must be performed by a qualified service technician.

Page 48 BRADFORD WHITE

# Section 10 MAINTENANCE

# **A** WARNING

Disconnect all power to the appliance before attempting any service. Contact with electricity can result in severe injury or death.

# 10.1 System Maintenance

Do this once a year, unless otherwise noted.

- 1. Lubricate the system water-circulating pump, if required, per the instructions on the pump.
- 2. If a strainer is employed in a pressure reducing valve or the piping, clean it every six months.
- 3. Inspect the venting system for obstruction or leakage at least once a year. Periodically clean the screens in the vent terminal and combustion air terminal (when used).
- 4. Keep the area around the appliance clear and free of combustible materials, gasoline, and other flammable vapors and liquids.
- If the appliance is not going to be used for extended periods in locations where freezing normally occurs, it should be isolated from the system and completely drained of all water.
- Low water cutoffs, if installed, should be checked every year. Float-type low water cutoffs should be flushed periodically.
- 7. Inspect and clean the condensate collection, float switch and disposal system yearly.
- 8. When a means is provided to neutralize the condensate, ensure that the condensate is being neutralized properly.
- Inspect the flue passages, and clean with a brush or vacuum if necessary. Sooting in flue passages indicates improper combustion. Determine the cause for this and correct it.
- 10. Inspect the vent system and air intake system, and ensure that all joints are sealed properly. If any joints need to be resealed, completely remove any existing sealing material, and clean the joint(s) with alcohol. Apply new sealing material, and reassemble.

# 10.2 Appliance Maintenance and Component Description

Use only genuine Bradford White replacement parts.

# **A** Caution

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.

The gas and electric controls in the unit are engineered for long life and dependable operation, but the safety of equipment depends on their proper functioning. Only a qualified service technician should inspect the basic items listed below every year:

- a. Appliance control
- f. Flow switch
- b. Automatic gas valve
- g. Low water cutoff
- c. Pressure switches
- h. Burner
- d. Blower
- i. Heat exchanger

e. Pump

#### **Burner**

Check the burner for debris. Remove the blower arm assembly to access the burner. Remove the four bolts connecting the blower to the arm. (See Figure 47.) Remove the five bolts which hold the burner arm in place. Pull the burner up and out. Clean the burner, if necessary, by blowing compressed air from the outside of the burner into the center, and wipe the inside clean with glass cleaner. A dirty burner may be an indication of improper combustion or dirty combustion air. Determine the cause of this, and correct it. If the burner gasket is damaged, replace it when replacing the burner.

**NOTE:** When installing the burner, make sure the flange is aligned with the mating surface, as each is keyed to control the fit.

## Modulating Gas Valve / Venturi

The modulating gas valve consists of a valve body that incorporates the On/Off gas flow control and a negative pressure regulator. It provides the air/gas ratio control in combination with the Venturi to the unit. It is designed to operate with a gas supply pressure between 4 and 13 inches w.c. To remove the gas valve and/or Venturi, shut off the 120 Volt power supply to the boiler. Turn off all manual gas valves connecting the boiler to the main gas supply line. Remove the front door of the boiler to gain access to the gas valve and Venturi. Disconnect the four flange bolts connecting the gas manifold pipe to the gas valve. Remove the electrical connections to the gas valve. Remove the bolts connecting the Venturi flange to the blower. This allows the entire gas valve and Venturi assembly to be removed to facilitate inspection and cleaning.

Reassemble the valve/Venturi assembly in reverse order, making sure to include all gaskets and O-rings. Turn on the manual gas valves and check for gas leaks. Turn on the 120 Volt power. Place the unit in operation following the instructions in Section 9. Once the boiler is operating, check for leaks again and confirm that all fasteners are tight.

Check the appliance setup according to Section 9.

# **Appliance Control**

The Brute unit has an integrated control that incorporates manual reset high limit control, operating temperature control, modulating control, ignition control, outdoor reset control, pump control and many other features. If any of these features are thought to be defective, please consult the

factory for proper trouble shooting practices prior to replacing the control. If control replacement is required, turn off all power to the appliance and shut off all manual gas valves to the appliance. Remove the front door to the appliance and the plastic bezel and the control panel. Remove all wire connections from the control board. The control board connections are keyed to only allow connection in the proper location, but proper handling techniques should be used to avoid damage to the wiring or connectors. To remove the control, push in on the two tabs on the left side of the board to unlatch the clips from the control panel. Rotate the control around the fastening points on the right side of the control to remove the hooks from the control panel. To replace the control, repeat the steps listed above in the reverse orders making sure to connect all wires in the proper locations. Place the appliance in operation following the steps outlined in Section 9.

## **Ignitor Assembly**

The ignitor assembly is a two rod system that consists of a ground rod and a spark rod (See Figure 37). To remove the ignitor assembly, shut off the 120 Volt power supply to the appliance. Turn off all manual gas valves connecting the appliance to the main gas supply line. Remove the front door of the boiler to gain access to the ignitor assembly. Remove

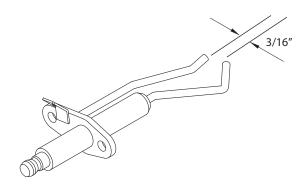


Figure 37. - Ignitor

the two wires connected to the assembly. Then remove the two bolts connecting the ignitor assembly to the burner door. If the old ignitor assembly is determined to be defective, install a new ignitor assembly (check that the spark gap is 3/16"). Replace the gasket if necessary.

#### Flame Sensor

The flame sensor is a single rod system. To replace the flame sensor electrode, shut off the 120 Volt power supply to the boiler. Turn off all manual gas valves connecting the boiler to the main gas supply line. Remove the front door of the boiler to gain access to the flame sensor electrode. Remove the flame sensor wire from the electrode. Remove the two bolts fastening the electrode to the burner doors. Remove and replace the old flame sensor gasket. If the old electrode is determined to be defective, install a new flame sensor electrode in the reverse order.

# **A** Caution

The ignitor and sensor may be hot, and can cause burns or injury.

Page 50 BRADFORD WHITE

# **Transformer with Integral Circuit Breaker**

The appliance has a 24Vac transformer with integral 4 amp circuit breaker installed to supply the control voltage required for the appliance. The transformer is sized to provide power for the Brute unit only, and should not be used to supply power to additional field devices. If additional loads are added, or a short occurs during installation, the integral circuit breaker may trip. If this happens, be sure to reset the circuit breaker before replacing the transformer.

The transformer is mounted underneath the control panel. If the transformer must be replaced, turn off the 120Vac power to the appliance. Remove the transformer wires from the terminal blocks. Remove the fasteners holding the transformer, then remove the transformer. Replace with a new transformer in the reverse order.

If the transformer is replaced with a part other than the OEM transformer, be sure to add circuit protection if it is not integral to the new transformer.

# **A** WARNING

Failure to include proper circuit protection may lead to premature component failure, fire, injury or death.

#### **Blower**

The combustion air blower is a high-pressure centrifugal blower with a variable speed motor. The speed of the motor is determined by the control logic. 120 Volt power remains on to the blower at all times. If the blower must be changed, turn off the 120 Volt power and gas supply to the unit. Take the front panel off. Disconnect the 120 Volt and control signal connections from the blower. Disconnect the bolts connecting the Venturi to the blower housing. Disconnect the fan outlet bolts from the burner door blower arm. If the fan is determined to be defective, replace the existing fan with a new one, reversing the steps listed above. Be sure to install all of the required O-rings and gaskets between the blower arm and the blower and blower face and venturi flange.

# **Heat Exchanger Coils**

Black carbon soot buildup on the heat exchanger is caused by one or more of the following; incomplete combustion, combustion air problems, venting problems, or heater short cycling. Soot buildup or other debris on the heat exchanger may restrict the flue passages.

If black carbon soot buildup on the heat exchanger is suspected, disconnect the electrical supply to the unit, and turn off the gas supply by closing the manual gas valve on the unit. Access the heat exchanger through the burner door at the front of the boiler, and inspect the tubing using a flashlight. If there is a buildup of black carbon soot or other debris on the heat exchanger, clean using this procedure:

# **A** WARNING

Black carbon soot buildup on a dirty heat exchanger can be ignited by a random spark or flame. To prevent this from happening, dampen the soot deposits with a wet brush or fine water spray before servicing the heat exchanger.

- 1. Shut off the 120 Volt power supply to the boiler
- 2. Turn off all manual gas valves connecting the boiler to the main gas supply line.
- 3. Remove the four bolts connecting the blower flange to the burner door arm.
- 4. Remove the nuts located on the outside diameter of the burner door to the heat exchanger.
- 5. Remove the burner door and burner assembly from the heat exchanger.
- 6. Disconnect the condensate drain line.
- 7. Attach a longer hose to the drain and run it to a bucket.
- 8. Clean the heat exchanger by brushing away any light accumulations of soot and debris. Use a brush with soft bristles (non metallic) to avoid damaging the surfaces of the heat exchanger tubes.
- 9. Once the tubes have been brushed clean, rinse the tubes and combustion chamber with a small amount of water to rinse all of the debris out of the bottom of the flue collector and into the longer condensate trap line. This will be diverted into the separate container.

NOTE: The Warranty does not cover damage caused by lack of required maintenance, lack of water flow, or improper operating practices.

# **A** WARNING


Failure to rinse the debris from the heat exchanger and temporary drain line may lead to clogged condensate lines, traps and neutralizers. Condensate pumps (if used) may also be damaged by the debris left behind, possibly causing property damage.

- Install all components removed in the reverse order to place the appliance back in operation. Be sure all gaskets are in place as the components are installed. Replace any damaged gaskets. Do *not* reuse damaged gaskets.
- 11. Place the appliance in operation according to the instructions in Section 10. Check all gas connections for leaks. Confirm that all fasteners are tight.

# **Optional Pressure Gas Switches**

The high and low pressure gas switches are 24V manual reset switches that act to cut power to the gas valves if the gas pressure is too low or too high for proper operation.

If your boiler is equipped with the Optional pressure gas switches, then the Low Pressure Switch will need to be reset.

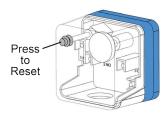

The pressure gas switches used are integrally vent limited, and do not require venting to atmosphere. To remove a switch, remove the screw on the plastic housing and pull the clear cover off. Disconnect the two wires from the screw terminals. Twist the switch off the pipe nipple. Reassemble in reverse order. For natural gas, set the low pressure gas switch to 3" w.c. For propane, set the low pressure gas switch to 5" w.c. For natural and propane, set the high pressure gas switch to 14".

#### 10.3 Gas Conversion

Brute units can easily be converted from natural to propane gas or from propane to natural gas in the field. Some units require the addition of a gas orifice along with proper gas valve adjustment. Other units require no additional parts - only proper gas valve adjustment. Please contact the Bradford White factory for specific information regarding the gas conversion of a particular appliance. If a gas conversion is performed, the unit must be identified with the appropriate gas labels and a conversion sticker to allow technicians performing maintenance in the future to properly identify the type of gas being used in the appliance.

size (mbtu)	Kit number
80	CA006201
105	CA006202
150	CA006203
210	CA006204

Table 21. - Propane Gas Conversion Kits

size (mbtu)	Kit number
80	CA006206
105	CA006206
150	CA006206
210	CA006206

Table 22. - Natural Gas Conversion Kits

Page 52 BRADFORD WHITE

# Section 11 OPERATING DETAILS AND TROUBLESHOOTING

# 11.1 Normal Startup and Initialization

When power to the unit is turned on, the controller will automatically go through a startup and initialization procedure. At first the interface will display some information about the control software. See Figure 38.



Figure 38. - First Initialization Display

Next, the interface will search for the SOLA controller that will actually control the boiler. See Figure 39.

Boiler Search
Modbus address: 1
Synchronizing...
Parameter Control Blocks

Figure 39. - Second Initialization Display

Once the interface makes the connection to the controller, it will display the address it is using to communicate (the "Modbus address"). The interface will download a series of values from the SOLA controller (or "synchronize" with the controller).

When the synchronization is finished, the display will change to the Home screen shown in Figure 20.

# 11.2 Sequence of Operation

The Brute is a cold-start appliance. It should start only when it receives a call for heat from a tank aquastat, room thermostat, zone valve end switch or other space temperature control device.

- 1. The unit receives a call for heat.
- 2. The controller checks the safety chain.
- 3. The fan starts and waits to achieve prepurge RPM.
- 4. The prepurge timer is started once the prepurge RPM is achieved.

- 5. There is a pre-ignition time of two seconds to check the flame sensor operation and status. During this period an intermittent spark can be seen.
- 6. Next there is a trial for ignition period of four seconds. The direct spark ignition switches to constant spark for three seconds. During this time the gas valve is open. For the last second of the ignition period, direct spark is de-energized and the flame sensor checks for established flame. If flame is sensed, the control enters Run to satisfy the demand. If flame is not established, the control enters a retry, starting from step 2. If flame has not been established after the preset number of retries, the control will lockout with a 109 error code.
- 7. The call for heat signal is removed.
- 8. The gas valve shuts off.
- 9. The fan and pump continue to run for the over-run times to purge the system.

This is the basic operating sequence of the appliance for a DHW or hydronic call for heat.

# 11.3 Modulation Control

The control uses a PID algorithm to adjust the firing rate of the boiler as the control point is approached. The goal of the control is to operate at a minimum firing rate to match the load on the appliance. This is done by using a setpoint, and on/ off differentials. The control modulates to achieve the setpoint temperature, which could be several degrees away from the actual off point. The off point is calculated by adding the setpoint plus the off differential. The setpoint and differentials used in operation are dependent upon the type of call for heat being applied. If there is a DHW call, the DHW setpoint and off differentials are used. If there is a hydronic call, the CH setpoint and off differentials are used. When the setpoint plus the off differential is reached, the control prevents the unit from firing until the water temperature reaches the setpoint minus the on differential.

# 11.4 Pump Control

The control can operate three pumps. The boiler pump is active any time there is a call for heat applied to the control. The DHW and system pumps are active based upon the call and priority of the heat demand being supplied. When there is a hydronic call supplied, the system pump is active. If there is a DHW call supplied while the hydronic call is active, with DHW priority enabled, the system pump turns off and the DHW pump turns on. Domestic hot water priority forces the control to attempt to satisfy the domestic water demand before the hydronic demand. Once the last heat demand has been satisfied, the boiler pump enters an overrun time.

# 11.5 Anti-Short-Cycle (ASC)

Because the Brute unit is a modulating boiler, and its input will decrease when there is a reduction in the heating load, short cycling is greatly reduced. If the heating load drops below the minimum input of the boiler for an extended period, the boiler will have a tendency to short cycle. This can be a symptom of improper control strategy or setpoints, or a load distribution problem. The controller in the Brute unit includes an anti-short cycle (ASC) function. The timer for the ASC can be set to delay the boiler start for a specified time after a call for heat is completed.

# 11.6 Temperature Sensors

## **High Limit Sensor -**

The control uses a dual thermistor sensor to monitor the Brute's maximum temperature. The high limit sensor is installed in the outlet water. A dual thermistor sensor is used, so that the two temperatures can be monitored and compared to confirm accuracy. The control will automatically reduce the firing of the Brute to prevent the high limit from tripping. The high limit setpoint is factory set at 195°. However, if desired you can set a lower limit using the Adjustable High Limit function available from the Quick Start menu.

#### **Outlet Water Temperature -**

The outlet water temperature is sensed by a dual thermistor sensor, and is limit-rated. The control compares the two temperature readings to determine accuracy. The outlet sensor is used as the primary control point for high limit, temperature operation, and modulation.

## Inlet Water Temperature -

The inlet water temperature uses a single thermistor sensor. The heat exchanger temperature rise (delta T) is calculated using the inputs from the outlet and inlet sensor temperatures.

## Stack Limit -

The stack temperature is sensed by a dual thermistor sensor, and is limit-rated. The control compares both of the temperature readings to determine accuracy. The stack sensor is used as a limiting feature to avoid excessive temperatures in the vent.

# 11.7 Diagnostics

Use the Diagnostics to check the status of the sensors and the digital inputs and outputs. The system also records a history of lockouts and alarms.

## **Analog Sensors -**

You can use this display to check on operating temperatures, fan speed, firing rate, etc. (The word "analog" refers to values that can change continuously between zero and a higher value.) The values shown here are "Read Only" – you can't change them from this display.

# Digital Input/Output -

This display shows whether different functions, inputs and outputs are either on or off. The functions listed here include pumps, valves, alarms, etc. The values shown here are "Read Only" – you can't change them from this display.

## History -

The system records the most recent lockouts or alerts. (If there is a current lockout or alert, a note about this will also appear at the bottom of the Home screen.)

- A "lockout" is a condition that will prevent the unit from starting or running.
- An "alert" indicates a condition that is not normal. If it continues, the control system might move to a "lockout," or the problem might be corrected.

# 11.8 Error Codes

See Appendix B. on page 66

Page 54 BRADFORD WHITE

# Section 12 - REPLACEMENT PARTS

Use only genuine Bradford White replacement parts.

# **12.1 General Information**

To order or purchase parts for the Bradford White Brute, contact your nearest Bradford White dealer or distributor. If they cannot supply you with what you need, contact Customer Service. (See the back cover for the address, telephone and fax numbers.)

4	2	2	Da	rts	1	ict
		_	2	$r_{1}$		181

Mounting Rail

ITEN	I DESCRIPTION	SIZE 80	SIZE 105	SIZE 150	SIZE 210
Jack	cet Components – See F	igure 40			
1	Front Panel Assembly	R60D3200	R60D3200	R60D3200	R60D3200
2	Front Panel Handle	R50D3204	R50D3204	R50D3204	R50D3204
3	Rear Panel	R50D3101	R50D3101	R50D3101	R50D3101
4	Left Side Panel	R8D3002	R10D3002	R15D3002	R20D3002
5	Right Side Panel	R15D3001	R15D3001	R15D3001	R30D3001
6	Left Top Panel	8D3327	10D3327	R15D3303	R20D3303
7	Middle Left Top Panel	8D3328	10D3328	15D3402	20D3403
7A	Middle Right Top Panel	8D3329	10D3329	15D3403	20D3402
8	Right Top Panel	8D3330	10D3330	15D3401	R20D3301
9	Jacket Angle Support	R8D3102 (Right Hand)	R8D3102 (Right Hand)	R15D3102 (2)	R30D3102 (2)
		R15D3102 (Left Hand)	R15D3102 (Left Hand)		
10	Jacket Support, Left Stanchion	R50D3003	R50D3003	R50D3003	R50D3003
11	Jacket Support, Right Stanchion	R50D3004	R50D3004	R50D3004	R50D3004
12	Front Bezel	R50D7121	R50D7121	R50D7121	R50D7121
13	Display mounting frame	R50D7122	R50D7122	R50D7122	R50D7122
(128	13) Complete Assembly	R50D7120	R50D7120	R50D7120	R50D7120
Inte	rnal Components – See	Figure 42			
20	Base Assembly	R15D1100	R15D1100	R15D1100	R30D1100
21	Left Rear Support Stanchion	R50D1001	R50D1001	R50D1001	R50D1001
22	Left Front/Right Rear Support Stanchion	R50D1002	R50D1002	R50D1002	_
23	Cantilevered Base Stanchion	R15D1002	R15D1002	R15D1002	R40D1001
24	Brace, Front, HX Stanchion	20D1005	20D1005	20D1005	20D1005
24A	Brace, Rear, HX Stanchion	R50D1005	R50D1005	20D1007	20D1007
0.5	Maria Dail	D45D4004	D45D4004	D45D4004	D00D4004

R15D1004

R15D1004

R15D1004

R30D1004

ITEN	// DESCRIPTION	SIZE 80	SIZE 105	SIZE 150	SIZE 210
27	Condensate Trap Assy	R20D4020	R20D4020	R20D4020	R20D4020
28	Heat Exch. Rail Clip	R50D1006 (2)	R50D1006 (2)	_	_
30	PVC Reducer	_	_	RP2053000	RP2053000
30a	CPVC Reducer or Coupling	RD2010501	RD2010501	RP2065600	RP2065600
30b	2" Dia. Pipe, CPVC	RD2010212	RD2010212	RD2010213	RD2010213
31	Hose Barbed Adapter	RP2067100	RP2067100	RP2056100	RP2056100
33	Air Inlet/Exhaust Bracke	t R8D3005	10D3005	R20D3120	R20D3120
Gas	Train Components – Se	ee Figure 41			
40	Combustion Air Blower	RA2113700	RA2113700	RA2107500	RA2114200
41	Gas Valve/Venturi	RV2017900	RV2017901	RV2017902	RV2017903
47	Gas Valve O-Ring	R30-227	R30-227	R30-227	R30-227
51	Duct/Venturi Transition	R10D5021	R10D5021	R10D5021	R10D5013
52	Gas Supply Pipe	RP2051700	RP2051400	RP2051400	RP2051400
55	Air Inlet Flex Hose	D0091403	RD0091403	RD0091403	D0091401
60	Heat Exchanger Pump Assembly	RS2106900 R8D4110	RS2105500 R10D4110	RS2105800 R10D4110	RS2105700 R20D4140
62	Low Water Cutoff Switch	n —	_	_	_
63	Inlet Water Temp Senso	rRE2320600	RE2320600	RE2320600	RE2320600
64	Duplex Outlet Water Temperature Sensor	RE2319900	RE2319900	RE2319900	RE2319900
65	Duplex Stack Temperature Sensor	RE2319700	RE2319700	RE2319700	RE2319700
66	Pressure Relief Valve, BNTH	R51-182 (30 PSI)	R51-182 (30 PSI)	R51-182 (30 PSI)	R51-182 (30 PSI)
	Pressure Relief Valve,			A2114802 (125 PSI)	A2114802 (125 PSI)
67	Air Vent	R1-592	R1-592	R1-592	R1-592
68	Burner Door w/gasket	RS2112801	RS2112801	RS2112801	RS2112801
68A	Burner Door Gasket (rubbe	er) R2069400	R2069400	R2069400	R2069400
69	Burner Gasket	RS2108500	RS2108500	RS2108500	RS2108500
69A	Gasket Set (burner gasket, ignitor gask	RS2109100 ket, sensor gask	RS2109100 et & burner door	RS2109100 gasket)	RS2109100
70	Front Refractory Tile	RT2109001	RT2109001	RT2109001	RT2109001
71	Rear Refractory Tile	R50D2021	R50D2021	R50D2021	R50D2021
72	Main Burner w/gasket	R2069101	R2069102	R2069103	R2069104
73	Flame Sensor w/gasket	R2069200	R2069200	R2069200	R2069200
74	Ignitor w/gasket	R2069300	R2069300	R2069300	R2069300
74A	Ignitor Gasket	RW2013300	RW2013300	RW2013300	RW2013300


74B Screw, Ignitor/ m4-.7X8mm m4-.7X8mm m4-.7X8mm m4-.7X8mm

Page 56 BRADFORD WHITE

00
100
00
00
3
20
֡

# Electrical Components – See Figure 44

80	Control Panel Enclosus	re R50D7001	R50D7001	R50D7001	R50D7001
81	Transformer	RE2108700	RE2108700	RE2108700	RE2108700
82	High Voltage Shield	R50D7002	R50D7002	R50D7002	R50D7002
83	Top Panel Bracket	R50D7003	R50D7003	R50D7003	R50D7003
84	Electronic Control Module, Standard	Conta	act Customer S	ervice	
84	Electronic Control Module, CSD-1	Conta	act Customer S	ervice	
84 — 85		Conta	act Customer Se	ervice RE2322700	RE2322700
_	Module, CSD-1				RE2322700 RE2347200
85	Module, CSD-1  Rocker Switch	RE2322700	RE2322700	RE2322700	

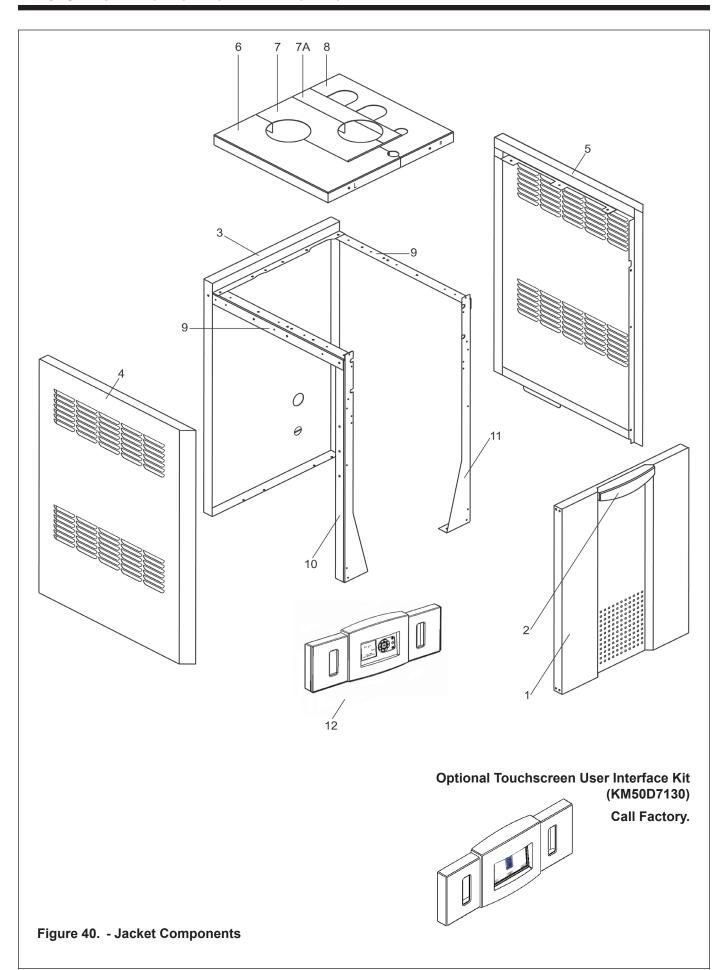

Page 58 BRADFORD WHITE

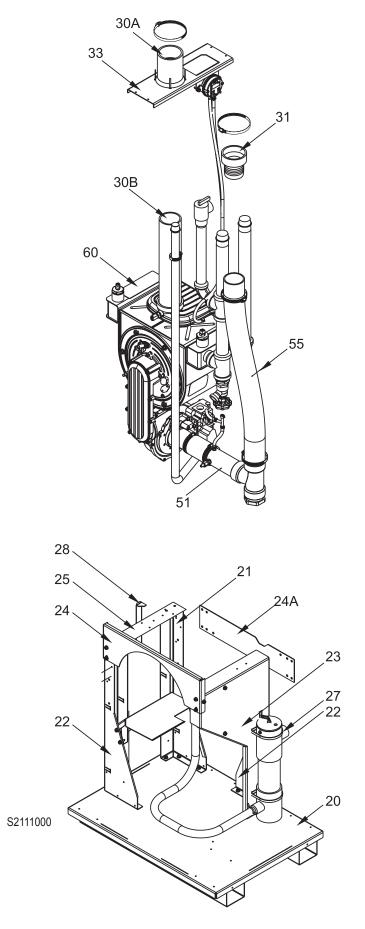


Figure 41. - Gas Train Components, Sizes 80-210

52

40

Figure 42. - Internal Components, Sizes 80–210

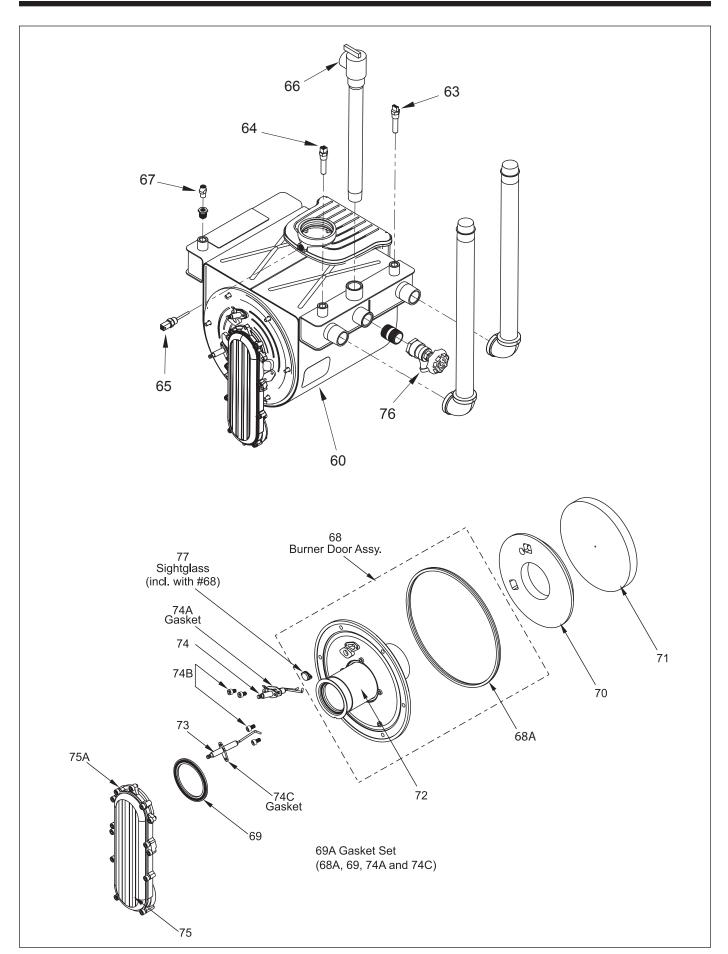


Figure 43. - Heat Exchanger Components

Page 60 BRADFORD WHITE

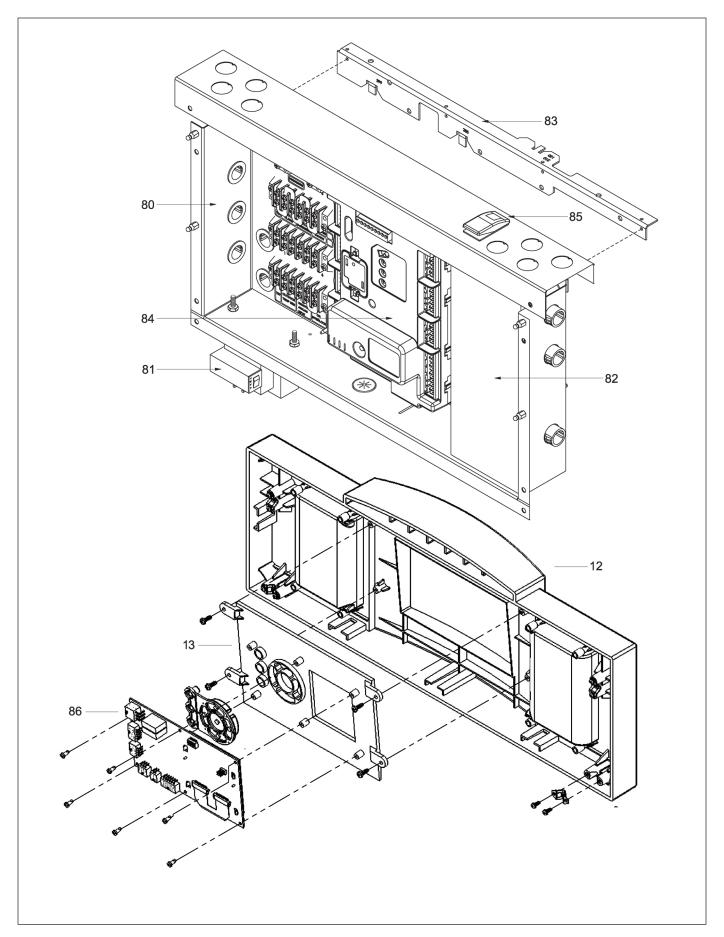


Figure 44. - Electrical Components

# Appendix A - SOFTWARE CONTROL FUNCTIONS

This table includes a listing of all of the control functions that can be used by the operator or installer. Functions that require a password are indicated in the second column.

Name	PW?	Function	How to get there
Adjustable high limit	Y	The absolute high limit for the water outlet is pre-set at the factory. If desired, you can set a lower value here.	Quick Start
Adjustable stack limit	Y	The absolute high limit for the stack temperature is pre-set at the factory. If desired, you can set a lower value here.	Quick Start
Alert log	-	This displays the 15 most recent alerts.	Info/ Diagnostics/ History
Analog sensors	-	This shows the current condition of selected sensors – temperatures, fan speed, flame signal, etc.	Info/ Diagnostics
Anti short-cycle time	-	This feature can be set to prevent the burner from firing and then shutting off quickly in response to a call for heat that changes state quickly.	Info/ Advanced Setup/ System Config./ System Config.
Base load common rate (LL)	-	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
		As the heating load increases, this value sets the point where the controller will fire the next boiler. See the section on "About Lead/ Lag."	
Boiler pump control	Υ	The boiler pump can be turned on manually, or it	Info/ Test/ Manual Pump Operation
		can be set to operate automatically.	Info/ Advanced Setup/ System Config./ Pump Config.
Boiler pump cycle count	Y	A new value can be written here if the pump or controller is replaced.	Info/ Advanced Setup/ System Config./ Statistics Config.
Boiler pump overrun time	Y	This indicates how long the boiler pump will remain on after demand from any source ends.	Info/ Advanced Setup/ System Config./ Pump Config.
Burner cycle count	Y	This is incremented on each entry to Run. A new value can be written here if the burner or controller is replaced.	Info/ Advanced Setup/ System Config./ Statistics Config.
Burner name	Υ	This parameter allows the installer to give each boiler unit a unique name.	Info/ Advanced Setup/ System Config./ System ID and Access
Burner off inhibit time	Υ	Set to "No Value."	Info/ Advanced Setup/ System Config./ System Config.
Burner run time	Y	This measures the time spent in the Run state. A new value can be written here if the burner or controller is replaced.	Info/ Advanced Setup/ System Config./ Statistics Config.
CH setpoint	-	This setpoint is used to control the hydronic (Central	Quick Start
		Heat) function.	Info/ Advanced Setup/ CH Configuration
D gain (CH)	Υ	This gain is applied to the Differential term of the PID equation for the CH loop.	Info/ Advanced Setup/ CH Configuration
D gain (DHW)	Y	This gain is applied to the Differential term of the PID equation for the DHW loop.	Info/ Advanced Setup/ DHW Configuration
D gain (LL)	Y	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
		This gain is applied to the Differential term of the PID equation for the hydronic heating loop.	

Page 62 BRADFORD WHITE

Name	PW?	Function	How to get there
Demand switch (CH)	-	Set to "STAT terminal."	Info/ Advanced Setup/ CH Configuration
DHW pump control	Υ	The boiler pump can be turned on manually, or it	Info/ Test/ Manual Pump Operation
		can be set to operate automatically.	Info/ Advanced Setup/ System Config./ Pump Config.
DHW pump cycle count	Y	A new value can be written here if the pump or controller is replaced.	Info/ Advanced Setup/ System Config./ Statistics Config.
DHW pump overrun time	Υ	This indicates how long the DHW pump will remain on after demand from any source ends.	Info/ Advanced Setup/ System Config./ Pump Config.
DHW setpoint	-	This setpoint is used to control the Domestic Hot	Quick Start
		Water function.	Info/ Advanced Setup/ DHW Configuration
Digital I/O	-	This shows the status of selected switches and valves that are either On or Off.	Info/ Diagnostics
Display setup	-	Use this to change the lines that appear at the top of the Home display, and to set the brightness of the display.	Info/ Display Setup
General configuration	-	Used by the Bradford White factory.	Info/ Advanced Setup/ System Config./ System Config.
I gain (CH)	Υ	This gain is applied to the Integral term of the PID equation for the CH loop.	Info/ Advanced Setup/ CH Configuration
I gain (DHW)	Υ	This gain is applied to the Integral term of the PID equation for the DHW loop.	Info/ Advanced Setup/ DHW Configuration
I gain (LL)	Y	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
		This gain is applied to the Integral term of the PID equation for the hydronic heating loop.	
Installer password	Y	This can only be changed by a user with the OEM-level password.	Info/ Advanced Setup/ System Config./ System ID and Access
LCD contrast	-	Use this to change the brightness of the display.	Info/ Display Setup
Lockout history	-	This displays the 15 most recent lockouts.	Info/ Diagnostics/ History
Low water temp. (CH)	-	Used with Outdoor Reset –	Quick Start
		Above the point where Outdoor Reset stops adjusting for a higher outdoor temperature (the Max. Outdoor Temperature value), this parameter is used as the setpoint.	Info/ Advanced Setup/ CH Configuration/ Outdoor Reset Config.
Low water temp. (LL)	-	When using the Lead/ Lag system to control multiple boilers, with Outdoor Reset enabled –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Outdoor Reset
		Above the point where Outdoor Reset stops adjusting for a higher outdoor temperature (the Max. Outdoor Temperature value), this parameter is used as the setpoint.	
Manual burner operation	Υ	During testing, use this to turn the burner on and off.	Info/ Test
Master enable (LL)	-	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
		One of the controllers must be set up as the Lead Lag Master to supervise the Lead Lag system. The master function must be disabled on all of the other controllers. See the section on "About Lead Lag."	

Name	PW?	Function	How to get there
Max. outdoor temp. (CH)	-	Used with Outdoor Reset –	Quick Start
		This is the maximum outdoor temperature at which the Outdoor Reset feature will be active. Above this point, the Low Water Temp. will be used as the setpoint.	Info/ Advanced Setup/ CH Configuration/ Outdoor Reset Config.
Max. outdoor temp. (LL)	-	When using the Lead/ Lag system to control multiple boilers, with Outdoor Reset enabled – This is the maximum outdoor temperature at which	Info/ Advanced Setup/ Lead Lag Configuration/ LL Outdoor Reset
MB1 Modbus address	-	Allows for a specific address assignment for each control in the system (1-8).	Info/ Advanced Setup/ System Config./ System ID and Access
MB2 Modbus address	-	Allows for a specific address assignment for each control in the system (1-8).	Info/ Advanced Setup/ System Config./ System ID and Access
Min. boiler water temp. (CH)	-	Used with Outdoor Reset –  If a value is entered here, the temperature in the boiler will never be allowed to drop below this temperature. This will protect the boiler against possible damage due to expansion of ice inside the unit. (Notice that this is different from the "Low Water Temperature" described above.)	Info/ Advanced Setup/ CH Configuration/ Outdoor Reset Config.
Min. outdoor temp. (CH)	-	Used with Outdoor Reset –	Quick Start
		This is the maximum outdoor temperature at which the Outdoor Reset feature will be active. Below this point, the system will use the normal CH setpoint.	Info/ Advanced Setup/ CH Configuration/ Outdoor Reset Config.
Min. outdoor temp. (LL)	-	When using the Lead/ Lag system to control multiple boilers, with Outdoor Reset enabled – This is the maximum outdoor temperature at which the Outdoor Reset feature will be active. Below this point, the system will use the normal LL setpoint.	Info/ Advanced Setup/ Lead Lag Configuration/ LL Outdoor Reset
Min. water temp. (LL)	-	When using the Lead/ Lag system to control multiple boilers, with Outdoor Reset enabled – If a value is entered here, the temperature in the boiler will never be allowed to drop below this temperature. This will protect the boiler against possible damage due to expansion of ice inside the unit. (Notice that this is different from the "Low Water Temperature" described above.)	Info/ Advanced Setup/ Lead Lag Configuration/ LL Outdoor Reset
Modbus address	-	When using the Lead/ Lag system to control multiple boilers –  Each controller must have a unique Modbus address.	Info/ Advanced Setup/ System Config./ System ID and Access
Modulation sensor	-	Used with external modulation control – The choices are Outlet/ Inlet/ S5, S10, and None.	Info/ Advanced Setup/ CH Configuration
OEM ID	Υ	Cannot be changed by the Installer.	Info/ Advanced Setup/ System Config./ System ID and Access
OEM password	Υ	Cannot be changed by the installer.	Info/ Advanced Setup/ System Config./ System ID and Access
Off hysteresis (CH)	-	For hydronic heating (Central Heat) – The control system will not shut off the boiler until the temperature at the System sensor rises to the CH setpoint plus a hysteresis value (normally about 10°F).	Info/ Advanced Setup/ CH Configuration

Page 64 BRADFORD WHITE

Name	PW?	Function	How to get there
Off hysteresis (DHW)	-	When producing Domestic Hot Water – The control system will not shut off the boiler until the temperature at the System sensor rises to the DHW setpoint plus a hysteresis value (normally about 10°F).	Info/ Advanced Setup/ DHW Configuration
Off hysteresis (LL)	-	When using the Lead/ Lag system to control multiple boilers –  The control system will not shut off the boilers until the temperature at the System sensor rises to the Lead Lag CH setpoint plus a hysteresis value (normally about 10°F).	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
On hysteresis (CH)	-	For hydronic heating (Central Heat) – The control system will not fire the boiler until the temperature at the System sensor drops to the CH setpoint minus a hysteresis value (normally about 10°F).	Info/ Advanced Setup/ CH Configuration
On hysteresis (DHW)	-	When producing Domestic Hot Water – The control system will not fire the boiler until the temperature at the System sensor drops to the DHW setpoint minus a hysteresis value (normally about 10°F).	Info/ Advanced Setup/ DHW Configuration
On hysteresis (LL)	-	When using the Lead/ Lag system to control multiple boilers —  The control system will not fire the boilers until the temperature at the System sensor drops to the Lead Lag CH setpoint minus a hysteresis value (normally about 10°F).	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
Outdoor reset (CH)	-	Enable = Outdoor Reset feature turned on	Quick Start Info/ Advanced Setup/ CH Configuration/ Outdoor Reset Config.
Outdoor reset enable (LL)	-	When using the Lead/ Lag system to control multiple boilers – Enable = Outdoor Reset feature turned on	Info/ Advanced Setup/ Lead Lag Configuration/ LL Outdoor Reset
P gain (CH)	Υ	This gain is applied to the Proportional term of the PID equation for the hydronic (Central Heat) loop.	Info/ Advanced Setup/ CH Configuration
P gain (DHW)	Y	This gain is applied to the Proportional term of the PID equation for the Domestic Hot Water loop.	Info/ Advanced Setup/ DHW Configuration
P gain (LL)	Y	When using the Lead/ Lag system to control multiple boilers –  This gain is applied to the Proportional term of the PID equation for the hydronic loop.	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
Priority time	Y	If this parameter is non-zero, then a Domestic Hot Water demand takes priority over other demand sources for the specified time. The priority override timing is reset when demand from the DHW source turns off.	Info/ Advanced Setup/ DHW Configuration
Priority vs Central Heat	Y	If a CH call and a DHW call arrive at the same time, which has priority?	Info/ Advanced Setup/ DHW Configuration
Priority vs Lead Lag	Y	When using the Lead/ Lag system to control multiple boilers –  If a call for hydronic heat and a DHW call arrive at the same time, which has priority?	Info/ Advanced Setup/ DHW Configuration

Name	PW?	Function	How to get there
Pump exercise interval	Exercise interval Y The system can be set to exercise the pumps at set intervals. Enter a non-zero value to turn on the function.		Info/ Advanced Setup/ System Config./ Pump Config.
Pump exercise time	Y	If the pump exercise feature is enabled, this value sets the length of time that each pump will be exercised.	Info/ Advanced Setup/ System Config./ Pump Config.
Set high fire	Υ	This is used during combustion setup to set the "high fire" condition.	Info/ Test/ Forced Rate
Set low fire	Υ	This is used during combustion setup to set the "low fire" condition.	Info/ Test/ Forced Rate
Setpoint (LL)	-	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
		This setpoint is used to control the hydronic (Central Heat) function.	
Setpoint source (CH)	Υ	Set to "Local."	Info/ Advanced Setup/ CH Configuration
Setpoint source (LL)	Υ	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Master Config.
		Set to "Local."	
Follower enable (LL)	-	When using the Lead/ Lag system to control multiple boilers –	Info/ Advanced Setup/ Lead Lag Configuration/ LL Follower Config.
		One of the controllers must be set up as the Lead Lag Master to supervise the Lead Lag system.  The controllers on all of the other boilers must be enabled as Followers. See the section on "About Lead Lag."	
		The choices are: Disable/ Enable via Modbus Master/ Enable via SOLA Master	
Follower mode (LL)	Y	When using the Lead/ Lag system to control multiple boilers – Set to "Equal Run Time."	Info/ Advanced Setup/ Lead Lag Configuration/ LL Follower Config.
Start test	Υ	This is used during combustion setup to start the test firing.	Info/ Test
System pump control	Υ	The System pump can be turned on manually, or it	Info/ Test/ Manual Pump Operation
		can be set to operate automatically.	Info/ Advanced Setup/ System Config./ Pump Config.
System pump overrun time	Υ	This indicates how long the System pump will remain on after demand from any source ends.	Info/ Advanced Setup/ System Config./ Pump Config.
Temperature units	-	Fahrenheit or Celsius	Info/ Advanced Setup/ System Config./ System Config.
Warm weather shutdown	Υ	The system can be set to shut down if the outdoor temperature rises above a certain value.	Info/ Advanced Setup/ CH Configuration/ Warm Weather Shutdown
Warm weather shutdown setpoint	-	If warm weather shutdown is enabled – If the outdoor temperature is higher than this value, the system will be shut off for Central Heating functions.	Info/ Advanced Setup/ CH Configuration/ Warm Weather Shutdown

Page 66 **BRADFORD WHITE** 

# Appendix B -**ERROR MESSAGES**

This table includes a listing of the faults that might be generated by the controller, and displayed on the Operator Interface. Some of these can be corrected by an installer changing a parameter, while other conditions are more complicated, and will require a service technician.

The first column lists the code number that will appear at the beginning of the Lockout or Hold message. The second column lists a short description of the condition. The third column shows whether the condition will cause a Hold, or Lockout, or both. The fourth column lists some suggestions for corrective action.

Code	Description	L or H	Procedure
1	Unconfigured safety data	L	New device, complete device configuration and safety verification.
			2. If fault repeats, replace module.
2.	Waiting for safety data verification	L	Device in Configuration mode and safety parameters need verification and a device needs reset to complete verification.
	dud vermodien		Configuration ended without verification, re enter configuration, verify safety.
			parameters and reset device to complete verification.
			3. If fault repeats, replace module.
3	Internal fault:	Н	
	Hardware fault		
4	Internal fault:	Н	
	Safety Relay key feedback error		Internal fault
5	Internal fault:	Н	1. Reset module
	Unstable power (DC) output		2. If fault repeats, replace module.
6	Internal fault:	Н	
	Invalid processor clock		
7	Internal fault:	Н	
	Safety relay drive error		
8	Internal fault:	Н	
	Zero crossing not detected		
9	Internal fault:	Н	
	Flame bias out of range		
10	Internal fault:	L	
	Invalid burner control state		
11	Internal fault:	L	
	Invalid burner control state flag		
12	Internal fault:	Н	
	Safety relay drive cap short		
13	Internal fault:	H or L	
	PII (Pre-Ignition Interlock) shorted to ILK (Interlock)		
15	Internal fault:	L	
	Safety relay test failed due to feedback ON		
16	Internal fault:	L	
	Safety relay test failed due to safety relay OFF		

17	Internal fault:	L	
	Safety relay test failed due to safety relay		
	not OFF		Internal fault
18	Internal fault:	L	1. Reset module
	Safety relay test failed due to feedback not ON		2. If fault repeats, replace module.
19	Internal fault:	L	
	Safety RAM write		
20	Internal fault:	Н	
	Internal fault: Flame ripple and overflow		
21	Internal fault:	Н	
	Flame number of sample mismatch		
22	Internal fault:	Н	
	Flame bias out of range		
23	Internal fault:	Н	
	Bias changed since heating cycle starts		
24	Internal fault:	Н	
	Spark voltage stuck low or high		
25	Internal fault:	Н	
	Spark voltage changed too much during flame sensing time		
26	Internal fault:	Н	
	Static flame ripple		
27	Internal fault:	Н	
	Flame rod shorted to ground detected		
28	Internal fault:	Н	
	A/D linearity test fails		
29	Internal fault:	Н	
	Flame bias cannot be set in range		
30	Internal fault:	Н	
	Flame bias shorted to adjacent pin		
31	Internal fault:	Н	
	SLO electronics unknown error		
32-46	Internal fault:	L	
	Safety Key 0 through 14		
47	Flame Rod to ground leakage	Н	
48	Static flame (not flickering)	Н	
49	24 VAC voltage low/high	Н	Check the module and display connections.
			Check the module power supply and make sure that frequency, voltage and VA meet the specifications.
50	Modulation fault	Н	Internal sub-system fault.
51	Pump fault	Н	Review alert messages for possible trends.
52	Motor tachometer fault	Н	2. Correct possible problems.
			Internal sub-system fault.

Page 68 BRADFORD WHITE

53	AC input phases reversed	L	Check the module and display connections.
			2. Check the module power supply and make sure that both
			frequency and voltage meet the specifications.
			On 24 VAC applications, assure that J4 terminal 10 and J8 terminal 2 are connected together.
59	Internal Fault: Mux pin shorted	L	Internal Fault.
			1. Reset module.
			2. If fault repeats, replace module.
61	Anti short cycle	Н	Will not be a lockout fault. Hold Only.
62	Fan speed not proved	Н	Will not be a lockout fault. Hold Only.
63	SAFETY CHAIN (OFF) To diagnose, test all of the following safety devices if they are installed:	Н	Reset the low gas pressure valve and the high gas pressure valve.
	Condensate Level Switch – All Models		2. Check for power at Terminal Block 8 (TB8 for the 'Safety
	Heat Exchanger Fusible Link – All Models		Chain' components. See Figure 16 on page 25
	Optional Flow Switch		3. Check wiring and correct any faults.
	Additional High Limit (Field Supplied)		4. Check all safety interlocks connected to the safety circuit to
	Optional Pressure Switch		assure proper function.
	Optional Low Water Cut Off		5. If code persists, contact Tech Support.
	Low Pressure gas switch – Inlet Side of Gas Valve (Standard Equipment on CSD-1 Models)		
	High Pressure gas switch – Outlet Side of Gas Valve (Standard Equipment on CSD-1 Models)		
64	PII (Pre-Ignition Interlock) OFF	H or L	Check wiring and correct any faults.
			Check Preignition Interlock switches to assure proper functioning.
			3. Check the valve operation.
			4. Reset and sequence the module; monitor the PII status.
			5. If code persists, replace the module.
67	ILK (Interlock) OFF	H or L	Check wiring and correct any possible shorts.
			2. Check Interlock (ILK) switches to assure proper function.
60	II IX (Interlegic) ON	H or L	3. Verify voltage through the interlock string to the interlock input with a voltmeter.
68	ILK (Interlock) ON	HOIL	4. If steps 1-3 are correct and the fault persists, replace the module.
70	Wait for leakage test completion	Н	Internal Fault. Reset module.
, 5	Traction loanage tool completion	' '	Internal Fault Reset Hoddie.     If fault repeats, replace module.
78	Demand Lost in Run	Н	Check wiring and correct any possible errors.
		' '	If previous steps are correct and fault persists, replace the
			module.
79	Outlet high limit	H or L	Check wiring and correct any possible errors.
			2. Replace the outlet high limit.
			If previous steps are correct and fault persists, replace the module.

	T	1	I
80	DHW (Domestic Hot Water) high limit	H or L	Check wiring and correct any possible errors.
			2. Replace the DHW high limit.
			If previous steps are correct and fault persists, replace the module.
81	Delta T limit	H or L	Check inlet and outlet sensors and pump circuits for proper operation.
			2. Recheck the Delta T Limit to confirm proper setting.
			3. If previous steps are correct and fault persists, replace the module.
82	Stack limit	H or L	Check wiring and correct any possible errors.
			2. Replace the Stack high limit.
			If previous steps are correct and fault persists, replace the module.
91	Inlet sensor fault	Н	Check wiring and correct any possible errors.
			2. Replace the Inlet sensor.
			If previous steps are correct and fault persists, replace the module.
92	Outlet sensor fault	Н	Check wiring and correct any possible errors.
			2. Replace the Outlet sensor.
			3. If previous steps are correct and fault persists, replace the module.
93	DHW (Domestic Hot Water) sensor fault	Н	Check wiring and correct any possible errors.
			2. Replace the DHW sensor.
			3. If previous steps are correct and fault persists, replace the module.
94	Header sensor fault	Н	Check wiring and correct any possible errors.
			2. Replace the header sensor.
			3. If previous steps are correct and fault persists, replace the module.
95	Stack sensor fault	Н	Check wiring and correct any possible errors.
			2. Replace the stack sensor.
			3. If previous steps are correct and fault persists, replace the module.
96	Outdoor sensor fault	Н	Check wiring and correct any possible errors.
			2. Replace the outdoor sensor.
			3. If previous steps are correct and fault persists, replace the module.
97	Internal Fault: A2D mismatch.	L	Internal Fault.
98	Internal Fault: Exceeded VSNSR voltage tolerance	L	Reset module.     If fault repeats, replace module.
99	Internal Fault: Exceeded 28V voltage tolerance	L	
100	Pressure Sensor Fault	Н	Verify the pressure sensor is a 4-20 mA source.
			Check wiring and correct any possible errors.
			3. Test the pressure sensor for correct operation.
			4. Replace the pressure sensor.
			5. If previous steps are correct and fault persists, replace the module.
	· · · · · · · · · · · · · · · · · · ·		A.

Page 70 BRADFORD WHITE

105	Flame detected out of sequence	H or L	Check that flame is not present in the combustion chamber.  Correct any errors.
			Make sure that the flame detector is wired to the correct terminal.
			3. Make sure the F & G wires are protected from stray noise pickup.
			4. Reset and sequence the module. If code reappears, replace the flame detector.
			5. Reset and sequence the module. If code reappears, replace the module.
106	Flame lost in MFEP	L	Check the main valve wiring and operation - correct any errors.
107	Flame lost early in run	L	2. Check the fuel supply.
	·		3. Check fuel pressure and repeat turndown tests.
108	Flame lost in run	L	4. Check ignition transformer electrode, flame detector, flame detector siting or flame rod position.
		<u> </u>	5. If steps 1 through 4 are correct and the fault persists, replace
109	Ignition failed	L	the module.
110	Ignition failure occurred	Н	Hold time of recycle and hold option. Will not be a lockout fault.
111	Flame current lower than weak threshold	Н	Hold only. Internal hardware test. Not a lockout.
113	Flame circuit timeout	L	Flame sensed during initiate or off cycle. Produces a Hold for 240 seconds. If still present after 240 seconds, system will lockout.
122	Lightoff rate proving failed	L	
123	Purge rate proving failed	L	Check wiring and correct any potential wiring errors.
128	Fan speed failed during prepurge	H or L	2. Check VFD's (Variable-speed Fan Drive) ability to change
129	Fan speed failed during preignition	H or L	speeds.
130	Fan speed failed during ignition	H or L	3. Change the VFD
131	Fan movement detected during standby	Н	4. If the fault persists, replace the module.
132	Fan speed failed during run	Н	
137	ILK (Interlock) failed to close	Н	Check wiring and correct any possible shorts.
			2. Check Interlock (ILK) switches to assure proper function.
			3. Verify voltage through the interlock string to the interlock input with a voltmeter.
			4. If steps 1-3 are correct and the fault persists, replace the module.
149	Flame detected	H or L	Create a Hold if a flame is detected during Safe Start check up to Flame Establishing period.
150	Flame not detected	Н	Sequence returns to standby and restarts sequence at the beginning of Purge after the HF switch opens if flame detected during Safe Start check up to Flame Establishing period.
154	Purge Fan switch On	H or L	Purge fan switch is off when it should be on.
			Check wiring and correct any errors.
			3. Inspect the Purge Fan switch J6 terminal 3 and its
155	Purge fan switch Off	H or L	connections. Make sure the switch is working correctly and is
			not jumpered or welded.
			<ul><li>4. Reset and sequence the relay module.</li><li>5. If the fault persists, replace the relay module.</li></ul>
	<u>l</u>		o. It the laut persists, replace the relay intotale.

156	Combustion pressure and flame On	H or L	Check that flame is not present in the combustion chamber.  Correct any errors.
			2. Make sure that the flame detector is wired to the correct terminal.
			3. Make sure the F & G wires are protected from stray noise pickup.
157 (	Combustion pressure and flame Off	L	Reset and sequence the module, if code reappears, replace the flame detector.
			5. Reset and sequence the module, if code reappears, replace the module.
158	Main valve On	L	Check the main valve terminal wiring and correct any errors.
			Reset and sequence the module. If fault persists, replace the module.
159	Main valve Off	L	Check the main valve terminal wiring and correct any errors.
			Reset and sequence the module. If fault persists, replace the module.
160 I	Ignition On	L	Check Ignition terminal wiring and correct any errors.
			Reset and sequence the module. If fault persists, replace the module.
161 I	Ignition Off	L	Check the ignition terminal wiring and correct any errors.
			2. Reset and sequence the module. If fault persists, replace the module.
164 E	Block intake On	L	Check wiring and correct any errors.
			Inspect the Block Intake Switch to make sure it is working correctly.
$\vdash$			3. Reset and sequence the module.
165 E	Block intake Off	L	4. During Standby and Purge, measure the voltage across the switch. Supply voltage should be present. If not, the Block Intake Switch is defective and needs replacing.
			5. If the fault persists, replace the relay module.
172	Main relay feedback incorrect	L	
174	Safety relay feedback incorrect	L	Internal fault.
175	Safety relay open	L	1. Reset module.
176 I			2. If fault repeats, replace module.
_ · · · · _ · ·	Main relay On at safe start check	L	2. If fault repeats, replace module.


Page 72 BRADFORD WHITE


184	Invalid Blower/ HSI output setting	L	
185	Invalid Delta T limit enable setting	L	
186	Invalid Delta T limit response setting	L	
187	Invalid DHW (Domestic Hot Water) high limit enable setting	L	
188	Invalid DHW (Domestic Hot Water) high limit response setting	L	Recheck selected parameters, reverify and reset module.
189	Invalid flame sensor type setting	L	2. If fault repeats, verify electrical grounding.
192	Invalid igniter on during setting	L	3. If fault repeats, replace module.
193	Invalid ignite failure delay setting	L	
194	Invalid ignite failure response setting	L	
195	Invalid ignite failure retries setting	L	
196	Invalid ignition source setting	L	
197	Invalid interlock open response setting	L	
198	Invalid interlock start check setting	L	
199	Invalid LCI (Limit Control Input) enable setting	L	
200	Invalid lightoff rate setting	L	
201	Invalid lightoff rate proving setting	L	
202	Invalid MFEP (Main Flame Establishing Period) time setting	L	
203	Invalid MFEP (Main Flame Establishing Period) flame failure response setting	L	
204	Invalid NTC sensor type setting	L	


205	Invalid Outlet high limit response setting	L
207	Invalid PII (Pre-Ignition Interlock) enable setting	L
210	Invalid Postpurge time setting	L
211	Invalid Power up with lockout setting	L
212	Invalid Preignition time setting	L
213	Invalid Prepurge rate setting	L
214	Invalid Prepurge time setting	L
215	Invalid Purge rate proving setting	L
216	Invalid Run flame failure response setting	L
217	Invalid Run stabilization time setting	L
218	Invalid Stack limit enable setting	L
219	Invalid Stack limit response setting	L
220	Unconfigured Delta T limit setpoint setting	L
221	Unconfigured DHW (Domestic Hot Water) high limit setpoint setting	L
222	Unconfigured Outlet high limit setpoint setting	L
223	Unconfigured Stack limit setpoint setting	L
224	Invalid DHW (Domestic Hot Water) demand source setting	L
225	Invalid Flame threshold setting	L
226	Invalid Outlet high limit setpoint setting	L
227	Invalid DHW (Domestic Hot Water) high limit setpoint setting	L
228	Invalid Stack limit setpoint setting	L
229	Invalid Modulation output setting	L
230	Invalid CH (Central Heat) demand source setting	L
231	Invalid Delta T limit delay setting	L
232	Invalid Pressure sensor type setting	L
234	Invalid Outlet high limit enable setting	L
235	Invalid Outlet connector type setting	L
236	Invalid Inlet connector type setting	L
237	Invalid DHW (Domestic Hot Water) connector type setting	L
238	Invalid Stack connector type setting	L
239	Invalid Header connector type setting	L
240	Invalid Outdoor connector type setting	L

- 1. Recheck selected parameters, reverify and reset module.
- 2. If fault repeats, verify electrical grounding.
- 3. If fault repeats, replace module.

Page 74 BRADFORD WHITE

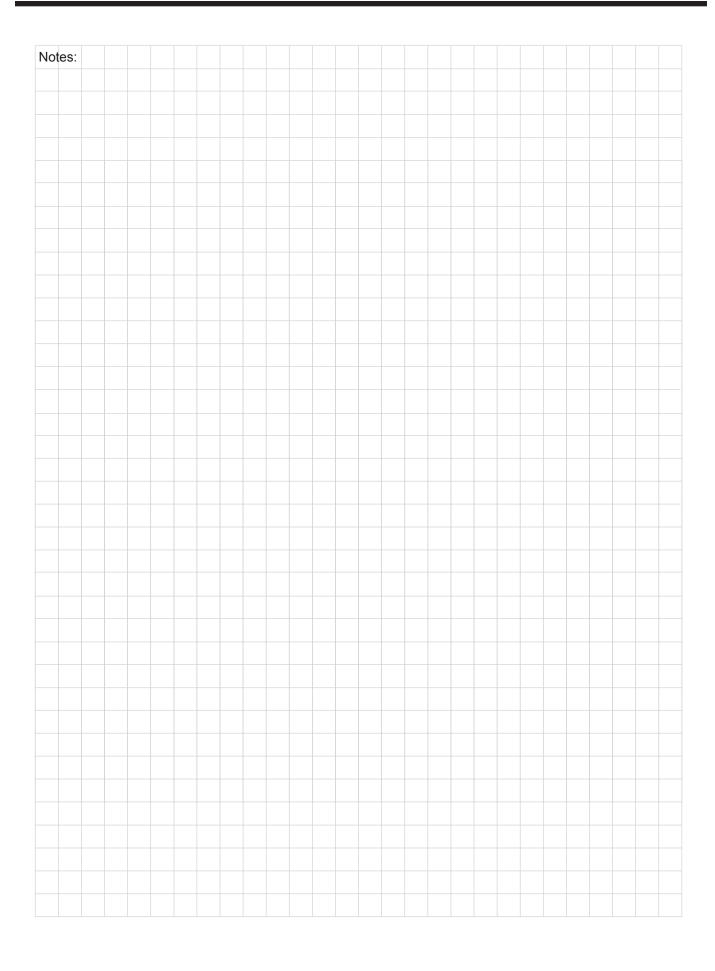

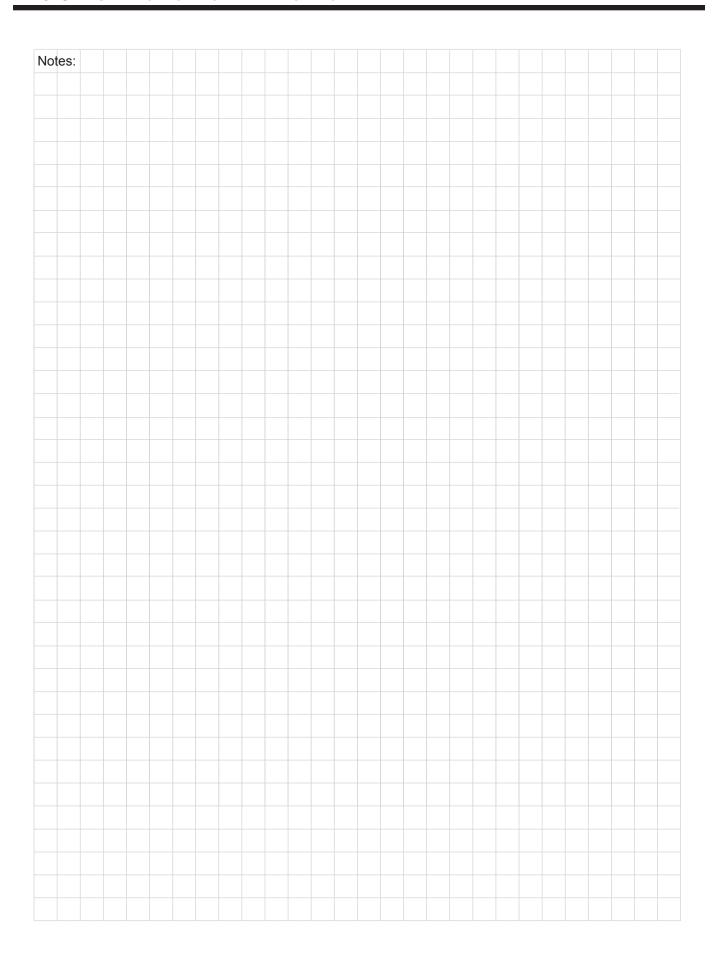

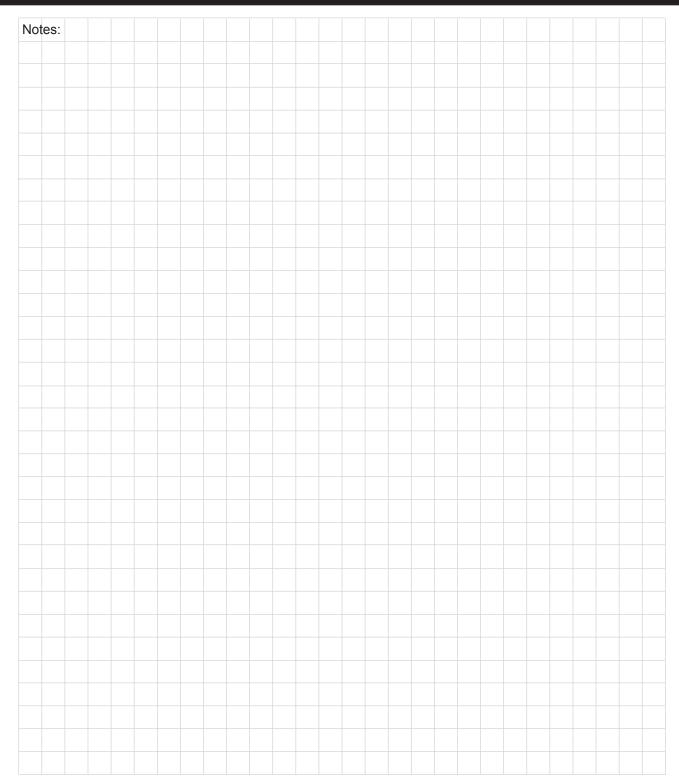

Dimensions and specifications subject to change without notice in accordance with our policy of continuous product improvement.











H2357200F

