 





## Delta Hand Shower Unit Installation Instructions

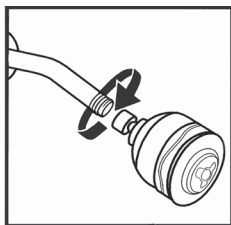

### 1. Remove Existing Shower Head

 
Turn the existing shower head counter-clockwise with adjustable wrench or pliers. Use care not to unscrew the shower arm; hold the shower arm secure. Note: If your shower arm has a ball on the end of it, it will not work with this shower unit and will need to be replaced with a standard shower arm.

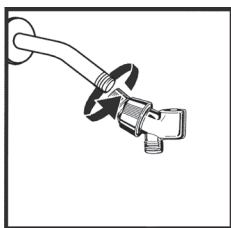


### 2. Install Shower Mount

It is recommended to wrap Plumber Tape (not included) around the threads of the shower arm only. Hand tighten the large end of the Shower Arm Mount clockwise onto the exposed shower arm threads until tight. Do not use a wrench or pliers.

Hand tighten the ridged nut clockwise to the Shower Arm Mount outlet. Do not use a wrench or pliers.

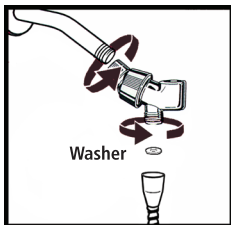

**Note:** Many state and local plumbing codes require a vacuum breaker be installed with a hand shower. This helps to prevent the back flow of water into your community's water supply. Please contact us at 1-800-421-0001 for more information or how to obtain a vacuum breaker.

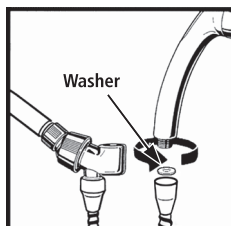

### 3. Connect Tapered End of Hose to Hand Shower

Seat the Washer firmly into the Hose nut. Carefully align the threads of the Hose directly to the Hand Shower. Hand tighten - do not use a wrench or pliers. Then place the Hand Shower into the Shower Arm Mount. Rotate the Shower Arm Mount into desired position to hold the Hand Shower.

**Lifetime Warranty:** Delta Faucet warrants to the owner of this product that the product is free from defects in material or workmanship for the period stated above from the date of purchase.

If this product malfunctions or becomes damaged, stop use and return it to the dealer where purchased or the manufacturer (we recommend to ship via United Parcel Service):

If in the USA:  
Delta Faucet Company  
Product Service  
55 E. 111th Street  
Indianapolis, IN 46280

If in Canada:  
Masco Canada Limited  
46 Bosworth Court  
Brantford, ON N3T 5N9

We will repair or replace, at our discretion, at no charge.

This warranty gives you specific legal rights. You may also have other rights that vary where you reside.

For assistance with problems with installation: In the USA, call toll free 1-800-421-0001, 8:00 a.m. to 6:00 p.m. Eastern Standard Time, Monday - Friday.

**Caution:** Use of cleaners or other chemicals not specifically recommended for plastic or ABS may result in damage to shower parts and voids the warranty.

### Selecting the Spray Function of Your ActivTouch™ Hand Shower

To select the spray function of your Hand Shower, simply press down on the appropriate button (or combination of buttons) located on the back of your Hand Shower. The first button with the icon (☹) signifies a wide spray. The second button with the icon (☺) signifies a massage spray. The third button with the icon (☹) signifies a narrow spray. Any one or combination of two or three buttons can be used to achieve different spray functions. The chart on the right indicates what these functions are.



### Pause Control Reduces Water Flow

To operate the pause control, press the button from the front of the Hand Shower handle in order to bring the water output to a trickle. In order to make the water flow normally again, press the button in from the back of the Hand Shower handle.

**\*WARNING:** Plumbing Codes require that shower heads and hand showers provide a small but continuous flow of water (trickle) when in "PAUSE" mode. Because of this continuous flow, in certain circumstances pressure variations in the water line and/or changes in the position of the shower temperature control handle while in "PAUSE" mode could result in dramatic changes to the temperature of the water when the shower head or hand shower is returned to the "ON" position.

ALWAYS point the shower head away from yourself when returning to the "ON" position and feel the water with your hand before resuming your shower to ensure the water flow is not too hot or too cold. DO NOT allow children or others who might not understand this warning to use the "PAUSE" function.

● = Pressed down button  
○ = Not pressed down button

