# **Isle**® Single Lever Kitchen Faucet

# Model D35409000

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.





ш

S

ш

 $\alpha$ 

 $\mathbf{\alpha}$ 

Ш

⋖

S

#### RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.








Flat Blade Screwdriver

#### **ROUGHING-IN DIMENSIONS:**

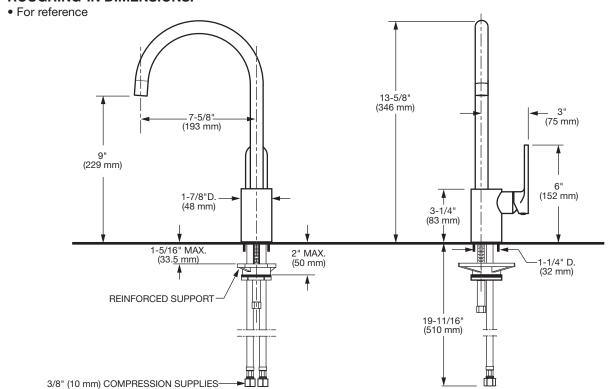

#### In the United States:

© AS America, Inc. 2017

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734

#### In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

# In Mexico:

Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540


Toll Free: 01-800-8391200 www.DXV.mx


Product names listed herein are trademarks of AS America, Inc.

### 1 INSTALL FAUCET

**CAUTION** Turn off hot and cold water supplies before beginning.

- Seat SEAL (1) into under side of FAUCET BASE (2). Fig. A.
- Feed FAUCET SUPPLIES (3), and MOUNTING STUD (4) through the mounting hole of mounting surface. Fig. A.
- From below, install SUPPORT PLATE (8), GASKET (7) with RETAINING WASHER (5) onto MOUNTING STUD (4). Install MOUNTING NUT (6) onto MOUNTING STUD (4). Fig. B.
- Adjust Faucet so that it is centered. Tighten MOUNTING NUT (6) to complete faucet mounting. Fig. B.

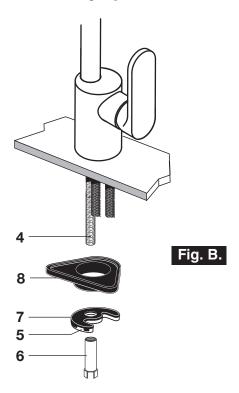

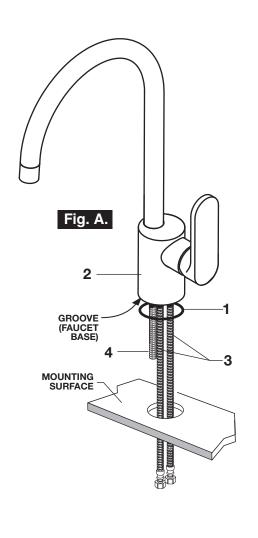


## 2 MAKE WATER SUPPLY CONNECTIONS

- Connect FLEXIBLE SUPPLIES (1, 2) directly to wall supplies.
- Connection on fitting supplies are 3/8" (8 mm) compression. Connect left SUPPLY (1) to Hot (Marked with a Red Stripe) and right supply to COLD (2) wall supply (Marked with a Blue Stripe). Use adjustable wrench to tighten connections. Do not over tighten.
- Faucet supplies are 20" (508 mm) long from faucet base.


Note: If additional supply length is required, installer must purchase additional parts separately.

Important: If SUPPLY HOSES (1, 2) are to long, loop as illustrated to avoid kinking.

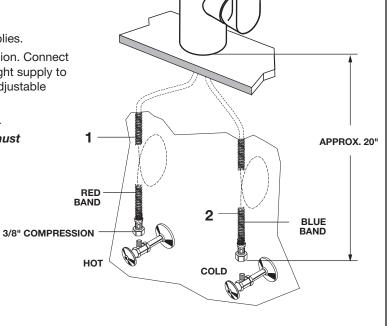

## 3 TEST INSTALLED FAUCET

- With HANDLE (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (3).
- Operate HANDLE (1) to flush water lines thoroughly.
- Replace AERATOR (3).

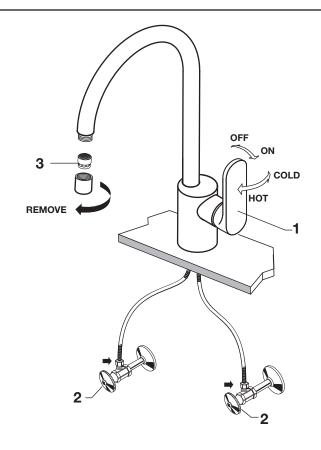

## 4 SERVICE

# Clogged CARTRIDGE outlets or inlets may cause reduced

flow. To clean, first turn off water supply then:

• Pull out INDEX BUTTON (1). Loosen HANDLE SCREW (2) with 2.5 mm Hex Wrench, then pull HANDLE (3) off.

• Unthread CARTRIDGE COVER (4) with CARTRIDGE RING NUT KEY (7) supplied with faucet.

• Remove CARTRIDGE (5). Clean inlets of CARTRIDGE (5) and MANIFOLD (6).

• Reassemble CARTRIDGE (5). Replace CARTRIDGE COVER (4) and HANDLE (3) assembly, check flow.

 AERATOR (8) may accumulate dirt causing distorted and reduced water flow. Remove AERATOR (8) and rinse clean and replace.

