

- 1) Pull bulb out of lamp holder.
- 2) Insert new bulb into lamp holder
- 3) Re-attach contact to bulb