



Golden Iridescence™

A Kichler® Décor™ ceiling fan

Designed to coordinate with a popular Kichler Lighting collection.

KICHLER® SINCE 1938
CEILING FANS 

Kichler® Lighting
7711 East Pleasant Valley Road
P.O. Box 318010
Cleveland, Ohio 44131-8010

Customer Service
866.558.5706
8:30 AM to 5:00 PM EST,
Monday - Friday

Instruction Manual

KICHLER® SINCE 1938
CEILING FANS 

"CAUTION-RISK OF FIRE"
CONSULT A QUALIFIED ELECTRICIAN TO
ENSURE CORRECT BRANCH CIRCUIT
CONDUCTOR.

1. SAFETY RULES

WARNING! RISK OF ELECTRIC SHOCK

All electrical connections must be in accordance with local codes, ordinances, or national codes. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified electrician. Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at fuse block. Turning power off using fan switch (speed control on/off) is not sufficient to prevent electrical shock.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which cannot be built into any product. These factors must be supplied by the person (s) caring for and operating the unit.

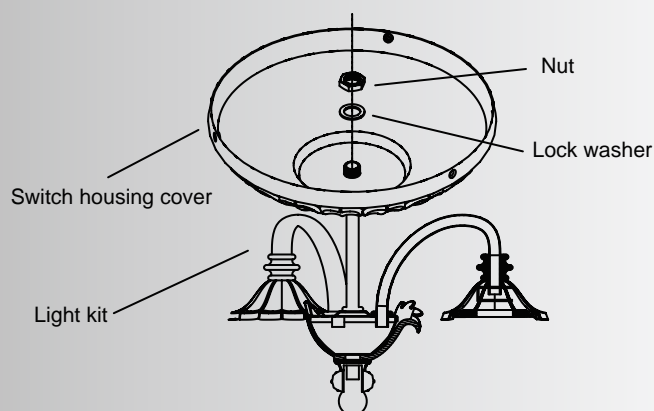


Fig. 1

2. INSTALLING THE LIGHT KIT

1. Take the fixture out of the box and packing foam. Remove the Switch Housing cover from your Ceiling Fan. Remove the decorative plate, decorative ball and finial from it. Thread the Light Fixture into the hole in the center of the Switch Housing cover. On the inside of the Switch Housing cover, add a lock washer and nut to the Light Fixture and tighten. (Fig. 1)

Note: All screws must be checked and retightened where necessary.

2. You can find total 4 pcs plastic nuts preinstalled on the end of the black and white wires coming from the switch housing cover and light fixture. Remove the plastic nuts first, and twist the bare section of same color wires into one body, then place the plastic nut on it. Finally match up the color on the side of the connector and push them together until the snap engages. (Fig. 2)

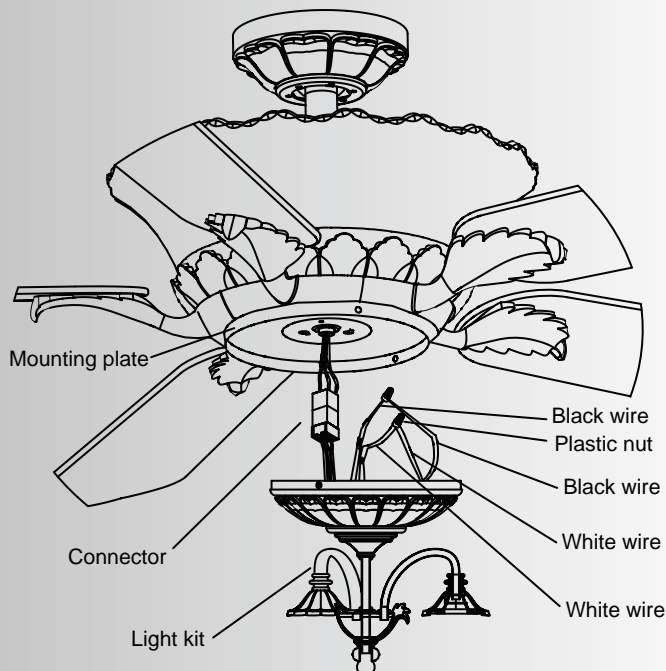


Fig. 2

3. Carefully push all of the wires into the Switch Housing. Align the keyholes on the light fixture with the screws on the mounting plate. Turn the light fixture counterclockwise and tighten all three screws . (Fig 3)

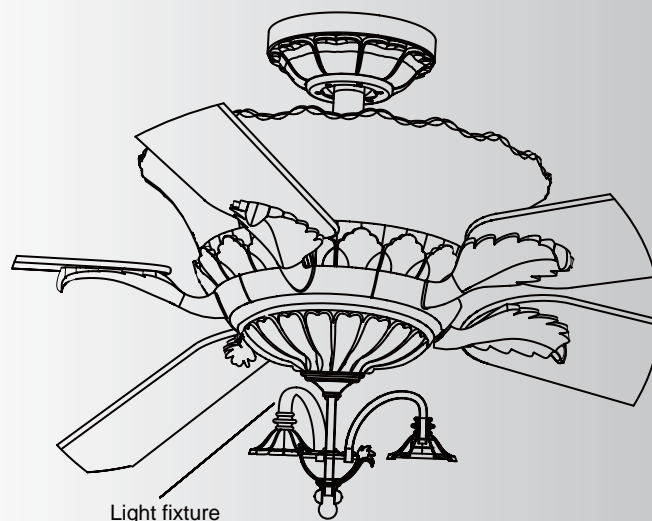


Fig. 3

4. INSTALLING THE LIGHT BULBS & GLASS SHADES

1. Remove the large nut from each light socket. Place a glass shade over the socket and replace the large nut and tighten with the tool provided. Make sure that the glass shade is straight. Repeat this process for each of the light fixture arms. (Fig. 4)

2. Install 3,60 Watt (maximum) candelabra base light bulbs (not included) (Fig. 4)

3. Restore power only after the installation is complete.

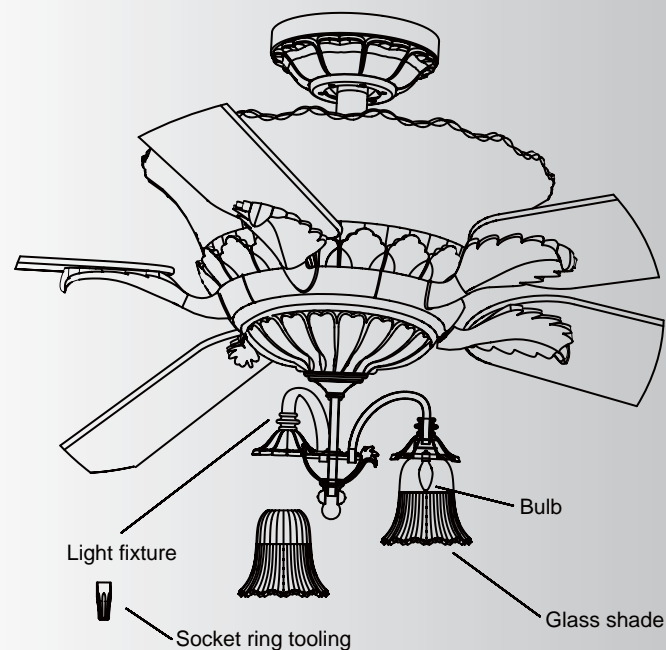


Fig. 4