 
 
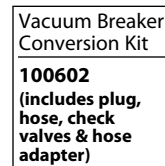 
 
 
 
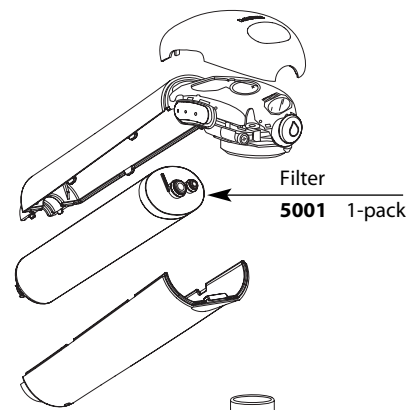 
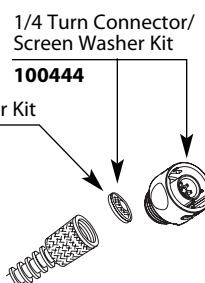 
 
 
 
 


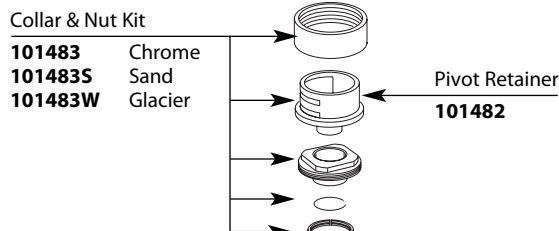

Buy it for looks. Buy it for life.®

Illustrated Parts

Order by Part Number

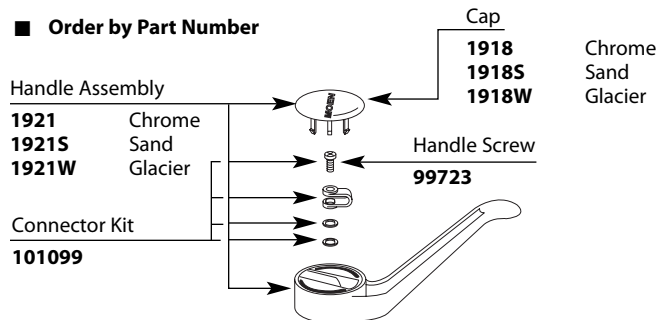

*Note: For Battery & Screw Replacement
Instructions See INS133A

PureTouch® Single Control Kitchen Faucet with Water Filter & Pullout Spray		
MODEL	HANDLE	FINISH
DISCONTINUED		
87810	Lever	Chrome
87810S	Lever	Sand
87810W	Lever	Glacier