

Models/Modelos/Modèles

P1547LF-▲

P1547LF-M-0.5

P1547LF-M

Series/Series/Seria

RP101772▲

Handle Kit
Conjunto de manija
Montage de la manette

RP101773▲




Bonnet Nut & Cap
Bonete Tapón y Tapa
Chapeau et Chapeau

RP63206

Valve Cartridge
Válvula de Cartucho
Cartouche de Soupape

RP103420▲

Metal Push Pop-up Assembly
Control de rebose para desagües manuales
Renvoi mécanique à poussoir avec trop-plein
(For P1547LF-M-0.5 & P1547LF-M only)

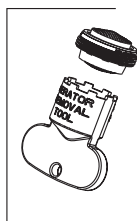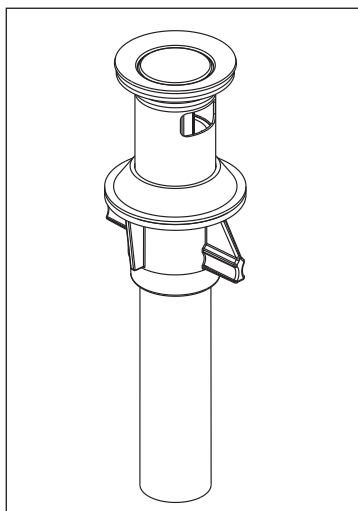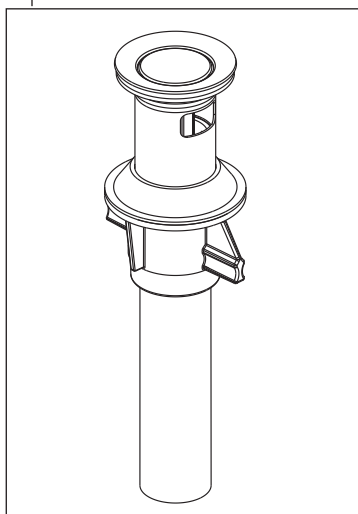


RP93979-0.5
0.5 GPM (1.9 L/Min)
Aerator & Wrench
Aireador y Llave
Aérateur et Clé

RP93979-1.0
1.0 GPM (3.8 L/Min)
Aerator & Wrench
Aireador y Llave
Aérateur et Clé

RP103419▲


Push Pop-up Assembly
Control de rebose para
desagües manuales
Renvoi mécanique à poussoir avec
trop-plein

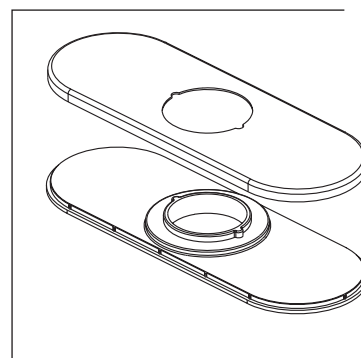

RP101774▲
(Escutcheon optional, included)
Escutcheon with Baseplate (3 Hole)
Chapetón y Empaque (3 agujeros)
Boîtier et Joint (3 trous)



 RP47029
Bracket
Abrazadera
Support



RP47030
Nut & Wrench
Tuerca y Llave
Ecrou et clé

▲ Specify Finish / Especifica el acabado / Précisez la finition