



Important: Read all instructions prior to installation

Wireless Quattro 4 Zone Dimmer

12-36vdc LED Wall+Mini Remote Control

Parts Included

- 1 - 4 Zone Wall Dimmer Control
(or use as mini touchpad remote)
- 1 - CR2032 Long Life Battery (CR2025 Sold Separately)
- 1 - Installation Instructions

Wall Buttons

Button Actions: On/Off/Dimming Functions

Left & Right Buttons All Zones	Single push of Left zone button turns lights on in paired zone(s). Single push of Right zone button turns lights off in paired zone(s).
Left & Right Buttons All Zones	Press and hold Left zone button to increase brightness. Press and hold Right zone button to decrease brightness.
Note	Remote needs to be in range of receivers. Average range is 100'. Range will decrease as battery power gets low.

Pairing Instructions:

After you have wired all the receivers according to your project requirements, do the following:

- If you use multiple receivers, you have two choices: (1) Have all the receivers in the same zone, like zone 1 for example, or (2) have each receiver(s) in a different zone, like Zone 1, 2, 3 or 4.
- In order for each receiver to know what Zone it belongs to, you will need to "pair" it to the zone you wish to use. In order to do this, you need to power up the unit with the LED lights hooked to it. Then reset the receiver by pressing and holding the "Learning" button until the lights blink 2 times. To "pair" you need to quickly and firmly press and release the "Learning" button on the receiver, and immediately after that you will need to quickly press and release the **ON** or **OFF** button on the **SA-40586** control for the zone you wish to use. Once you do that, the lights will blink once. Now your **Remote** and **Receiver** are **paired**.
- Do the same for any other receivers if you use them.


NOTE: Reset the receiver by pressing and holding the "Learning" button until the lights blink 2 times. You can now pair it to a different zone.

#SA 40586 Wireless Wall Control Installation


- Install the Long Life Cr2032 battery in the touchpad.
(Can be used as a handheld remote. Also works with Cr 2025 battery type, sold separately)
- Securely attach the touchpad to the mounting plate.
- Install the touchpad mounting plate assembly into the desired electrical box location. The **#SA-40586** can be gaged with other switches.
- Attach your coverplate (not included) and you're ready to pair your receiver to your touchpad.



Set-Up Example 1

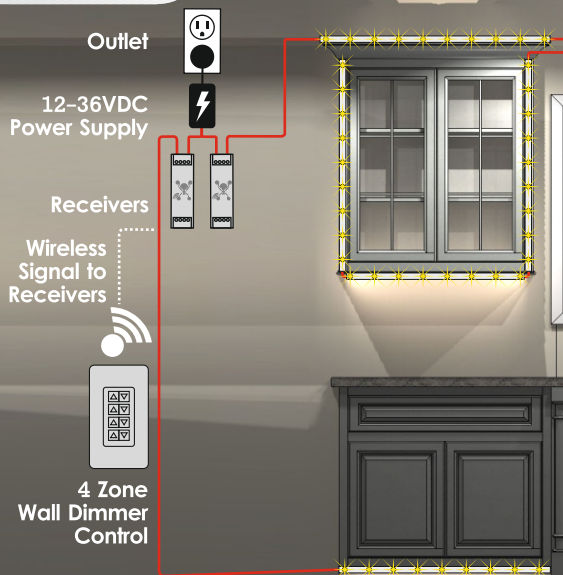

Set-Up Example 2

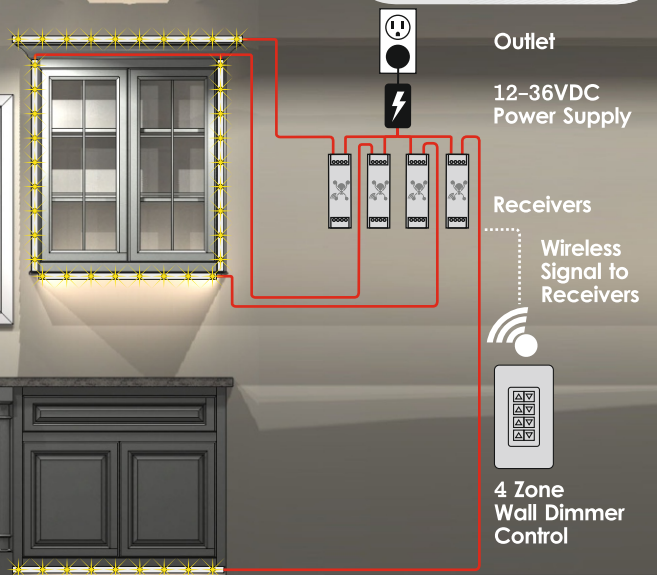

SA 40586 LED Dimmer Wall Switch

Operating Voltage	Operating Frequency
3VDC	434 MHz/868 MHz

SA 40587 LED Receiver

Input Voltage	Current	Output Voltage
1X(12-36)VDC	1X8A	1X(96-288)W



Safety

DO NOT expose the remote or controller to direct or indirect moisture

Set-Up Instructions

