## American Standard


#### **EDGEMERE™**

18" TOWEL BAR
24" TOWEL BAR
TOWEL RING
ROBE HOOK
TOILET PAPER HOLDER
WITH PIVOTING BAR

Thank you for selecting American Standard...
the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

INSTALLATION INSTRUCTIONS 7018.018 Series 7018.024 Series 7018.190 Series 7018.210 Series 7018.230 Series

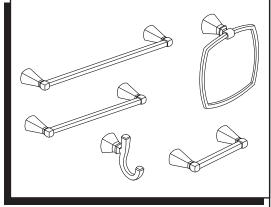

Certified to comply with ANSI A112.18.1M

#### **RECOMMENDED TOOLS**











#### INSTALLATION OF MOUNTING BRACKETS FOR ALL WALL MOUNTED ACCESSORIES

- The WALL MOUNTED ACCESSORIES work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the ACCESSORY is to be installed on a tile or plaster wall, the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. Make sure the centerline is level. Using the MOUNTING BRACKET (1) as a template, mark the two spots for the mounting holes. If MOUNTING BRACKET (1) is secured to a stud or cross brace. drill small pilot holes for SCREWS (2).
- For installations on tiled walls or drywall, use TILE ANCHORS (3) and SCREWS (2) for securing MOUNTING BRACKET (1) to wall. Drill two 1/4" diameter holes a minimum of 1-1/4" deep. Insert the two TILE ANCHORS (3) flush with face of finished wall. Place MOUNTING BRACKET (1) over TILE ANCHORS (3) and insert SCREWS (2) provided with a flat blade screwdriver. See illustration below.

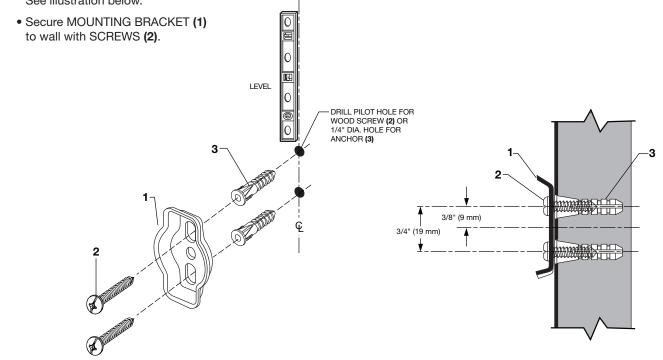


## 2 TOWEL RING and ROBE HOOK INSTALLATION

Refer to Step 1 for installation of MOUNTING BRACKETS (2). Align accessory and place ACCESSORY ESCUTCHEON (1) onto MOUNTING BRACKET (2) Secure accessory with SET SCREW (3).

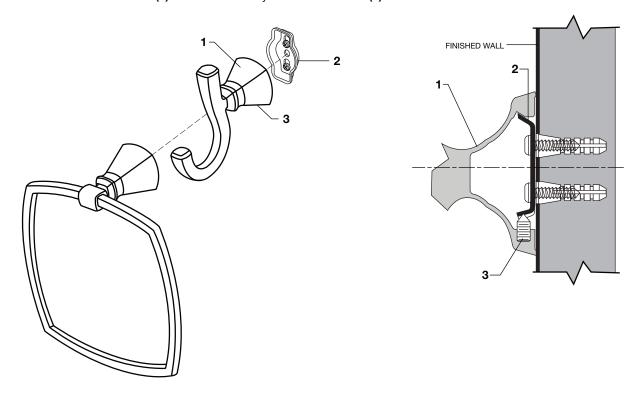


## 3 INSTALL TOILET PAPER HOLDER

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 7-1/8" (182 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

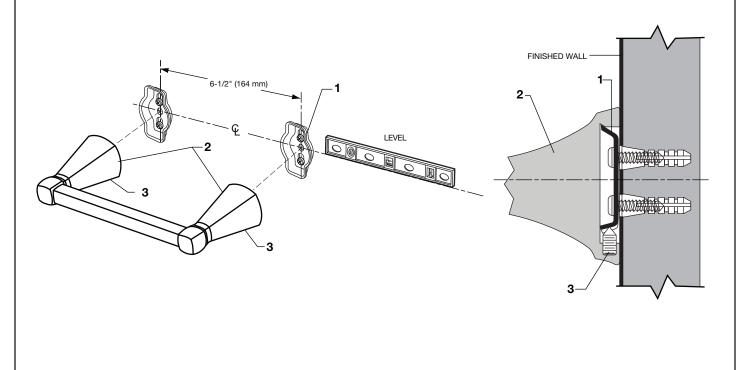


#### **18" TOWEL BAR INSTALLATION**

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 18" (457.2 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

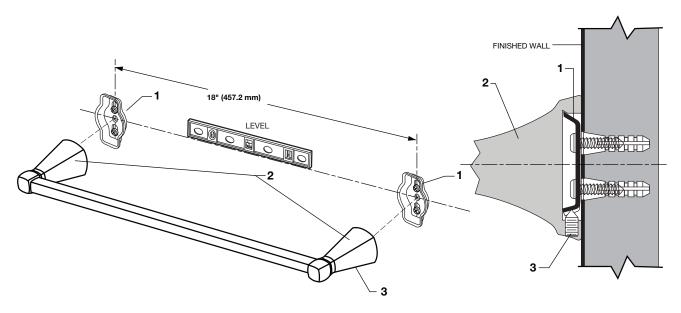

#### 24" TOWEL BAR INSTALLATION

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 24" (609.6 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3).

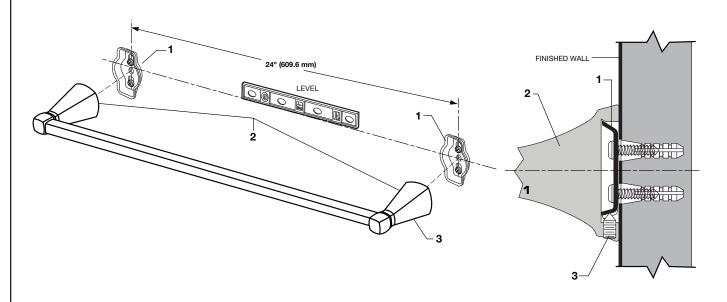

#### 6 CARE INSTRUCTIONS:

DO: CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.


# American Standard

### **EDGEMERE**™

18" TOWEL BAR
24" TOWEL BAR
TOWEL RING
ROBE HOOK
TOILET PAPER HOLDER
WITH PIVOTING BAR

**MODEL NUMBER** 

7018.018 Series 7018.024 Series 7018.190 Series 7018.210 Series 7018.230 Series

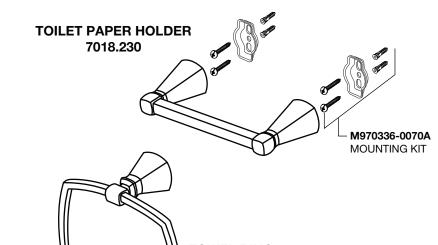


TOWEL RING 7018.190



24" TOWEL BAR 7018.024

18" TOWEL BAR ~ 7018.018



CHROME	002
SATIN NICKEL	295
LEGACY BRONZE	278

#### HOT LINE FOR HELP

For toll-free information and answers to your questions, call: 1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200



PART OF LIXIL

**M970336-0070A**MOUNTING KIT