
6 INSTALL HOSE AND HAND SHOWER TEST SHOWER SYSTEM


- Install SEAL (1) into COUPLING NUT (2). Connect COUPLING NUT (2) to WALL SUPPLY NIPPLE (3) and tighten.
- INSTALL second SEAL (4) into SPRAY HOSE END (5) and connect HAND SHOWER (6) to SPRAY HOSE END (5). Hand tighten.
- Turn on water supplies and check all fuctions of the SHOWER SYSTEM KIT. Check for any leaks.

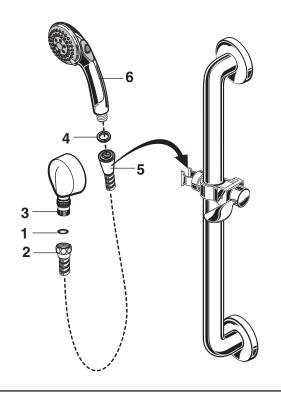

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

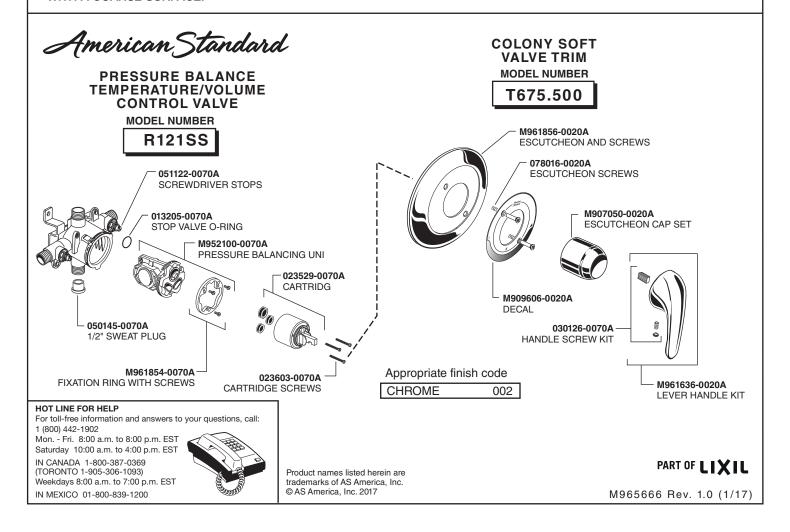

American Standard

WALL SUPPLY 8888.037.002

8888037.002 WALL SUPPLY

M962520-0020A CHECK VALVE

> 030782-0020A HOSE KIT

36" SLIDE BAR 1660.236.002

3-FUNCTION HAND SHOWER


1660766.002 (1.5 gpm)

1660767.002 (2.5 gpm)

M9641800020A
SPRAY HOLDER
ASSEMBLY

METAL HOSE

8888.035.002

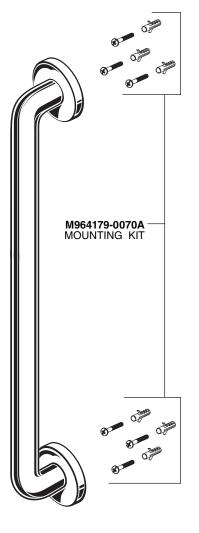

Appropriate finish code

CHROME 002

HOT LINE FOR HELP

For toll-free information and answers to your questions, call: 1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200



Product names listed herein are trademarks of AS America, Inc. © AS America, Inc. 2017

PART OF LIXIL

M965666 Rev. 1.0 (1/17)