



B12,B15,B18,B21
ASSEMBLY INSTRUCTIONS

- STEP 1: Joint side panel with back panel
STEP 2: Joint bottom panel with side panel
STEP 3: Joint side panel with bottom & back panel
STEP 4: Attach frame on and toekick board
STEP 5: Joint the drawer together, then install the drawer guide.
STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf
STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

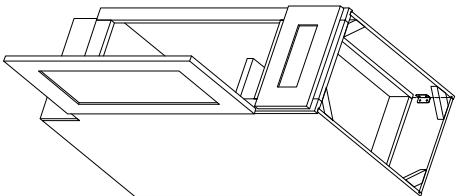


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	1
K	CABINET'S DOOR	1


STEP-1

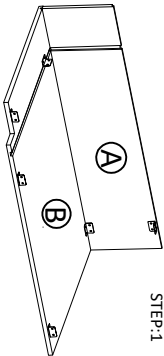


STEP-2

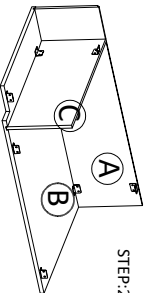


STEP-3

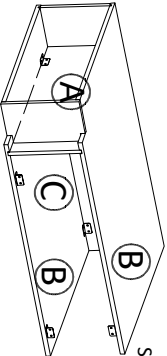


STEP-4

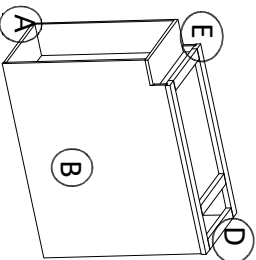


STEP-5

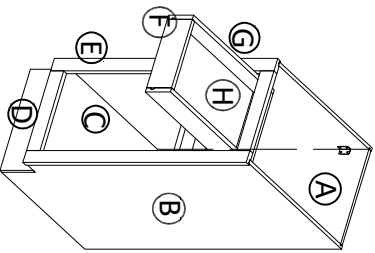



STEP-6

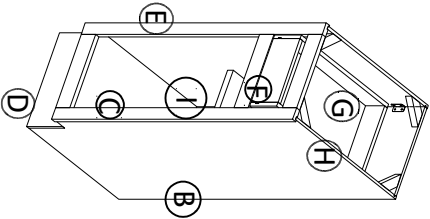

STEP-7

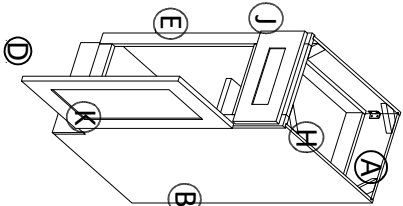

Full extension concealed drawer runners

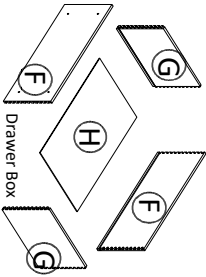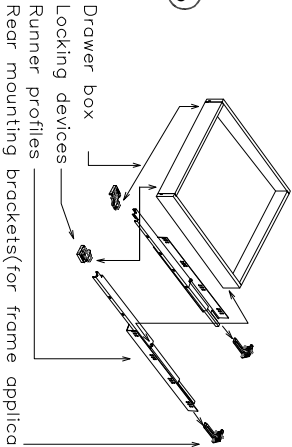

11	SOFTCLOSE HINGE	2	
10	3/4" ROUND HEAD SCREW	2	
9	BUMPER	6	
8	1" ROUND HEAD SCREW	4	
7	Selfclose slider	1	
6	SHELF CLIP	4	
5	9/16"ROUND HEAD SCREW #10		
4	CLEAT	10	
3	1"FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	1"FLAT HEAD SCREW FOR WOOD BLOCK	8	

NO.	Description	QTY	PICTURE
HARDWARE LIST			