


B33,B36,B42,B30
ASSEMBLY INSTRUCTIONS


- STEP 1: Joint side panel with back panel
STEP 2: Joint bottom panel with side panel
STEP 3: Joint side panel with bottom & back panel
STEP 4: Attach frame on and toe/kick board
STEP 5: Joint the drawer together, then install the drawer guide.
STEP 6: Attach the wood block on the top corner and put on the adjustable shelf
STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

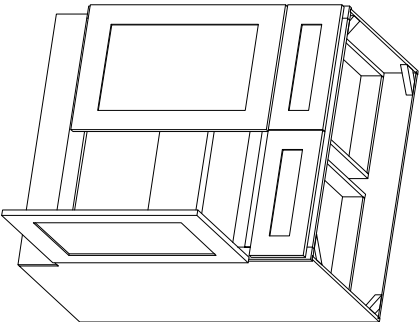


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	4
G	DRAWER BOX SIDE	4
H	DRAWER BOX BOTTOM	2
I	ADJUSTABLE SHELF	1
J	DRAWER HEAD	2
K	CABINET'S DOOR	2




STEP1

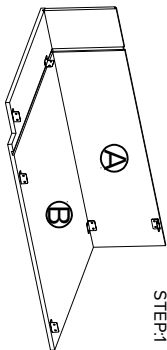


STEP2

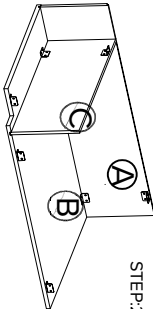


STEP3

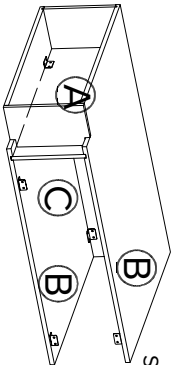



STEP4

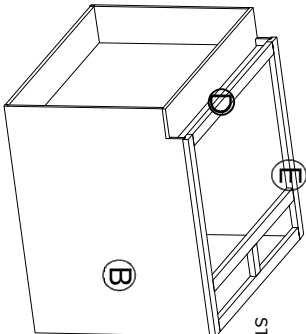



STEP6

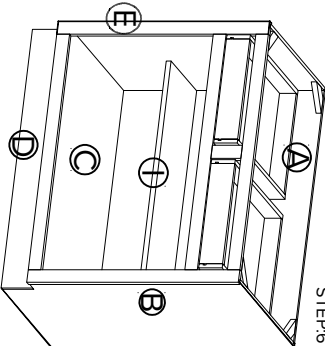

STEP7

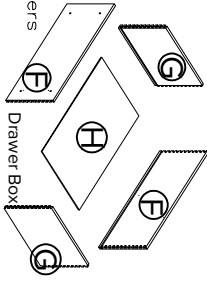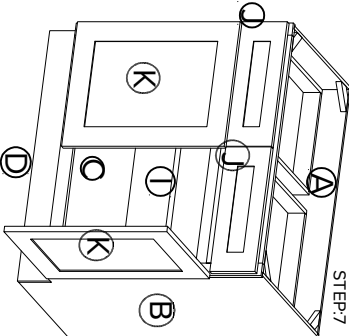

STEP5

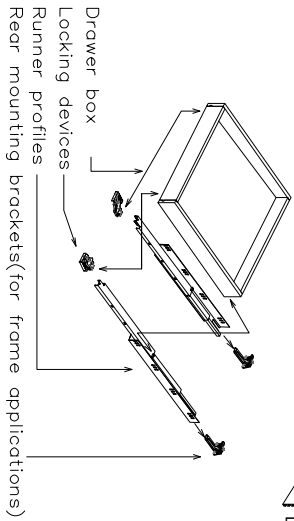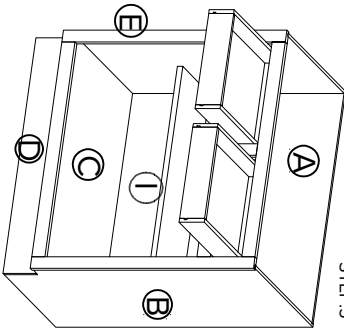

11	SOFTCLOSE HINGE	4	
10	3/4" ROUND HEAD SCREW	4	
9	BUMPER	12	
8	1" ROUND HEAD SCREW	8	
7	Selfclose slider	2	
6	SHELF CLIP	4	
5	9/16" ROUND HEAD SCREW 44		
4	CLEAT	11	
3	T FLAT HEAD SCREW FOR CARCASS	4	
2	WOOD BLOCK	4	
1	T FLAT HEAD SCREW FOR WOOD BLOCK	8	
NO.	Description	QTY	PICTURE

HARDWARE LIST