

BWB15, BWB18, BWB18-D
ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel

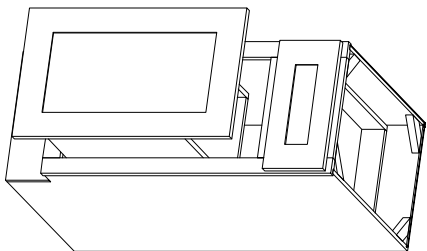
STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toe/kick board









STEP 5: Attach the wood block on the top corner

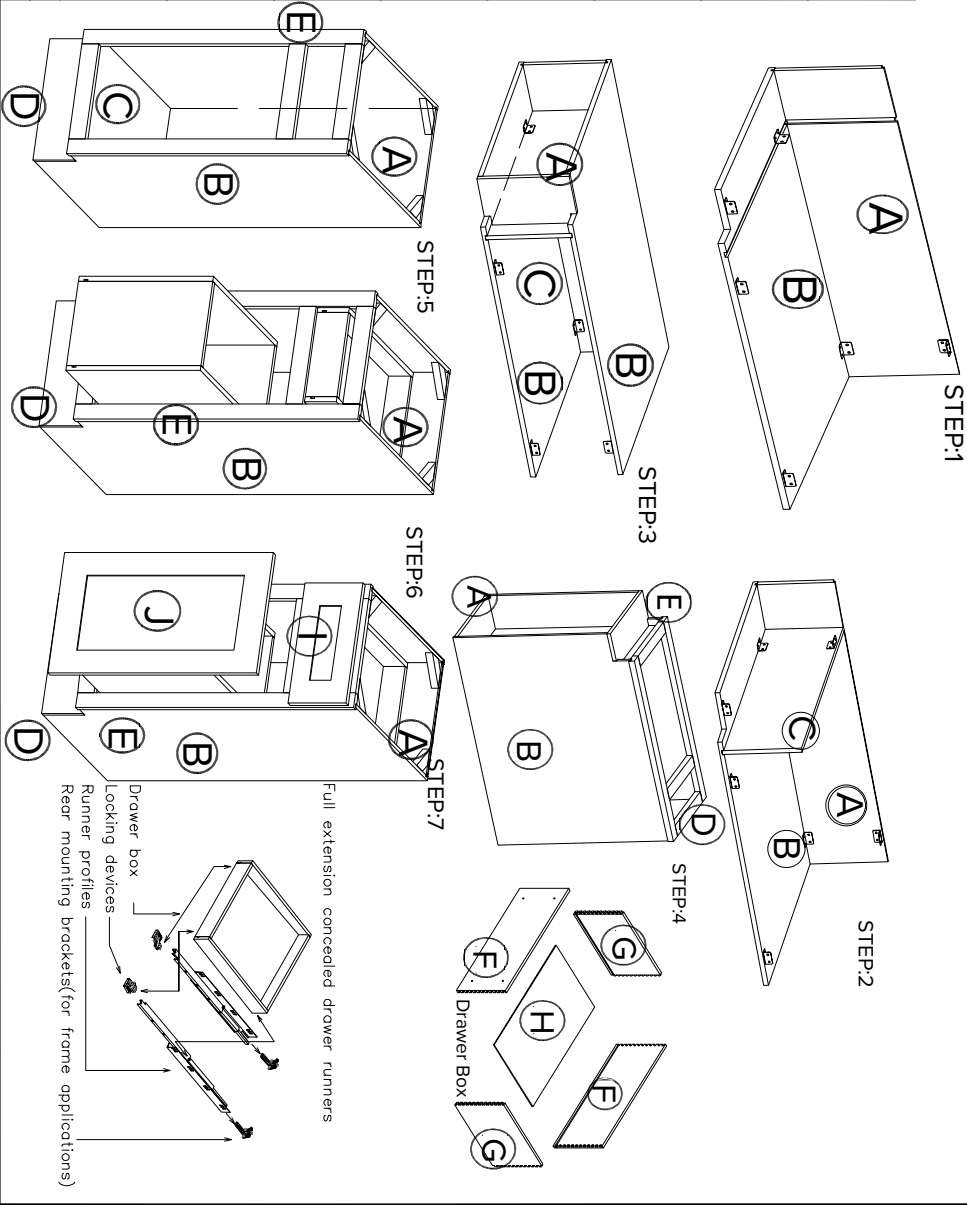
STEP 6: Joint the drawer together, then install the drawer guide

STEP 7: Fix drawer head on the drawer front and adjust the cover-space



PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	4
G	DRAWER BOX SIDE	4
H	DRAWER BOX BOTTOM	2
I	DRAWER HEAD	1
J	DOOR	1

NO.	Description	QTY	PICTURE
8	BUMPER	8	
7	1" ROUND HEAD SCREW	8	
6	Selfclose slider	2	
5	9/16"ROUND HEAD SCREW 40		
4	CLEAT	10	
3	T"FLAT HEAD SCREW FOR CARCASS	2	
2	WOOD BLOCK	4	
1	T" FLAT HEAD SCREW FOR WOOD BLOCK	8	



HARDWARE LIST