

VKD36, DKD30

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel


STEP 2: Joint side panel with back panel

STEP 3: Attach frame on and toekick board

STEP 4: Attach the wood block on the top corner


STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Fix drawer head on the drawer front and adjust the cover-space

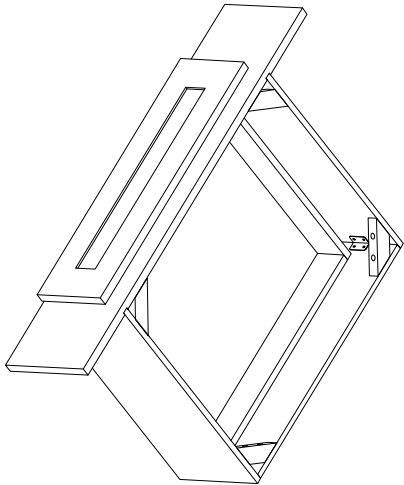


PARTS LIST		
NO.	Description	QTY
A	SIDE PANEL	2
B	BACK PANEL	1
C	FACE FRAME	1
D	DRAWER HEAD	1
E	DRAWER BOX BOTTOM	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2


STEP:1

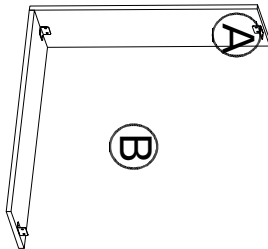


STEP:2

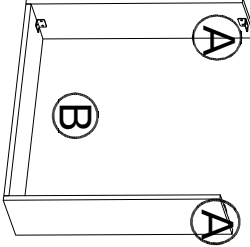


STEP:3

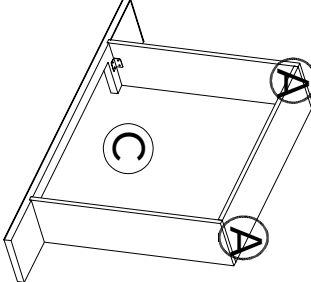


STEP:4

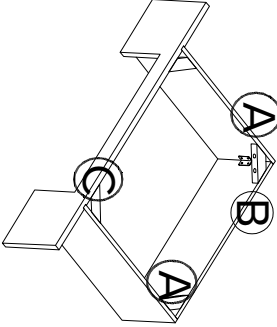


STEP:5

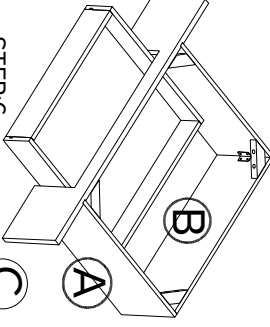






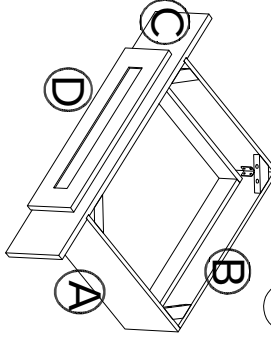

STEP:6

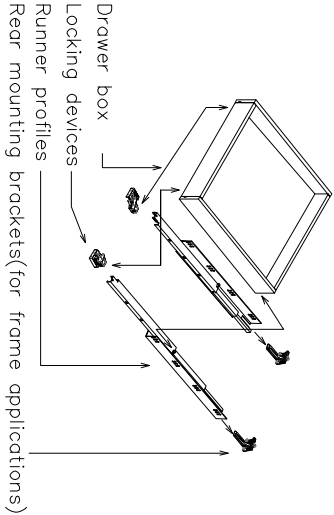

Full extension concealed drawer runners



7	BUMPER	4	
6	1" ROUND HEAD SCREW	4	
5	18" SELF-CLOSE SLIDE	1	
4	9/16" ROUND HEAD SCREW	16	
3	CLEAT	4	
2	WOOD BLOCK	4	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	
NO.	Description	QTY	PICTURE

HARDWARE LIST