

# PM06S2DR

### **FEATURES**

- Base Side Cabinet with 2 drawers for use with Catalano Premium base cabinets.
- Frameless cabinet box made of 3/4" maple plywood with a light maple woodgrain finish.
- Drawer boxes are 5/8" solid hard rock maple, joined at all 4 corners by dovetail joints. Drawer bottoms are 1/4" closed grain wood dadoed into drawer sides, front and back. Drawer fronts are solid one piece construction, attached to drawer box with wood screws.
- Undermounted drawer glides with self-closing full extension guides.
- Cabinet available with both ends finished, one end finished (specify left or right side) or no finished ends.
- Quality construction. Made in the USA

### **FURNITURE FINISHES**

- 9 Hi Gloss
- 9 Wood Veneer
- 1 Lacquer
- 3 Euro Gloss Wood
- 3 Pattern Laminate
- 3 Euro Gloss Solid

#### **REQUIRED**

Premium Countertop Insert to complete installation.
 See Premium Countertop Specification for details.

#### **OPTIONS**

• Base Cabinets, Base Fillers. See Specification sheets.

#### **Specified Model**

Model No.	Finished Ends	Size W x D x H	*Ship Wt. (lbs.)
PM06S2DRB	Both	235%" x 18½" x 29%"	124
PM06S2DRL	Left		
PM06S2DRR	Right		
PM06S2DRN	None		

**To Be Specified:** Finish/ Color

and an opposite of the same of					
wo	OD VENEER	EURO GLOSS WOOD			
	<b>V01</b> Walnut Burl		E01 Olivio		
	<b>V02</b> Zebra Wood		Gloss <b>E02</b> Tobaco		
	<b>V03</b> Grey Oak Lati		Gloss <b>E03</b> Guayana		
	<b>V04</b> Ebony Safari		Gloss EURO GLOSS		
	<b>V06</b> Walnut Crown	SOI	E04 Pistachio		
	<b>V07</b> Anigre Figured		<b>E05</b> Magenta		
	<b>V08</b> Ash Lati		E06 Blue		
	<b>V09</b> Wenge Groove	LAC	Metallic LACQUER		
	V10 Silver Ash		L01 White		


	H01 Arctic			
	H02 Ivory			
	H03 Glacier			
	<b>H04</b> Light Grey			
	<b>H05</b> Slate			
	H06 Black			
	H07 Cobalt			
	H08 Graphite			
	H09 Champagne			
PATTERN LAMINATE				
	P01 White Velvet			
	P02 Grey Velvet			
	P03 Black Flame			

**HI GLOSS** 



Shown PM06S2DRB-V09 Wood Veneer finish with required Premium Countertop Insert.

## PM06S2DR

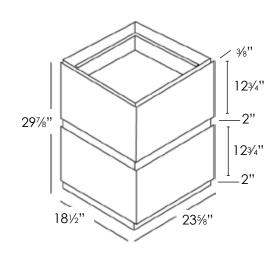

# UNDERSTANDING FINISHED/NON-FINISHED CABINET ENDS AND THE USE OF FILLERS

When the cabinet end is not finished, a filler must be used when placing the cabinet against a wall (minimum filler needed is 1"). When combining cabinets, adjoining cabinets do not require a finished end, however a 3-1/2" filler must be used - this adds 2" to the overall length of the ensemble and maintains the 2" recess design of the Premium Cabinet Collection.



Made in USA