

OUTDOOR USE ONLY
DOM ETRE INSTALLE A L'EXTERIEUR

INSTRUCTIONS
For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

Instructions for Adding Colored and Textured Lenses to LED Accent Lights
Instructions d'ajout des lentilles colorées et texturées à des éclairages d'accentuation LED

1. Loosen screw holding cowl in place and remove cowl.

2. Carefully place new colored or textured lens into cowl. The lens must be lying flat on the lens support ribs, see figure 1.
NOTE: For Green lenses, part numbers 16064GRN, 16065GRN and 16066GRN and Amber lenses, part numbers 16064AMB, 16065AMB and 16066AMB, the side with the small piece of removable tape should be facing up to ensure the coated side of the lens is facing down. For the Frosted Lenses, part numbers 16064FRO, 16065FRO and 16066FRO the smooth side should be facing up with the etched side facing down in the fixture. (See Figure 1.)

3. Inspect fixture gasket to ensure it is free of water, dirt or residue.

4. Reassemble cowl to fixture making sure that the cowl is fully engaged on the fixture. Make sure the cowl, surface A, makes complete contact with fixture surface B. (See Figure 2.)

5. Secure cowl in place by tightening screw.

6. Remove tape piece from Amber and Green lenses where applicable.

1. Desserrer la vis retenant le capot et enlever le capot.

2. Placer soigneusement les nouvelles lentilles colorées ou texturées dans le capot. Les lentilles doivent être posées à plat sur les nervures de support de lentille (voir la Figure 1).
REMARQUE : Pour les lentilles vertes, réf. 16064GRN, 16065GRN et 16066GRN et les lentilles jaunes, réf. 16064AMB, 16065AMB et 16066AMB, le côté doté de ruban amovible doit être dirigé vers le haut afin de garantir que le côté revêtu de la lentille est dirigé vers le bas. Pour les lentilles givrées, réf. 16064FRO, 16065FRO et 16066FRO, le côté lisse doit être dirigé vers le haut avec le côté gravé dirigé vers le bas dans le luminaire. Voir la Figure 1.

3. Inspecter le joint du luminaire pour détecter la présence d'eau, d'impureté ou de résidus.

4. Réinstaller le capot sur le luminaire en prenant soin de bien enclencher le capot dessus. S'assurer que le capot, la surface A sont solidement en contact avec la surface B du luminaire. Voir la Figure 2.

5. Bloquer le capot en serrant la vis.

6. Enlever le morceau de ruban des lentilles jaunes et vertes.

FIGURE 1

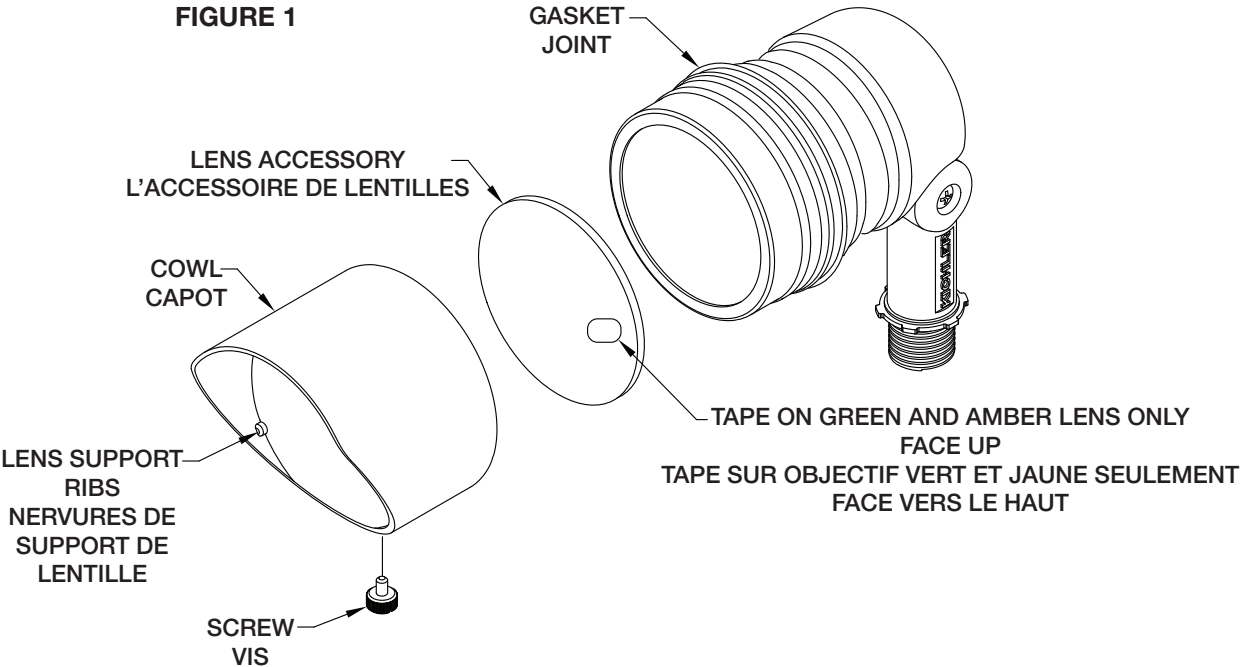


FIGURE 2

