

INSTRUCTIONS

For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

STEM DROP INSTALLATON

- 1) Pass wire through stem and screw stem to coupling on top of fixture body. **NOTE:** Thread locking compound must be applied to all stem threads as noted with symbol (⌄) to prevent accidental rotation of fixture during cleaning, relamping, etc.
- 2) Pass wire through remaining stems and screw stems together.
- 3) Thread one small threaded pipe into end of each small loop.
- 4) Attach small loop to end of last stem.
- 5) Pass threaded pipe at end of second small loop through hole in canopy.
- 6) Slip lockwasher over threaded pipe protruding from inside of canopy and screw hexnut onto threaded pipe.
- 7) Attach chain link to small loop at end of stem and to loop on canopy.
- 8) **TURN OFF POWER.**
IMPORTANT: Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done.


a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.

b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.

c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 9) Find the appropriate threaded holes on mounting strap. Assemble mounting screws into threaded holes.
- 10) Attach mounting strap to outlet box. (Screws not provided) Mounting strap can be adjusted to suit position of fixture.
- 11) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



Neutral Wire


- 12) Push fixture to ceiling, carefully passing mounting screws through holes in canopy.
- 13) Thread threaded balls onto mounting screws. Tighten threaded balls to secure fixture to ceiling.
- 14) Raise glass up to fixture. Fit glass inside cage and pass hole in glass over socket.
- 15) Thread socket ring onto socket. (DO NOT over tighten.)

SEMI-FLUSH INSTALLATION


- 1) Thread small threaded pipe into coupling on top of fixture.
- 2) Pass hole in canopy over threaded pipe on top of fixture body.
- 3) Slip lockwasher over threaded pipe protruding from inside of canopy and screw hexnut onto threaded pipe.
- 4) Follow steps 8-15 in Stem Drop Installation Instructions.

SEE OTHER SIDE FOR CANADIAN FRENCH TRANSLATIONS.
VOIR L'AUTRE CÔTÉ POUR LES CANADIENS TRADUCTIONS EN FRANÇAIS.

STEM DROP INSTALLATON
INSTALLATION PAR TIGE VERTICALE

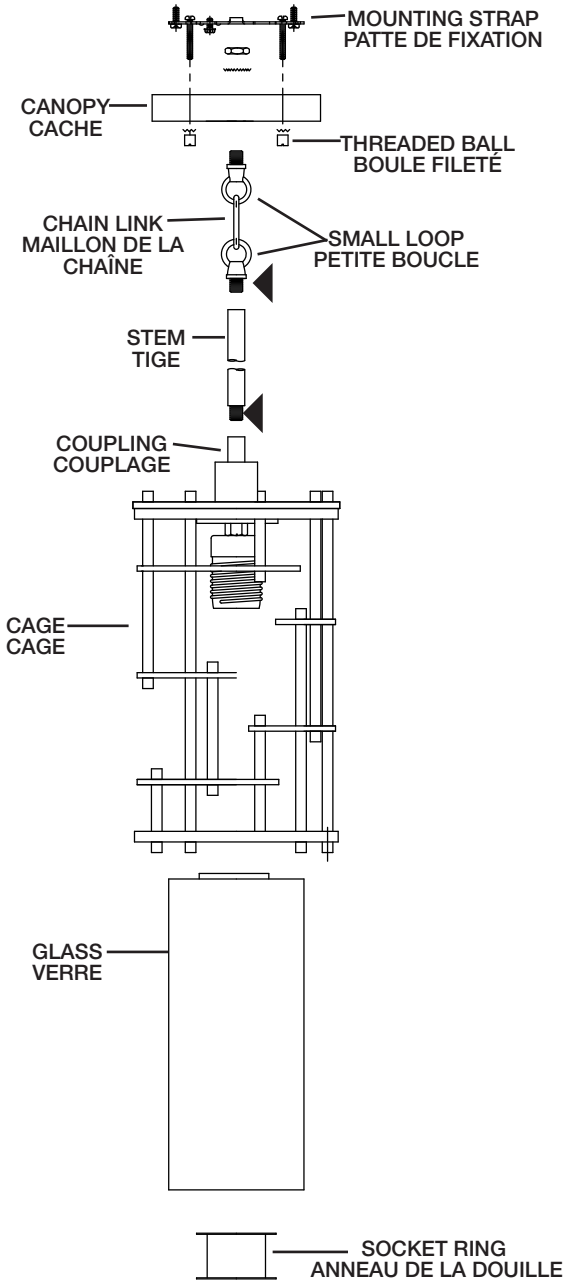

INSTALLATION PAR TIGE VERTICALE
LES INSTRUCTIONS D'INSTALLATION SEMI-ENCASTRÉE

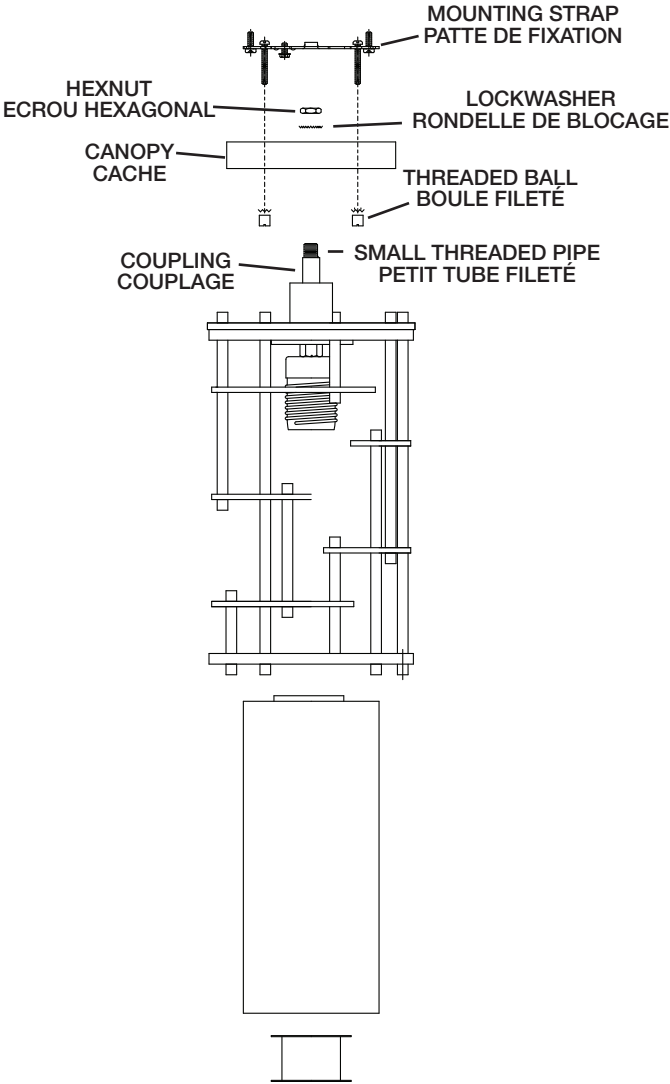

INSTRUCTIONS

For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

INSTALLATION PAR TIGE VERTICALE

- 1) Passez le fil dans la tige et vissez la tige au couplage en haut du corps du luminaire. **REMARQUE:** Appliquer le frein filet sur tous les filets de la tige indiqués par le symbole (◄) pour empêcher la rotation accidentelle du luminaire pendant le nettoyage, remplacement de lampe, etc.
- 2) Passez le fil dans les tiges restantes et vissez les tiges ensemble.
- 3) Visser un petit tube fileté dans l'extrémité de chaque boucle.
- 4) Attachez la petite bouche à l'extrémité de la tige supérieure.
- 5) Passer le tube fileté à l'extrémité de la petite bouche par le trou situé dans le cache.
- 6) Passer la rondelle de blocage sur le tube fileté sortant de l'intérieur du cache. Visser l'écrou hexagonal sur le tube fileté.
- 7) Attacher le maillon de la chaîne à la petite boucle située à l'extrémité de la tige ainsi qu'à la boucle située sur l'abat-jour.
- 8) **COUPER LE COURANT.**
IMPORTANT: TOUJOURS couper l'électricité avant de commencer le travail.


a) Localiser le coffret à fusibles ou le disjoncteur du domicile. Mettre l'interrupteur principal en position d'Arrêt.

b) Dévisser le ou les fusibles (ou mettre le disjoncteur sur Arrêt) qui contrôlent l'alimentation vers le luminaire ou la pièce dans laquelle le travail est effectué.

c) Mettre l'interrupteur mural en position d'Arrêt. Si le luminaire à remplacer est doté d'un interrupteur ou d'une chaîne connectée à l'interrupteur, placer ces éléments en position d'Arrêt.
- 9) Trouver les trous filetés appropriés sur le support de montage. Visser les vis de montage dans les trous taraudés.
- 10) Fixer le support de montage sur la boîte à prises. (Vis non fournies). Le support de montage peut être réglé afin de positionner correctement le luminaire.
- 11) Connecter les fils (connecteurs non fournis). Se porter au tableau ci-dessous pour faire les connexions.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




- 12) Pousser le luminaire vers le plafond en passant soigneusement les vis de montage par les trous.
- 13) Fixer le luminaire au plafond à l'aide des boules filetées.
- 14) Soulever le verre jusqu'au luminaire en passant le verre par l'anneau inférieur du luminaire et par dessus la douille.
- 15) Serrer l'anneau de la douille sur la douille. (NE PAS serrer avec excès).


LES INSTRUCTIONS D'INSTALLATION SEMI-ENCASTRÉE

- 1) Visser le petit tube fileté dans l'accoulement sur le dessus du luminaire.
- 2) Faire passer le trou dans le cache au-dessus du tube fileté sur la partie supérieure du luminaire.
- 3) Glisser une rondelle de blocage sur l'extrémité du tube fileté sortant du cache. Visser l'écrou hexagonal sur le tube fileté.
- 4) Suivre les étapes de 8 à 15 des instructions sur le Montage de la tige.

STEM DROP INSTALLATON
INSTALLATION PAR TIGE VERTICALE

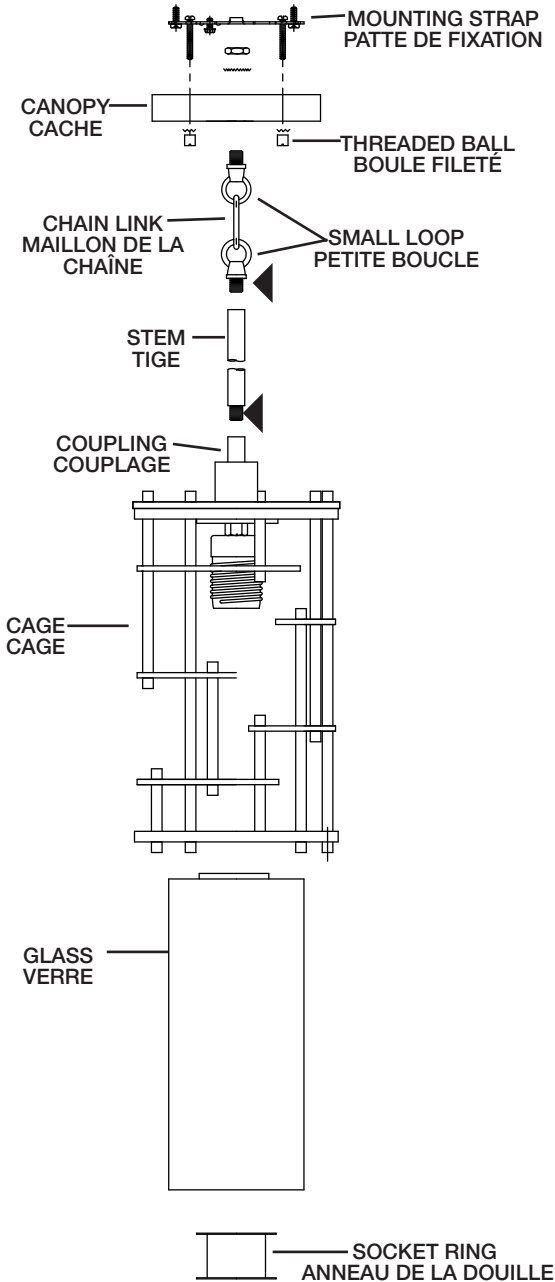

INSTALLATION PAR TIGE VERTICALE
LES INSTRUCTIONS D'INSTALLATION SEMI-ENCASTRÉE

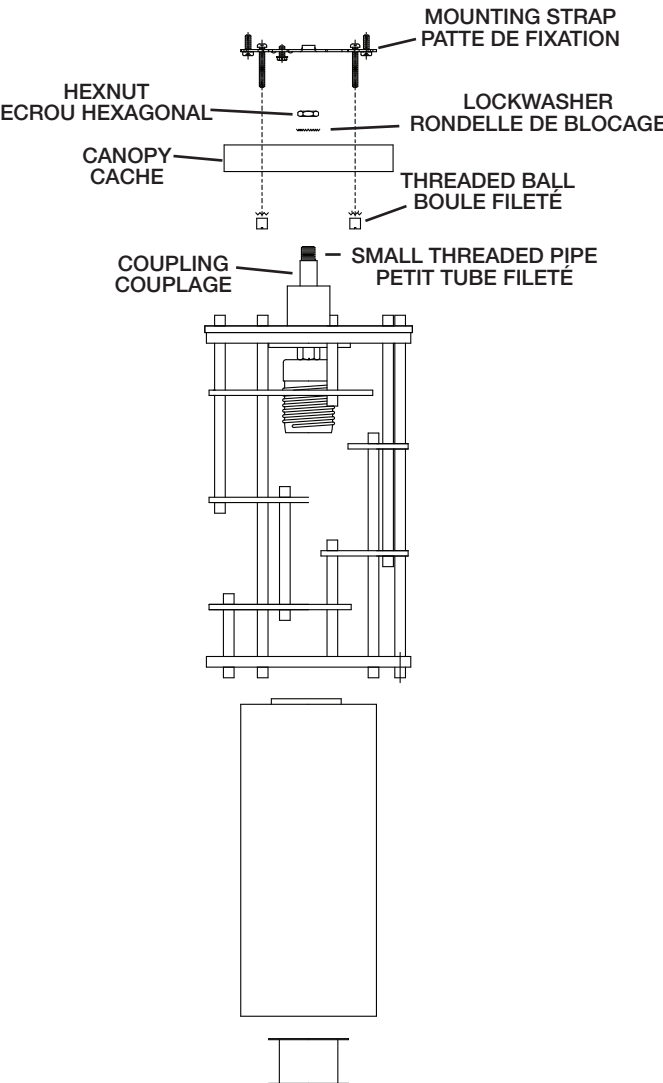

SEE OTHER SIDE FOR ENGLISH TRANSLATIONS.
VOIR L'AUTRE CÔTÉ DES TRADUCTIONS EN ANGLAIS.