


INSTRUCTIONS

For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

- 1) **TURN OFF POWER.**
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.
a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.
b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.
c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 2) Slip fixture over post and mark position of mounting holes in post.
- 3) Remove fixture from post.
- 4) Drill 3/16” dia holes in post at positions marked .
- 5) If fixture is provided with ground wire, connect fixture ground wire to outlet box ground wire with wire connector. (Not provided). Never connect ground wire to black or white power supply wires.
- 6) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.


Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



Neutral Wire


- 7) Slip fixture over post and secure in place using provided screws. Screws should slip into holes drilled in post.
- 8) **To insert glass panels:** Lower one glass panel down into cage. Tilt glass panel so top of glass panel is pointing towards outside of fixture. Fit top edge of glass under bracket along inside top edge of cage. Carefully raise glass panel up and push bottom edge glass towards outside of fixture. Carefully lower glass panel down. Fit bottom edge of glass inside channel along bottom of cage. Repeat above steps for remaining glass panels.
- 9) Insert recommended bulb.
- 10) Lower roof down to fixture. Pass holes in edge of roof over threaded studs along top edge of cage.
- 11) Screw threaded caps onto threaded studs. Tighten threaded caps to secure roof in place.

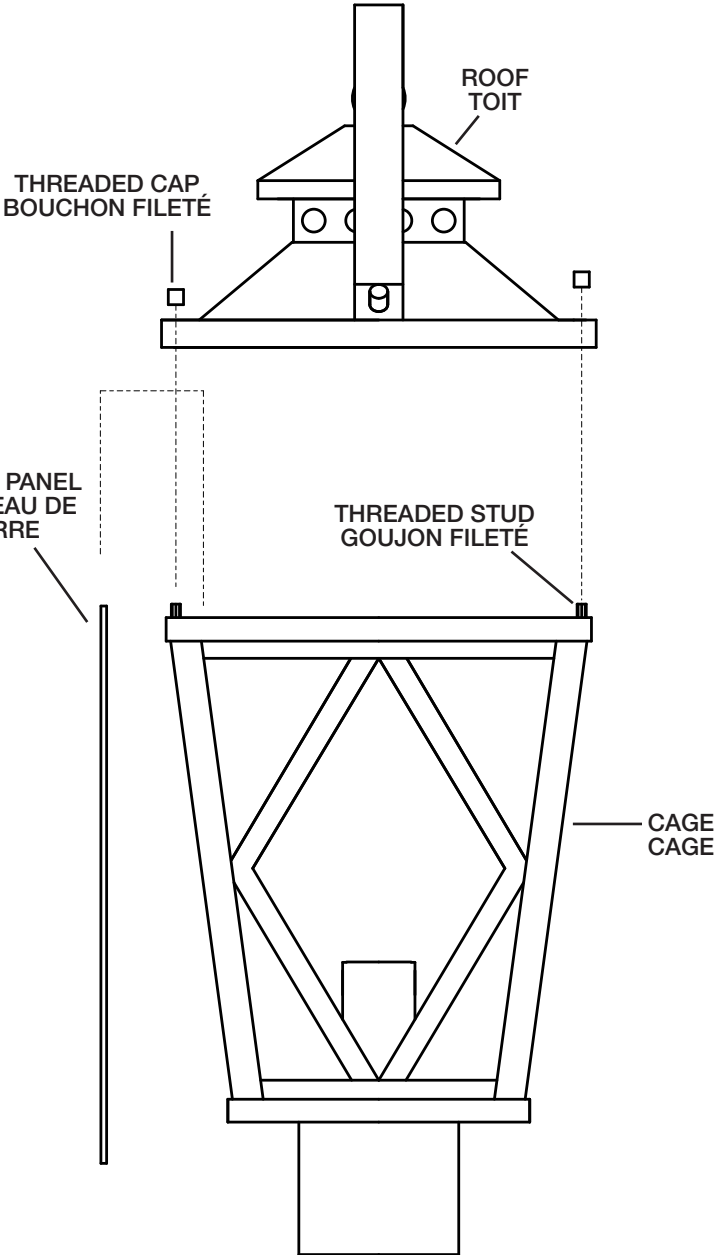

- 6) **Connecter les fils (connecteurs non fournis). Se porter au tableau ci-dessous pour faire les connexions.**

Connecter le fil noir ou rouge de la boîte	Connecter le fil blanc de la boîte
A Noir	A Blanc
*Au cordon parallèle (rond et lisse)	*Au cordon parallèle (à angles droits et strié)
Au transparent, doré, marron, ou noir sans fil distinctif	Au transparent, doré, marron, ou noir avec un til distinctif
Fil isolé (sauf fil vert) avec conducteur en cuivre	Fil isolé (sauf fil vert) avec conducteur en argent

*Remarque: Avec emploi d'un fil parallèle (SPT I et SPT II). Le fil neutre est à angles droits ou strié et l'autre fil doit être rond ou lisse (Voir le schéma).



Fil Neutre

- 7) **Faire glisser le luminaire sur le support et fixer à l'aide des vis.** Les vis doivent s'ajuster correctement dans les trous du support.
- 8) **Pour installer les panneaux vitrés:** Abaisser un panneau de verre dans la cage. Incliner le panneau de verre de manière à ce que la partie supérieure du panneau soit orientée vers l'extérieur du luminaire. Placer le bord supérieur du verre sous le support à l'intérieur du bord supérieur de la cage. Soulever avec précaution le panneau de verre et pousser le bord inférieur vers l'extérieur du luminaire. Abaisser délicatement le panneau de verre. Placer le bord inférieur du verre dans le canal le long de la partie inférieure de la cage. Répéter les étapes ci-dessus pour les autres panneaux de verre.
- 9) Introduire l'ampoule recommandée.
- 10) Abaisser le toit sur le luminaire. Passer les trous situés dans le toit par les goujons filetés le long de la partie supérieure de la cage.
- 11) Visser les bouchons filetés sur les goujons filetés. Resserrer les bouchons filetés pour fixer le toit.