


- 1) TURN OFF POWER.
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.
a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.
b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.
c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 2) Slip fixture over post and mark position of mounting holes in post.
- 3) Remove fixture from post.
- 4) Drill 3/16” dia. holes in post at positions marked .
- 5) If fixture is provided with ground wire, connect fixture ground wire to outlet box ground wire with wire connector. (Not provided). Never connect ground wire to black or white power supply wires.
- 6) Make wire connections (connectors not provided). Reference chart below for correct connections and wire accordingly.


Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



Neutral Wire


- 7) Slip fixture over post and secure in place using provided screws. Screws should slip into holes drilled in post.
- 8) To insert glass panels: Lower one glass panel down into cage. Tilt glass panel so top of glass panel is pointing towards outside of fixture. Fit top edge of glass under bracket along inside top edge of cage. Carefully raise glass panel up and push bottom edge glass towards outside of fixture. Carefully lower glass panel down. Fit bottom edge of glass inside channel along bottom of cage. Repeat above steps for remaining glass panels.
- 9) Insert recommended bulb.
- 10) Lower roof down to fixture. Pass holes in edge of roof over threaded studs along top edge of cage.
- 11) Screw threaded caps onto threaded studs. Tighten threaded caps to secure roof in place.

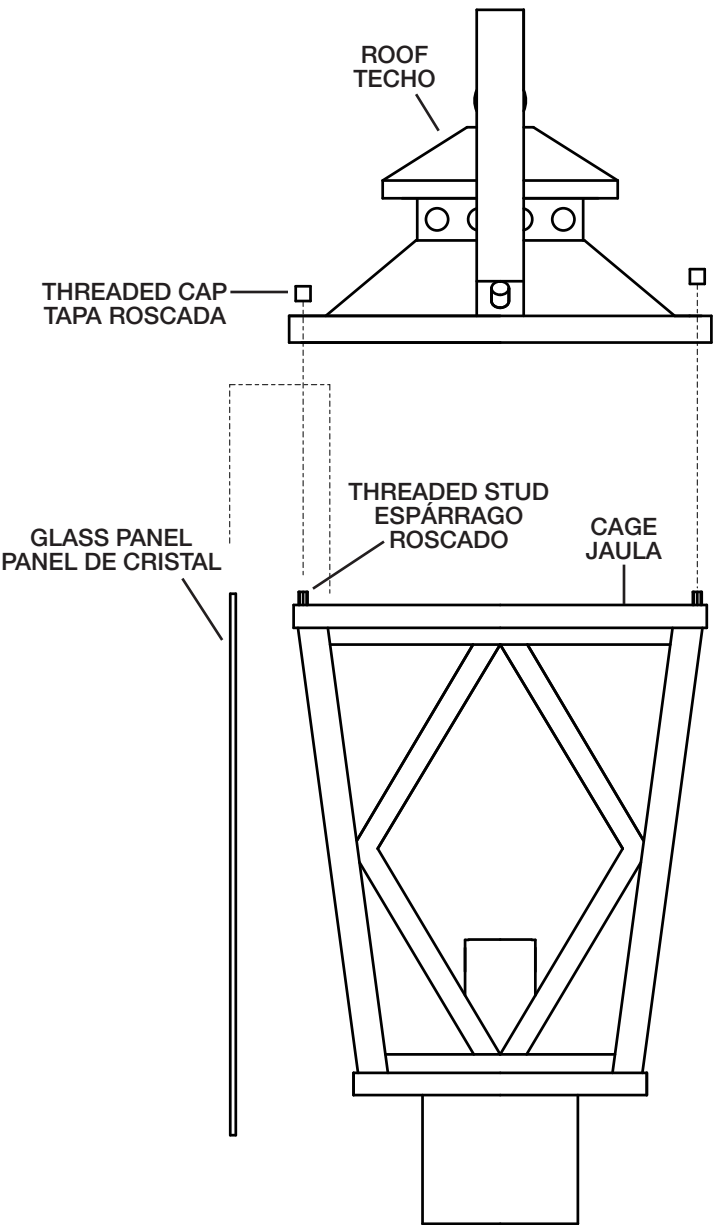

- 6) Haga las conexiones de alambres (no se provee conectores). Consulte la tabla de abajo para hacer las conexiones correctas y haga las conexiones omo corresponda.

Conectar el alambre de suministro negro o rojo al	Conectar el alambre de suministro blanco al
Negro	Blanco
*Cordon paralelo (redondo y liso)	*Cordon paralelo (cuadrado y estriado)
Claro, marrón, amarillo o negro sin hebra identificadora	Claro, marrón, amarillo o negro con hebra identificadora
Alambre aislado (diferente del verde) con conductor de cobre	Alambre aislado (diferente del verde) con conductor de plata

*Nota: Cuando se utiliza alambre paralelo (SPT I y SPT II). El alambre neutro es de forma cuadrada o estriada y el otro alambre será de forma redonda o lisa. (Vea la ilustración).



Hilo Neutral

- 7) Deslice el artefacto sobre la columna, fíjelo en su lugar usando los tornillos que se proporcionan. Los tornillos deben entrar perfectamente en los orificios que previamente perforó en la columna.
- 8) Para insertar los paneles de cristal: Descienda uno de los paneles de cristal dentro de la jaula. Inclíne el panel de cristal de tal manera que la parte superior del panel de cristal esté apuntando hacia el exterior del artefacto. Ajuste el borde superior del cristal bajo el soporte a lo largo del borde interno superior de la jaula. Cuidadosamente eleve el panel de cristal y empuje el cristal del borde inferior hacia el exterior del artefacto. Cuidadosamente descienda el panel de cristal. Ajuste el borde inferior del cristal en el canal interno a lo largo de la parte inferior de la jaula. Repita los pasos anteriores para los paneles de cristal restantes.
- 9) Inserte el foco o bombilla recomendado.
- 10) Descienda el techo al artefacto. Pase los agujeros en el borde del techo sobre los espárragos roscados a lo largo del borde de la jaula.
- 11) Atornille las tapas roscadas sobre los espárragos roscados. Apriete las tapas roscadas para asegurar el techo en su lugar.