

- 1) To install glass panels: Carefully insert glass panel inside cage. Fit top edge of glass panel into channel along top inside of cage. Press glass panel up against inside of cage. Place bracket inside cage. Align hole in step of bracket with hole in bottom edge of cage. Thread screw up through hole in bracket and into hole in cage. Tighten screw to secure bracket and glass panel in place. (See FIG. 2 for glass panel installation detail.) Repeat these steps for remaining glass panels.
- 2) TURN OFF POWER.
IMPORTANT: Before you start, NEVER attempt any work without shutting off the electricity until the work is done.


a) Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “OFF” position.

b) Unscrew the fuse(s), or switch “OFF” the circuit breaker switch(s), that control the power to the fixture or room that you are working on.

c) Place the wall switch in the “OFF” position. If the fixture to be replaced has a switch or pull chain, place those in the “OFF” position.
- 3) Thread hexnut onto threaded pipe so that 5 threads are exposed below hexnut. From underside of mounting strap, thread long end of threaded pipe into hole in mounting strap until hexnut touches mounting strap. Tighten hexnut against mounting strap.
- 4) Thread second hexnut onto other end of threaded pipe. Tighten hexnut up against mounting strap.
- 5) Attach mounting strap to outlet box. (Screws not provided)
- 6) Make wire connections (connectors not provided.)
Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




- 7) Push fixture to wall, carefully pass threaded pipe through hole in canopy of fixture.
- 8) Screw threaded cap onto threaded pipe. Tighten threaded cap to secure fixture to wall.
- 9) Screw end of threaded pipe into coupling on top of fixture.
- 10) Lower top trim down. Pass hole in top trim over end of threaded pipe on top of fixture. Set top trim down on top of fixture.
- 11) Thread loop onto end of threaded pipe protruding from top trim.


- INSTRUCTIONS FOR MOUNTING FIXTURE OUTDOORS AND/OR IN WET LOCATIONS.
- 12) Mounting surface should be clean, dry, flat and 1/4” larger that the canopy on all sides. Any gaps between the mounting surface and canopy exceeding 3/16” should be corrected as required.
- 13) With silicone caulking compound, caulk completely around where back of canopy meets the wall surface to prevent water from seeping into outlet box.

INSTRUCTIONS

For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

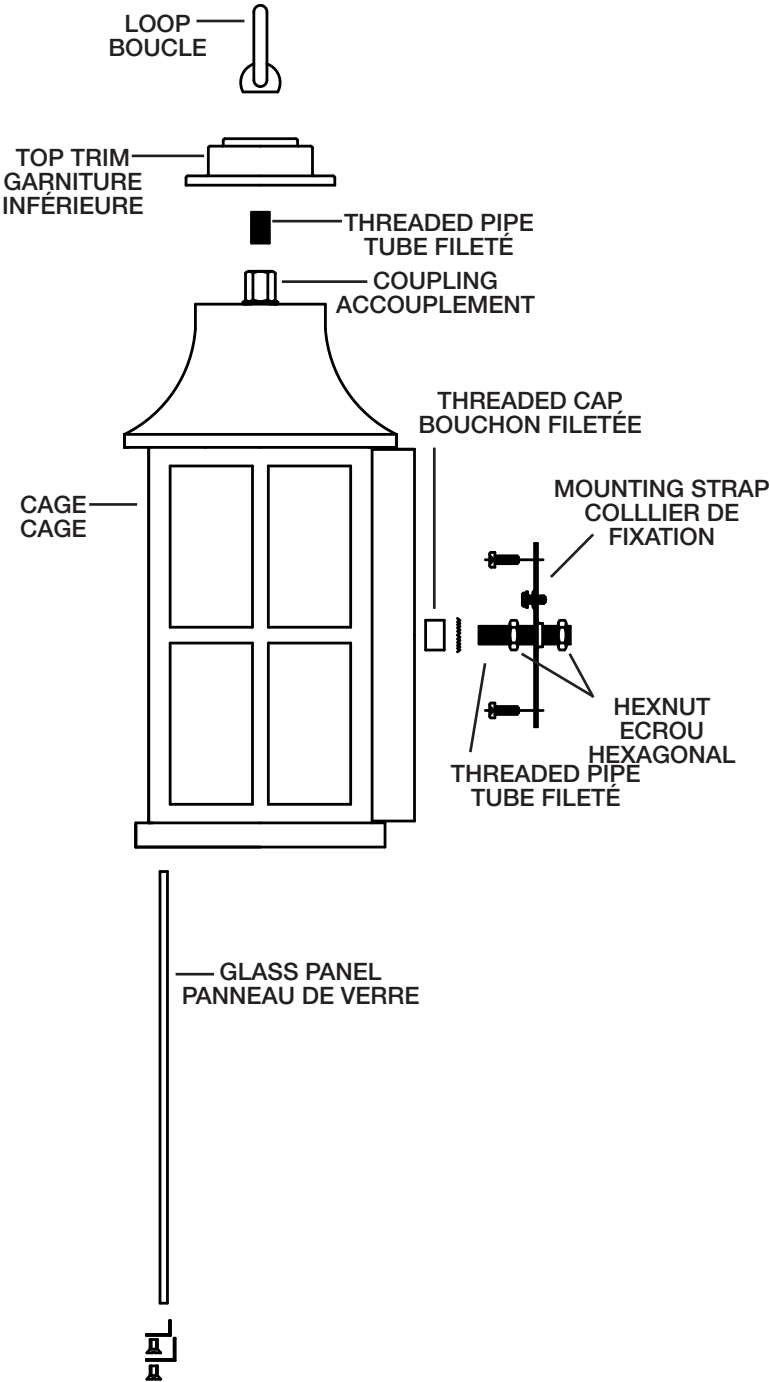

GLASS PANEL INSTALLATION DETAIL
VERRE DETAIL PANNEAU D'INSTALLATION

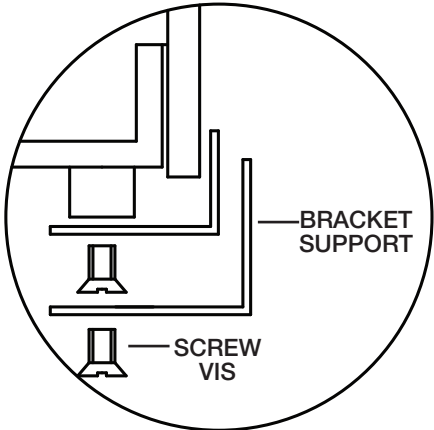

SEE OTHER SIDE FOR CANADIAN FRENCH TRANSLATIONS.
VOIR L'AUTRE CÔTÉ POUR LES CANADIENS TRA-DUCTIONS EN FRANÇAIS.

- 1) **Pour installer les panneaux vitrés:** Insérer soigneusement le panneau de verre dans la cage. Placer le bord supérieur du verre dans le canal le long de la partie supérieure à l'intérieur de la cage. Appuyer le panneau de verre à l'intérieur de la cage. Placer le support à l'intérieur de la cage. Aligner le trou dans le support au trou sur le bord supérieur de la cage en dessous du panneau vitré. Passer la vis par le trou dans le support et dans le trou dans la cage. Resserrer la vis pour fixer le support et le panneau en verre. Répéter ces étapes pour les autres panneaux vitrés.
- 2) **COUPER LE COURANT ÉLECTRIQUE.**
IMPORTANT: TOUJOURS couper l'électricité avant de commencer le travail.


a) Localiser le coffret à fusibles ou le disjoncteur du domicile. Mettre l'interrupteur principal en position d'Arrêt.

b) Dévisser le ou les fusibles (ou mettre le disjoncteur sur Arrêt) qui contrôlent l'alimentation vers le luminaire ou la pièce dans laquelle le travail est effectué.

c) Mettre l'interrupteur mural en position d'Arrêt. Si le luminaire à remplacer est doté d'un interrupteur ou d'une chaîne connectée à l'interrupteur, placer ces éléments en position d'Arrêt.
- 3) Serrer l'écrou hexagonal sur le tube fileté de sorte que 5 filets soient exposés en dessous de l'écrou hexagonal. Depuis le dessous de la bride de montage, passer l'extrémité longue du tube fileté dans le trou de la sangle de montage jusqu'à ce que l'écrou hexagonal soit en contact avec la bride de montage. *Resserrer l'écrou hexagonal contre la bride de montage.
- 4) Serrer le deuxième écrou hexagonal sur l'autre extrémité du tube fileté. Serrer l'écrou hexagonal contre la bride de montage.
- 5) Visser le collier de fixation à la boîte de jonction (vis non fournies).
- 6) Connecter les fils (connecteurs non fournis). Se reporter au tableau ci-dessous pour faire les connexions. Plaquer l'applique contre le mur, en passant soigneusement les vis de montage dans les trous.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)




Neutral Wire

- 7) Pousser la plaque frontale contre le mur, passer soigneusement le tube fileté dans le trou de la plaque frontale.
- 8) Passer le trou dans le réflecteur sur l'extrémité du tube fileté. Placer le réflecteur contre la plaque frontale.
- 9) Visser l'extrémité du tube fileté dans l'accouplement sur le dessus du luminaire.
- 10) Abaisser la garniture supérieure. Passer trou dans la garniture supérieure sur l'extrémité du tube fileté sur le dessus du luminaire. Poser la garniture supérieure en haut du luminaire.
- 11) Visser la boucle sur l'extrémité du tube fileté sortant de la garniture supérieure.


INSTRUCTIONS DE MONTAGE DE LUMINAIRE À L'EXTÉRIEUR ET/OU DANS DES LIEUX HUMIDES.

- 12) La surface de montage doit être propre, sèche, plate et de 0,6 cm plus épaisse que le cache sur tous les côtés. Tout écart entre la surface de montage et le cache dépassant de 0,5 cm doit être rectifié selon les besoins.
- 13) À l'aide de matériaux d'étanchéité à la silicone, calfeutrer bien autour où l'arrière du cache entre en contact avec le mur pour empêcher l'eau de passer dans la boîte de raccordement.

INSTRUCTIONS
For Assembling and Installing Fixtures in Canada
Pour L'assemblage et L'installation Au Canada

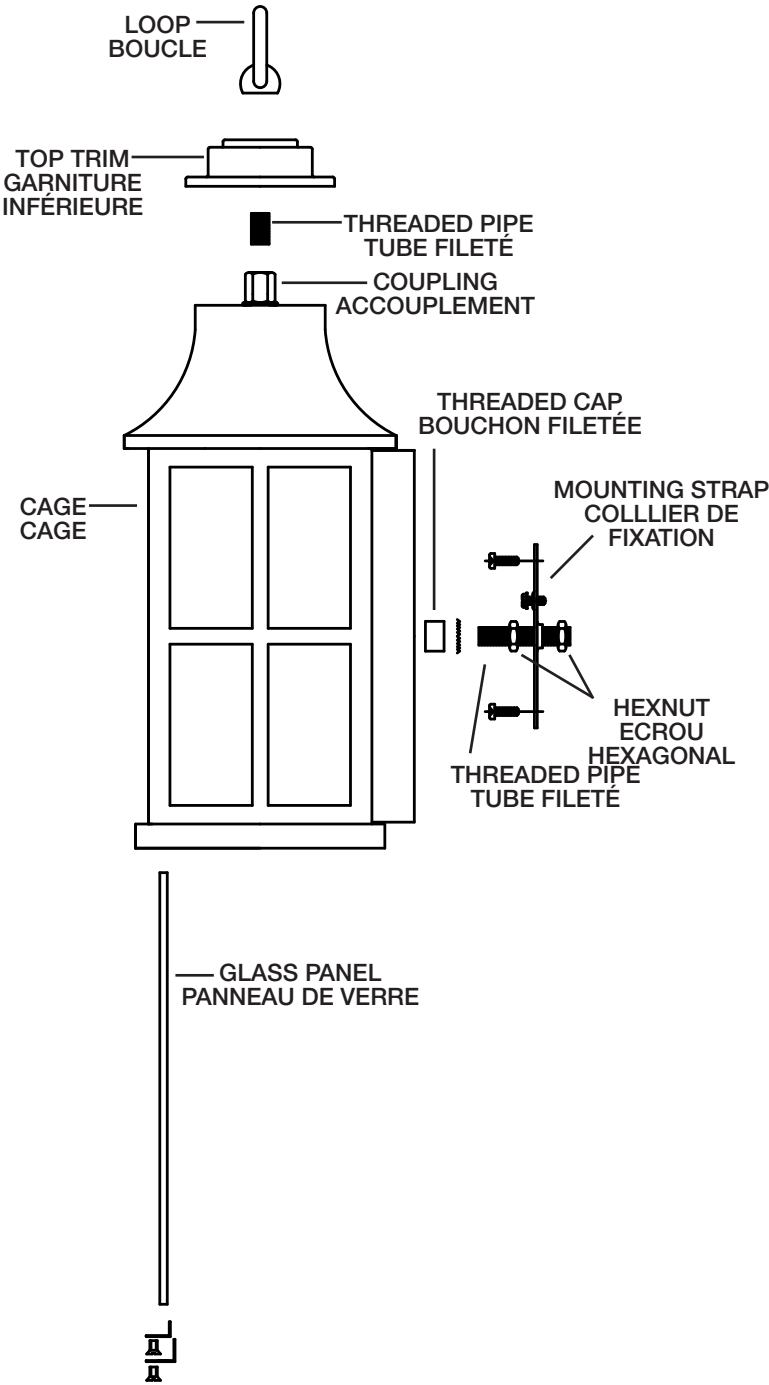

GLASS PANEL INSTALLATION DETAIL
VERRE DETAIL PANNEAU D'INSTALLATION

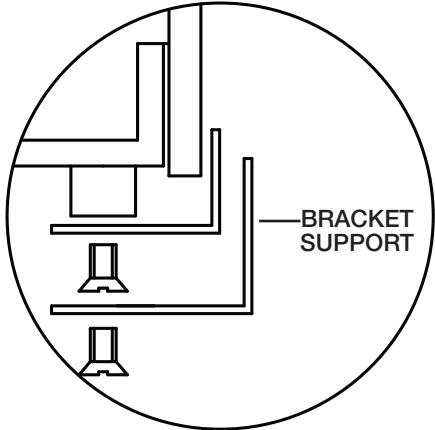

SEE OTHER SIDE FOR ENGLISH TRANSLATIONS.
VOIR L'AUTRE CÔTÉ DES TRADUCTIONS EN AN-GLAIS.