


## INSTRUCTIONS


For Assembling and Installing Fixtures in Canada  
Pour L'assemblage et L'installation Au Canada

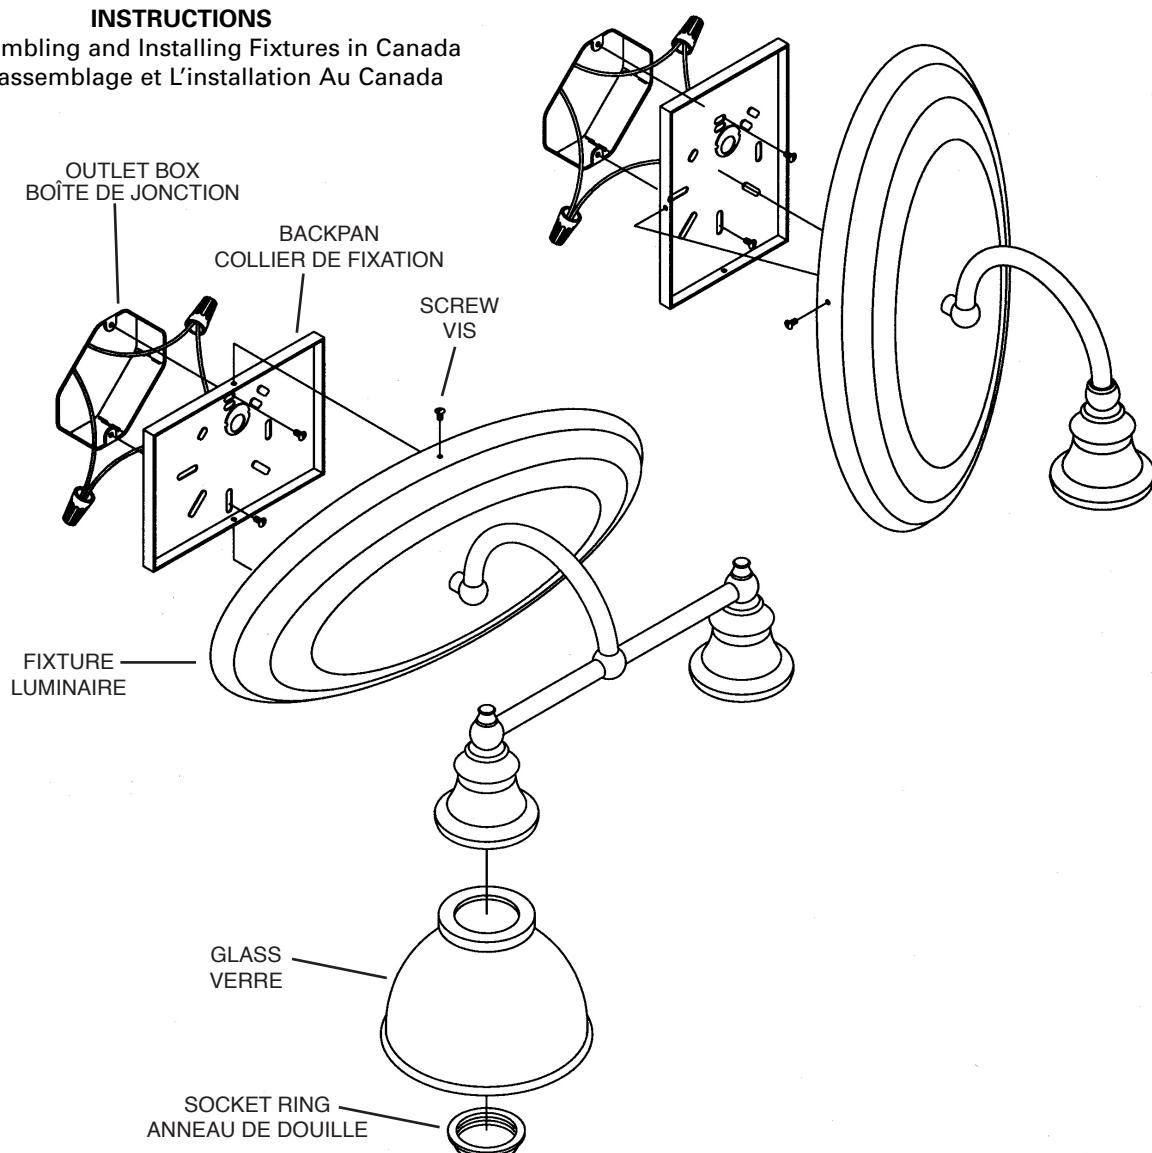

- 1) Turn off power.
- 2) Attach backpan to outlet box. (Screws not provided).
- 3) Make wire connections (connectors not provided.) Reference chart below for correct connections and wire accordingly.

Connect Black or Red Supply Wire to:	Connect White Supply Wire to:
Black	White
*Parallel cord (round & smooth)	*Parallel cord (square & ridged)
Clear, Brown, Gold or Black without tracer	Clear, Brown, Gold or Black with tracer
Insulated wire (other than green) with copper conductor	Insulated wire (other than green) with silver conductor

\*Note: When parallel wires (SPT I & SPT II) are used. The neutral wire is square shaped or ridged and the other wire will be round in shape or smooth (see illus.)



- 4) Push fixture to wall, aligning holes on top of fixture with holes on top edge of backpan. (**NOTE:** For one-light fixtures, the holes are located on the side of fixture and backpan.)
- 5) Attach fixture to backpan with screws.
- 6) Raise glass up to fixture, passing hole in glass over socket.
- 7) Screw socket ring onto socket to secure glass in place.

- 1) Couper l'alimentation secteur.
- 2) Visser le collier de fixaiton à la boîte de jonction (vis non fournies).
- 3) Connecter les fils (connecteurs non fournis). Se reporter au tableau cidessous pour faire les connexions.

Connecter le fil noir ou rouge de la boîte	Connecter le fil blanc de la boîte
A Noir	A Blanc
*Au cordon parallèle (rond et lisse)	*Au cordon parallèle (à angles droits et strié)
Au transparent, doré, marron, ou noir sans fil distinctif	Au transparent, doré, marron, ou noir avec un fil distinctif

\*Remarque: Avec emploi d'un fil parallèle (SPT I et SPT II). Le fil neutre est à angles droits ou strié et l'autre fil doit être rond ou lisse (Voir le schéma).

Fil isolé (sauf fil vert) avec conducteur en cuivre	Fil isolé (sauf fil vert) avec conducteur en argent
---	---

Fil Neutre

- 5) Appuyer le luminaire contre le mur en alignant les trous sur la partie supérieure du luminaire aux trous sur le bord supérieur du panneau arrière. (**REMARQUE:** Pour des luminaires à une lumière, les trous sont situés sur le côté du luminaire et sur le panneau arrière).
- 6) Fixer le luminaire sur le panneau arrière à l'aide des vis.
- 7) Soulever le verre jusqu'au luminaire en passant le trou dans le verre par dessus la douille.
- 8) Visser l'anneau de la douille sur la douille pour fixer le verre.