

## Features

- For use with Loure<sup>®</sup> freestanding bath filler.
- Can be installed without required freestanding bath filler.






Codes/Standards ASME A112.18.1/CSA B125.1


KOHLER<sup>®</sup> Faucet Lifetime Limited Warranty See website for detailed warranty information.



## KOHLER. Faucets


Loure® Mounting-block K-97343

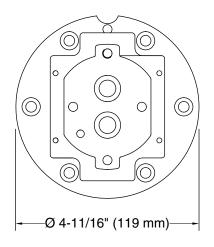



## **Technical Information**

All product dimensions are nominal.



## Notes

Install this product according to the installation guide.

Adequate floor support is required. The wood support must be a minimum of 2" (51 mm) thick by 6" (152 mm) wide. 2x6 lumber is NOT adequate for this application.

Concrete can be used as the floor support. Requires 3/16" masonry drill bit and six 1/4" x 1-3/4" concrete screws, not included.

