



## Rely® | K-8642

60" x 30" alcove shower base, right drain

### Features

- Low-threshold design for easy entry and exit
- Molded-in textured floor
- Water containment bead incorporated into threshold design provides an optimum barrier, preventing water from escaping from shower space
- Single threshold for alcove installation
- Coordinates with Choreograph® shower walls and other KOHLER® collections



### Available Colors/Finishes

*Color tiles intended for reference only.*

- |    |         |
|----|---------|
| 0  | White   |
| 96 | Biscuit |



1-800-4KOHLER (1-800-456-4537)  
Kohler Co. reserves the right to make revisions without notice to product specifications.  
For the most current specification sheet, go to [www.kohler.com](http://www.kohler.com) USA or [www.kohler.ca](http://www.kohler.ca) Canada.  
5-30-2026 21:7 - US-CA

THE BOLD LOOK  
OF **KOHLER**®

## Codes/Standards

CSA B45.5/IAPMO Z124  
ASTM E162  
ASTM E662

## Technical Information

*All product dimensions are nominal.*

|                            |                  |
|----------------------------|------------------|
| Drain Location:            | Right            |
| Drain Hole Diameter:       | 3-3/8" (86 mm)   |
| Shower Ledge Minimum Flat: | 2-5/8" (67 mm)   |
| Weight:                    | 59 lbs (26.8 kg) |

## Material

- Acrylic

## Recommended Products/Accessories

K-23726 Drain treatment  
K-23732 Tub & shower cleaner  
K-9132 Round shower drain for use with plastic pipe, gasket included


## Warranty

*See website for detailed warranty information.*

KOHLER® Plastic Baths and Shower Bases Lifetime Limited Warranty



1-800-4KOHLER (1-800-456-4537)  
Kohler Co. reserves the right to make revisions without notice to product specifications.  
For the most current specification sheet, go to [www.kohler.com](http://www.kohler.com) USA or [www.kohler.ca](http://www.kohler.ca) Canada.  
5-30-2026 21:7 - US-CA

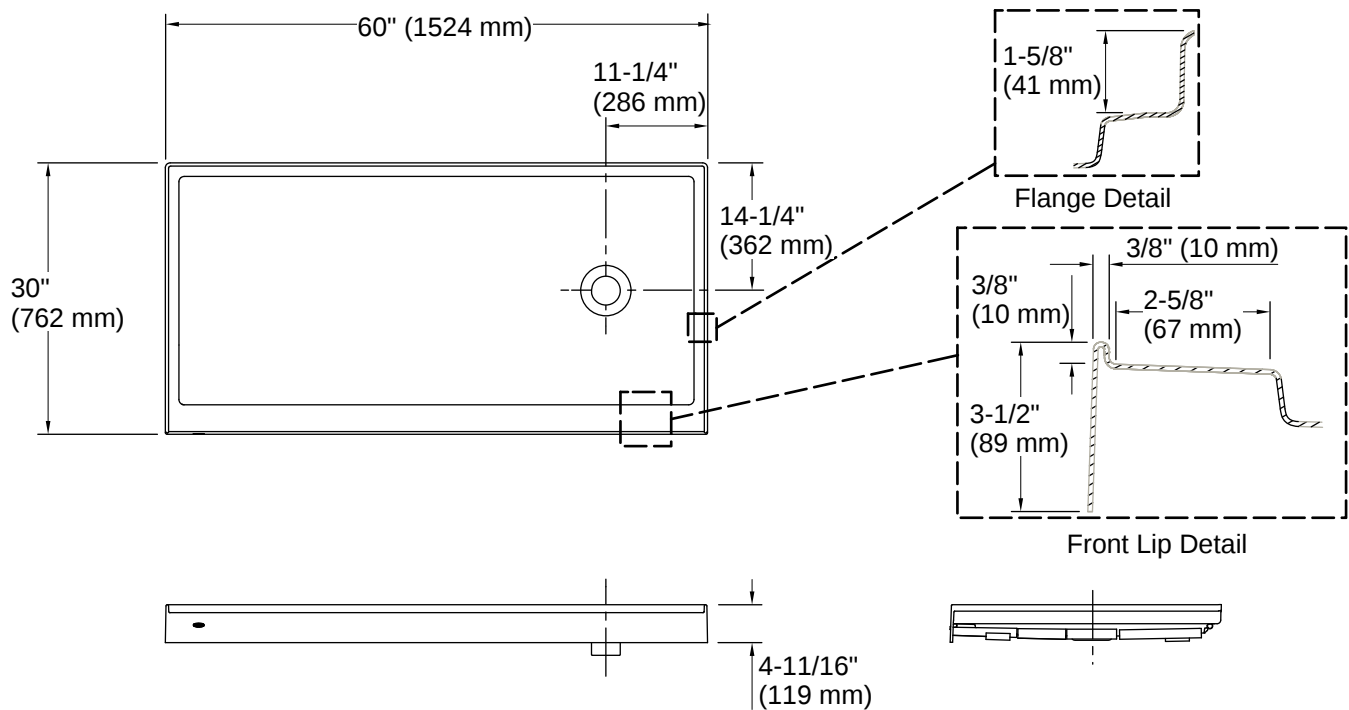

## Installation

- Right drain

## Installation Notes

*Install this product according to the installation instructions.*

Measure your actual product for rough-in details.

Subfloor must be within 1/2" (13 mm) of level.

This receptor has a front lip. This should be taken into account when installing a shower door.

