


Product Instructions

viiega

PureFlow® MINIBLOC™ Mounting Instructions

The MINIBLOC shall be installed using the MANABLOC® Installation Instructions (included) and this instruction sheet:

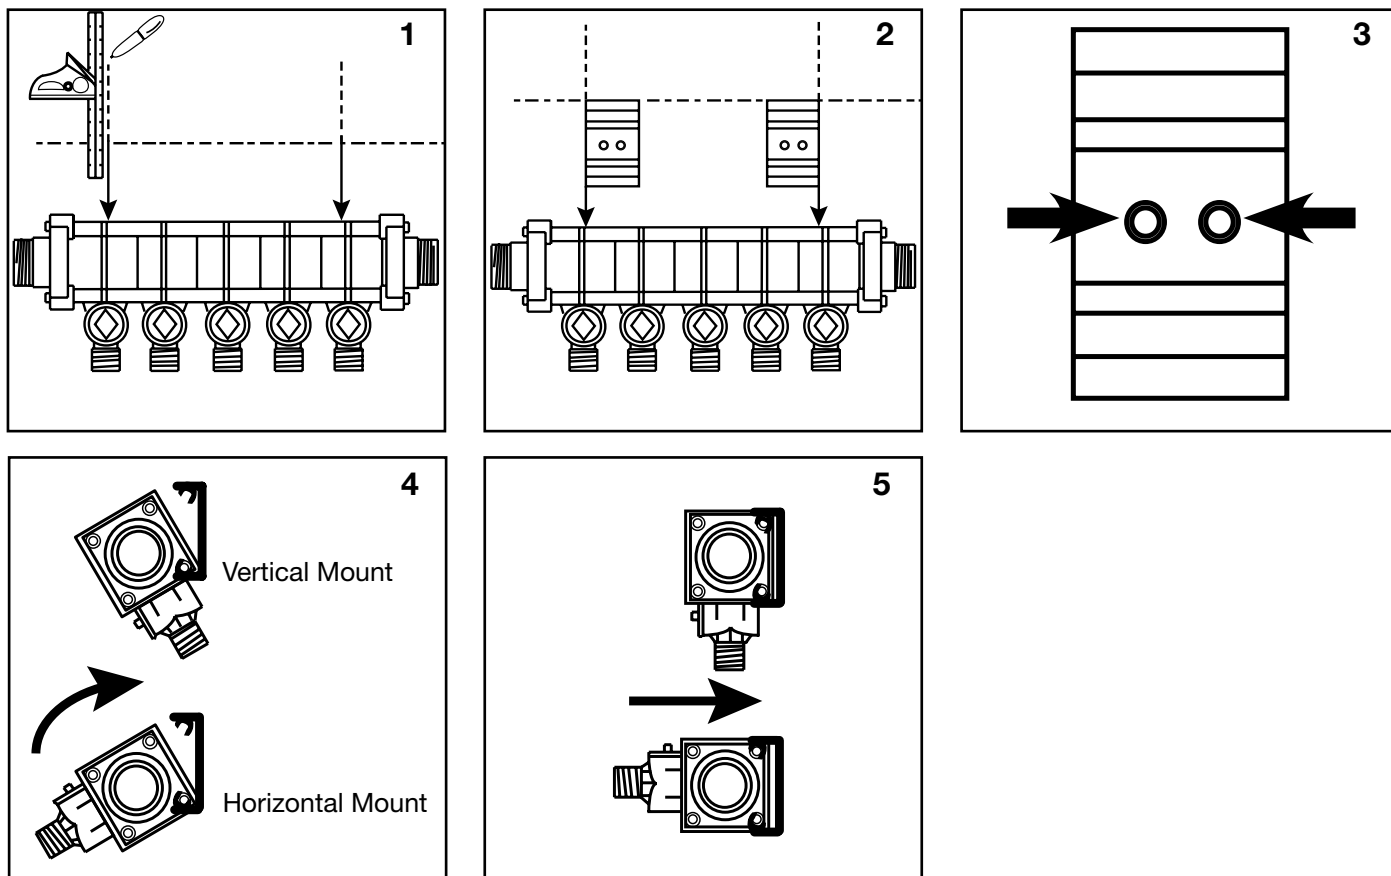

1. For proper bracket spacing, measure distance between the center ribs of the first and last MINIBLOC module. Mark this distance on the selected mounted surface.
2. Align the outside edge of each bracket within each end mark. Mounting brackets shall be mounted level and parallel to each other before affixing the MINIBLOC manifold. **NOTE: Use both mounting brackets provided with each MINIBLOC manifold. Ensure the mounting surface is suitable to support the weight of the manifold and attached tubing when filled with water.**
3. Use two wood screws per bracket, 1" or longer, to prevent misalignment.
4. Position bottom metal tie-rod into the bottom clip of the mounting brackets then roll manifold toward top clip. The MINIBLOC may be mounted either vertically or horizontally.
5. Complete mounting by firmly pushing the MINIBLOC toward the top clip of the mounting brackets which should spread and snap over top metal tie-rod.

Viega... The global leader in plumbing and heating systems.

301 N. Main, 9th Floor • Wichita, KS 67202 • Ph: 800-976-9819 • Fax: 800-976-9817 • E-Mail: insidesales@viiega.com • www.viiega.com

PI-PF-520531 0511 (Mounting the MINIBLOC)