

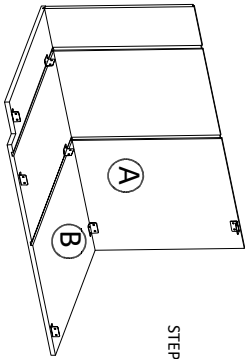


BMW30
ASSEMBLY INSTRUCTIONS


STEP 1: Joint side panel with back panel
STEP 2: Joint bottom panel with side panel
STEP 3: Joint side panel with bottom & back panel
STEP 4: Attach frame on and toekick board
STEP 5: Attach the wood block on the top corner.
STEP 6: Fix drawer together, then install the drawer guide.
STEP 7: Fix drawer head on the drawer front and adjust the cover-space

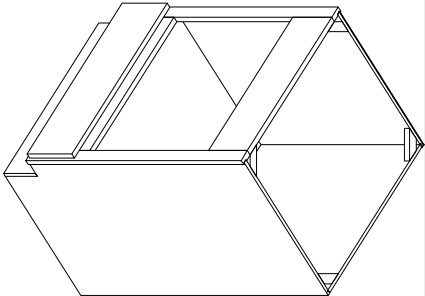


STEP:1

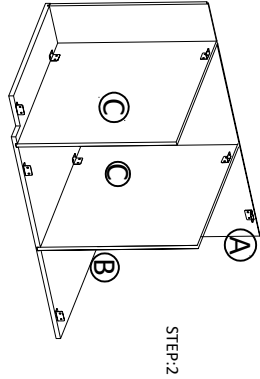


STEP:2

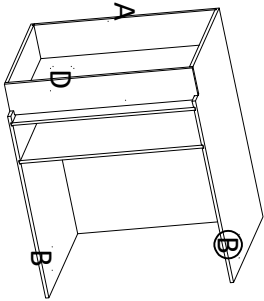


STEP:3

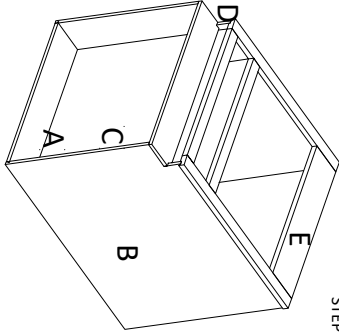


STEP:4

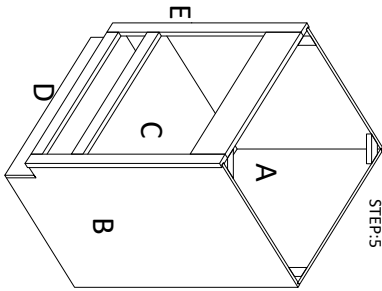


STEP:5

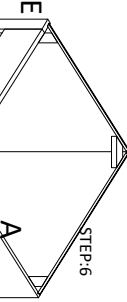


STEP:6

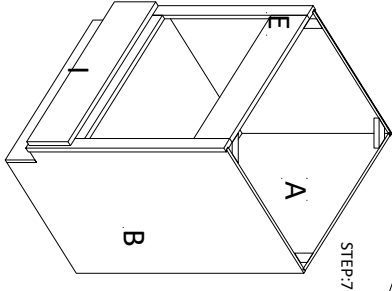



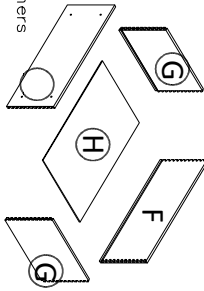

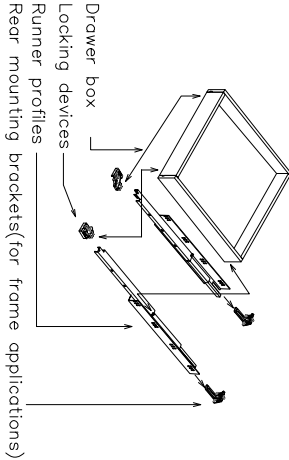


STEP:7



Full extension concealed drawer runners



7	BUMPER	4	
6	Selfclose slider	1	
5	9/16"ROUND HEAD SCREW	6	
4	CLEAT	14	
3	1"FLAT HEAD SCREW FOR CARCASS	4	
2	WOOD BLOCK	4	
1	1"FLAT HEAD SCREW FOR WOOD BLOCK	8	
NO.	Description	QTY	PICTURE

HARDWARE LIST

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	2
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER BOX FRONT AND BACK	2
G	DRAWER BOX SIDE	2
H	DRAWER BOX BOTTOM	1
I	DRAWER HEAD	1