


BT9


ASSEMBLY INSTRUCTIONS


- STEP 1: Joint side panel with back panel
STEP 2: Joint bottom panel with side panel
STEP 3: Joint side panel with bottom & back panel
STEP 4: Attach frame on and toe/kick board
STEP 5: Attach the wood block on the top corner
STEP 6: Fix door onto the frame and adjust the cover-space

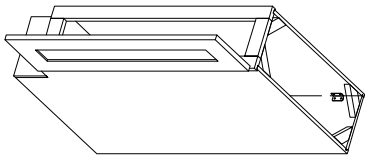

PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	FACE FRAME	1
E	TOE KICK	1
F	CABINETS DOOR	1


8	SOFTCLOSE HINGE	2	
---	-----------------	---	---


7	3/4" ROUND HEAD SCREW 2		
---	-------------------------	--	---


6	BUMPER	2	
---	--------	---	---

5	9/16"ROUND HEAD SCREW 40		
---	--------------------------	--	---


4	CLEAT	10	
---	-------	----	---

3	1"FLAT HEAD SCREW FOR CARCASS	2	
---	-------------------------------	---	---


2	WOOD BLOCK	4	
---	------------	---	---

1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	
---	-----------------------------------	---	---


NO.	Description	QTY	PICTURE
HARDWARE LIST			

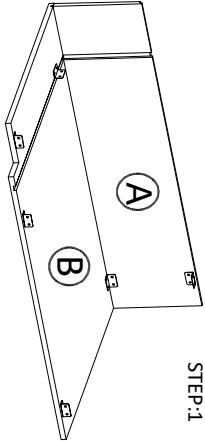


STEP:1

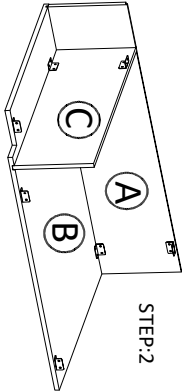


STEP:2

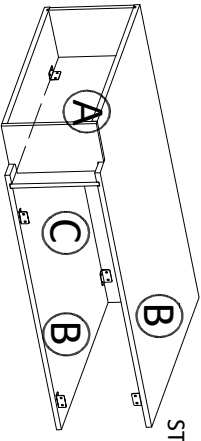


STEP:3

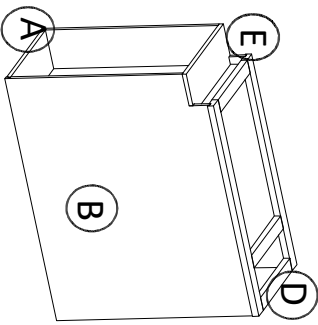

STEP:4

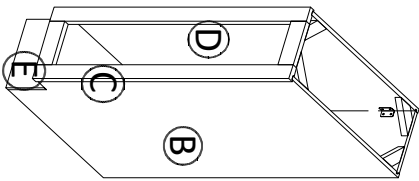

STEP:5

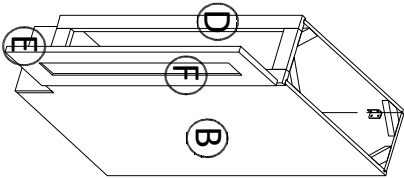

STEP:6