

8" Solid Surface Corner Shelf CS88PR

Installation Instructions

TOOLS REQUIRED



Level



Tape Measure




Silicone




Masking Tape




Pencil

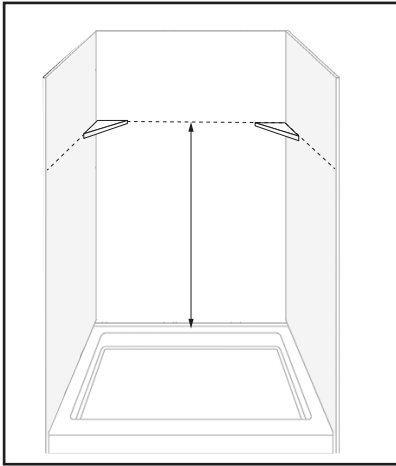


1. Can be installed left or right. Determine the mounting height of shelf.

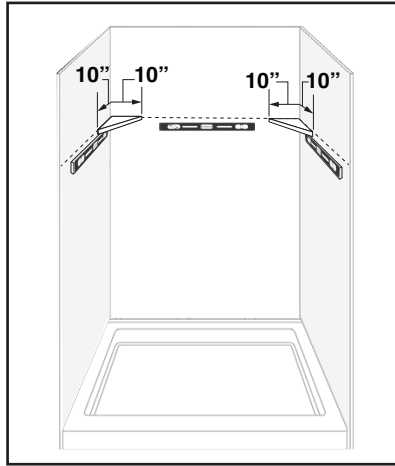


2. Using a level, mark 10" x 10" on each wall at determined height.

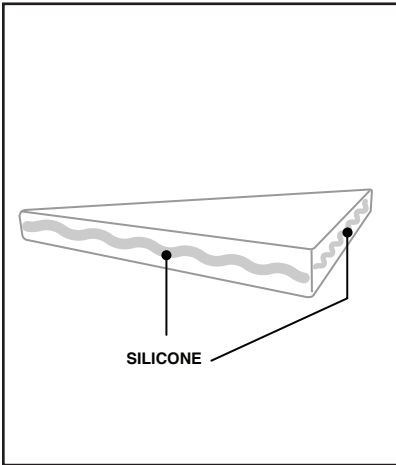

3. Apply generous silicone to back of shelf on flat edges *and* into grooved area.

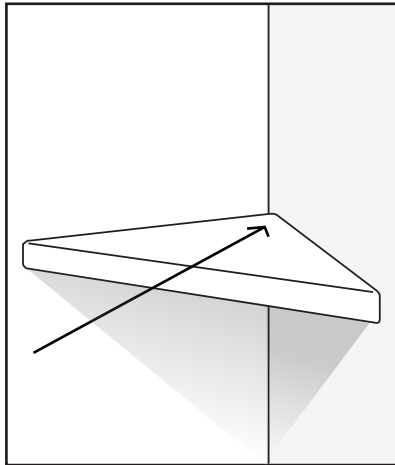

4. Install corner shelf over studs making sure shelf is level.

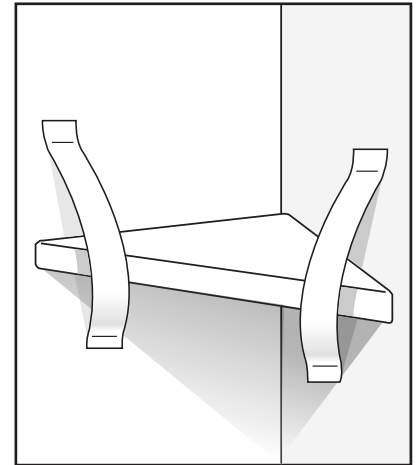

5. Secure shelf with tape for 60 minutes.