




## Trinity Eco Collection Wall Kits Installation Instructions

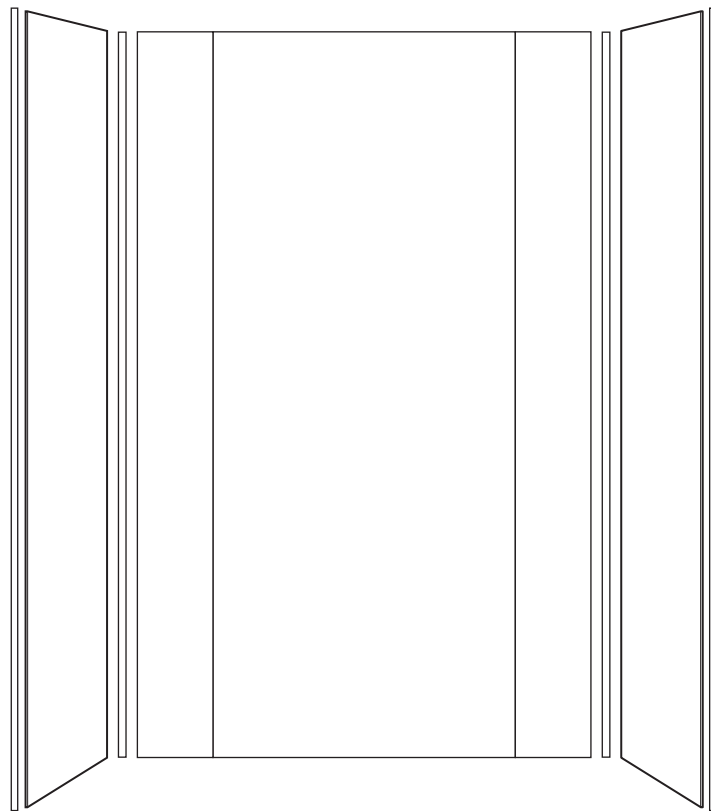

**READ AND UNDERSTAND BEFORE INSTALLING**

# Trinity Eco Collection Shower Wall Installation Instructions

The **TRINITY ECO COLLECTION** has been designed using 3 wall panels, 2 inside corner trim pieces and 2 outside edge trim pieces.

This attractive wall set can be ordered and installed using one accent panel and two matching side panels or with 3 panels of the same color.


Whichever you choose, the installation remains the same.

## TRINITY ECO COLLECTION KITS INCLUDE

- 1- 38.625" back panel
- 2-48" side panels
- 2 aluminum inside corner trim pieces
- 2 aluminum outside edge trim pieces



## INSTALLATION INSTRUCTIONS

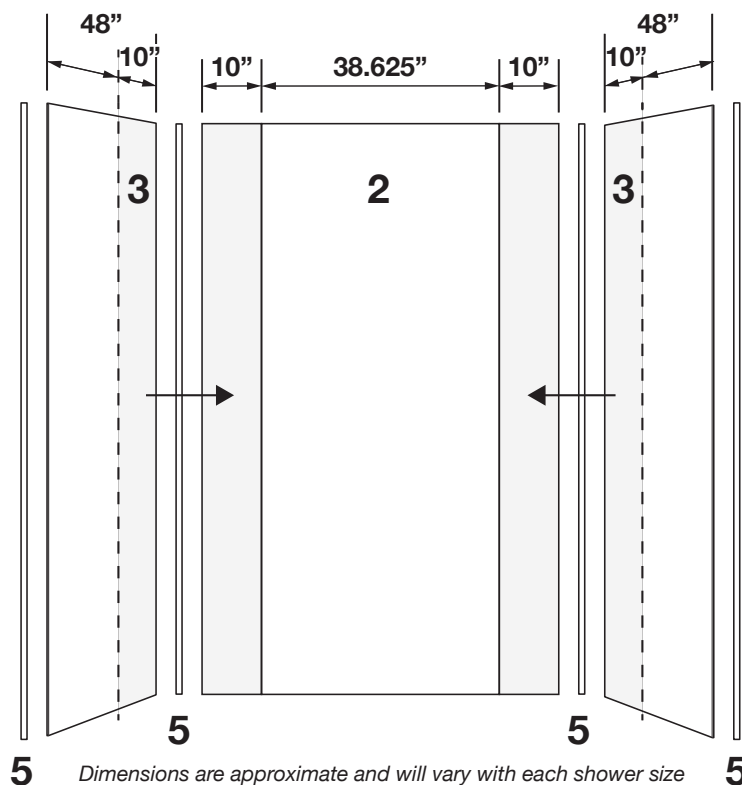

**(1)** Install your backer board and prep walls for installation. (*extra water proofing corners and seam protection recommended*).

**(2)** Install back panel **CENTERED** on backwall. (We recommended adhesive 5900 Hybrid for best results).

**(3)** Cut each side panel approximately 10" (using a straight edge and a circular saw).

**(4)** Make sure that the factory edge of each side panel will be installed against the factory edge of centered panel. (this ensures a smooth transition between the panels and provides a tight true transition).

**(5)** Install provided corner and end trim pieces, using the 5900 Hybrid, or a 100% silicone adhesive.

**(6)** Caulk corner trim using color matched adhesive.