



FSB36,FSB30
ASSEMBLY INSTRUCTIONS

- STEP 1 : Joint side panel with back panel
STEP 2: Joint bottom panel with side panel
STEP 3: Joint side panel with bottom & back panel
STEP 4: Attach frame on and toekick board
STEP 5: Attach the wood block on the top corner
STEP 6: Fix door&drawer head onto the frame and adjust the cover-space

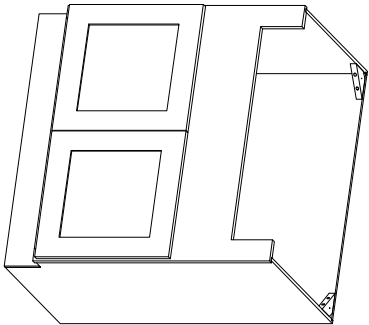


PARTS LIST		
NO.	Description	QTY
A	BACK PANEL	1
B	SIDE PANEL	2
C	TOP&BOTTOM PANEL	1
D	TOE KICK	1
E	FACE FRAME	1
F	DRAWER HEAD	2
G	CABINETS DOOR	2


8	HINGE	4	
---	-------	---	---


7	3/4" ROUND HEAD SCREW 4		
---	-------------------------	--	---

6	BUMPER	4	
---	--------	---	---

5	9/16"ROUND HEAD SCREW 44		
---	--------------------------	--	---

4	CLEAT	11	
---	-------	----	---

3	1"FLAT HEAD SCREW FOR CARCASS	4	
---	-------------------------------	---	---

2	WOOD BLOCK	4	
---	------------	---	---

1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	
---	-----------------------------------	---	---

NO.	Description	QTY	PICTURE
HARDWARE LIST			

