

V2421DL-2D&DR V3021DL-2D&DR  
V2721DL-2D&DR V3321DL-2D&DR

ASSEMBLY INSTRUCTIONS

Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel



STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board


STEP 5: Joint the drawer together, then install the drawer guide.

STEP 6: Attach the wood block on the top corner.

STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

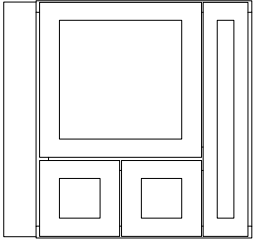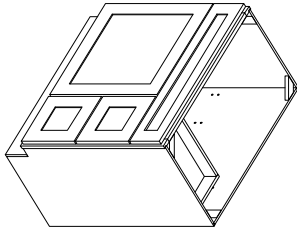


V2421DR-2D  
V3021DR-2D

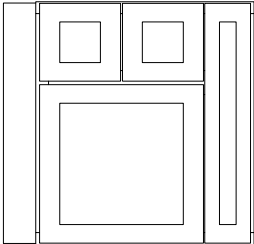


V2421DL-2D  
V3021DL-2D

| PARTS LIST |                           |     |
|------------|---------------------------|-----|
| NO.        | Description               | QTY |
| A          | BACK PANEL                | 1   |
| B          | SIDE PANEL                | 2   |
| C          | TOP&BOTTOM PANEL          | 1   |
| D          | TOE KICK                  | 1   |
| E          | FACE FRAME                | 1   |
| F          | DRAWER BOX FRONT AND BACK | 6   |
| G          | DRAWER BOX SIDE           | 6   |
| H          | DRAWER BOX BOTTOM         | 3   |
| I          | CABINETS DOOR             | 1   |
| J          | DRAWER HEAD               | 4   |


| NO.           | Description                       | QTY | PICTURE |
|---------------|-----------------------------------|-----|---------|
| HARDWARE LIST |                                   |     |         |
| 10            | SOFT CLOSE HINGE                  | 2   |         |
| 9             | 3/4" ROUND HEAD SCREW             | 2   |         |
| 8             | BUMPER                            | 14  |         |
| 7             | 1" ROUND HEAD SCREW 12            |     |         |
| 6             | Selfclose slider                  | 2   |         |
| 5             | 9/16"ROUND HEAD SCREW 44          |     |         |
| 4             | CLEAT                             | 11  |         |
| 3             | TFLAT HEAD SCREW FOR CARCASS      | 4   |         |
| 2             | WOOD BLOCK                        | 4   |         |
| 1             | 1" FLAT HEAD SCREW FOR WOOD BLOCK | 8   |         |

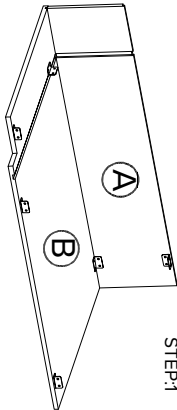


STEP:1

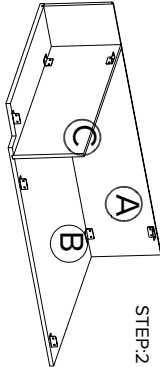


STEP:2

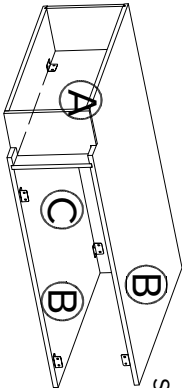

STEP:3

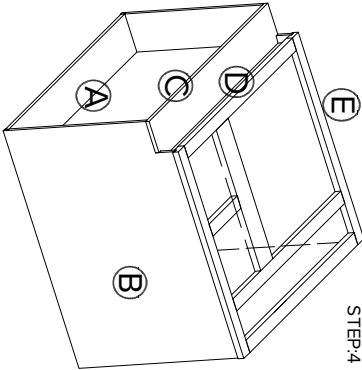


STEP:4

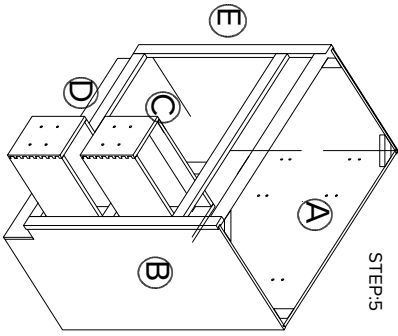



STEP:5

STEP:6

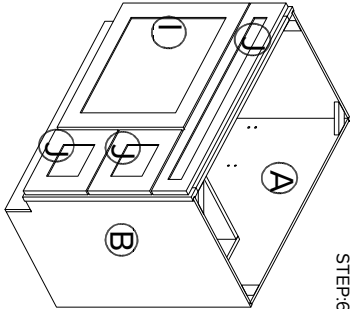

STEP:7

Full extension concealed drawer runners

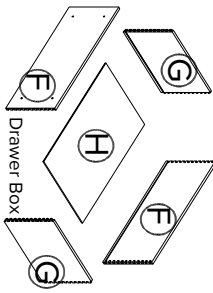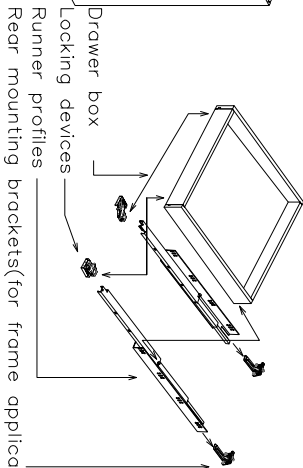

Drawer Box