

# Ensemble™

## 60" x 42" Bath/Shower with Backer Boards

### 71110116



#### Features

- Modular design allows it to be moved around corners and through doorways with ease.
- Durable high gloss finish.
- Gentle sloping back, neck, and armrests in bath.
- Integral apron eliminates installation step.
- Realistic tile wall surround features molded-in shelves for generous storage space.
- Wall surround includes backer boards for future grab bar installation.
- 3" (76 mm) wainscot/tile ledge.
- 16" (406 mm) bath depth (floor to top of threshold).
- 60" (1524 mm) x 42" (11067 mm) x 72" (1829 mm) complete unit finished dimensions.

#### Material

- Compression molded from our exclusive solid Vikrell® material.

#### Installation

- Tongue-and-groove four piece modular design allows for easy snap together installation.
- Some caulk required for proper installation.

#### Components

Product includes:

- 71114106 60" x 42" Wall Set w/Backer Boards
- 71111110 60" x 42" Bath



#### Codes/Standards



CSA B45.5/IAPMO Z124  
ASTM E162  
ASTM E662  
Greenguard UL 2818 - Gold  
HUD, UM Bulletin 73

#### Warranty – Bathing Fixtures (and) Kitchen and Utility Sinks Made of Solid Vikrell® Material


See website for detailed warranty information.

#### Available Color/Finishes

*Color tiles intended for reference only.*

Color	Code	Description
	0	White
	96	KOHLER Biscuit

## Ensemble™ 60" x 42" Bath/Shower with Backer Boards 71110116

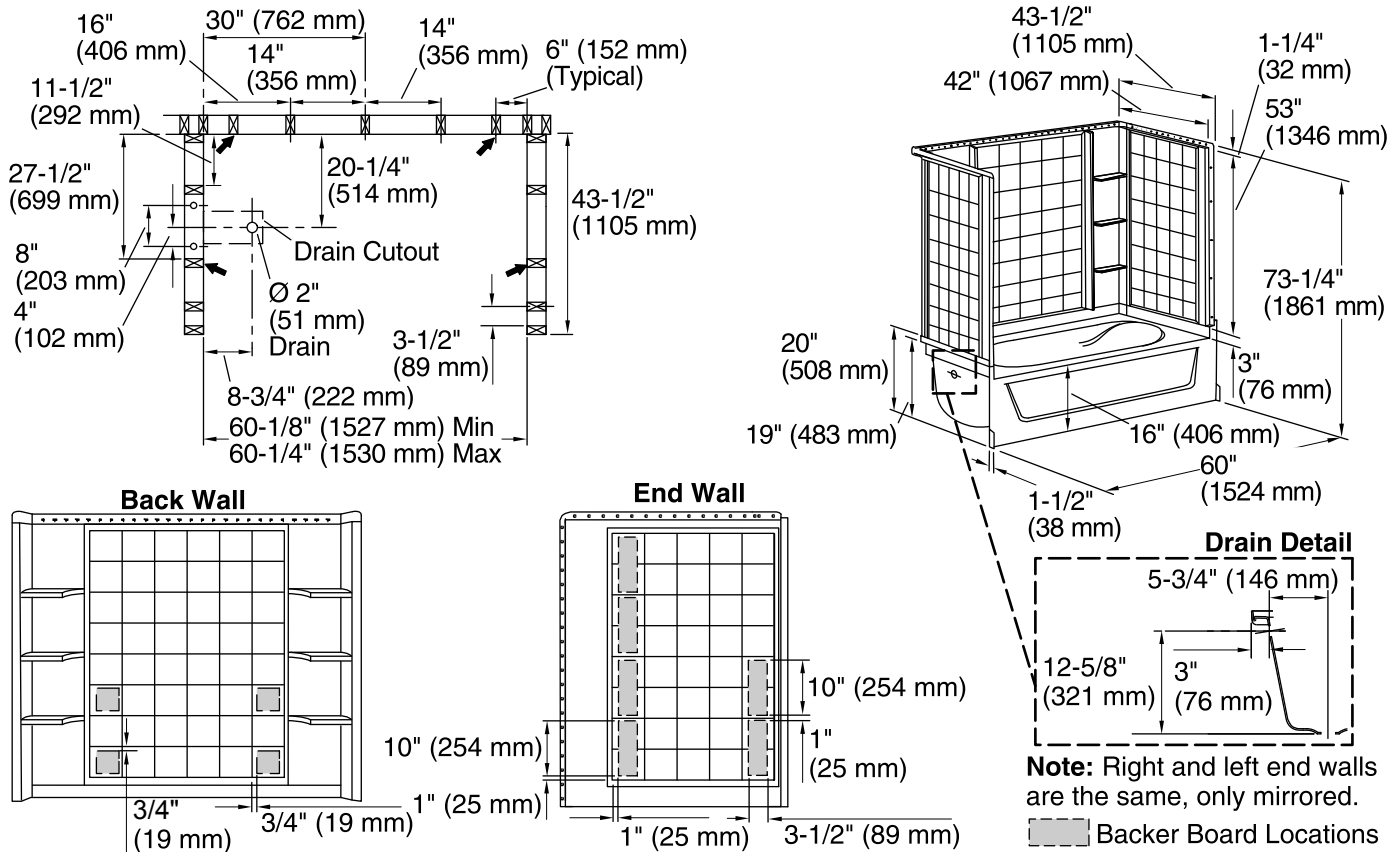

### Technical Information

All product dimensions are nominal.

Installation: 3-Wall Alcove

Drain location: Left

Basin area, bottom: 40" x 27" (1016 mm x 686 mm)

Basin area, top: 52" x 35" (1321 mm x 889 mm)

Water depth: 11" (279 mm)

Water capacity: 45 gal (170.3 L)

Minimum flat for door: 3-1/4" (83 mm)

Door height required: 55-3/4" (1416 mm)

Door width required: 58-1/2" (1486 mm)

### Notes

Install this product according to the installation instructions.

Studs should be positioned roughly as shown.

Double studding is recommended for pivot shower door installations.

Attach grab bars at the specified backer board locations only.