


Barrier Free Shower Floors


With Fit-Flo Drain

Manufactured from Veritek[®]

(see page 2 for detailed information)

Veritek[®] SHOWER FLOORS

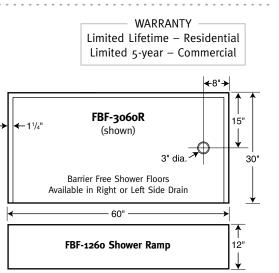



COLORS

(See inside back cover for color sample.)
White (010)
Bone (037)
Bisque (018)

FEATURES

- Will not mold or mildew, no grout to clean
- Coordinates with Swanstone shower and bath systems
- Slip-resistant surface
- Made of Veritek with no surface coating to chip or crack
- FBF-3060 Can be recessed for flush mounting or can be used with a ramp.

		Universal Design					
	Nominal	Rough-In Dimensions					
Model	Size	60"	30"	8"	15"		
FBF-3060L Barrier Free (lef	30" x 60" t side drain)	60-3/8"	30-3/16"	8-3/16"	15-3/16"		
FBF-3060R Barrier Free (rig	30" x 60" ht side drain)	60-3/8"	30-3/16"	8-3/16"	15-3/16"		

IMPORTANT: Rough-in dimensions are provided for reference only. You must measure the actual shower floor and check local building code requirements before construction of the stud wall.

SPECIFICATIONS

Barrier Free Shower Floors With Fit-Flo Drain

Model	Part	Nominal Size Dimensions	Ship Wt. Lb.	Ship UPS	Carton Dims. In.	Cu. Ft.
FBF-3060L	FBo3o6oLM	30" D x 60" W – Left Drain (762 mm x 1524 mm)	64	-	66 x 36 x 10	14
FBF-3060R	FB03060RM	30" D x 60" W - Right Drain (762 mm x 1524 mm)	64	-	66 x 36 x 10	14
FBF-1260	FB01260	12" D x 60" W – Ramp (306 mm x 1524 mm)	25	-	66 x 14 x 2	1.07

Kit Includes: One code approved compression molded Veritek[®] shower floor with molded-in Fit-Flo drain and complete installation instructions. Packaging: Each floor packed in a rectangular carton.

ACCESSORIES

See page 109 for complete listing of all Universal Design accessories.

STANDARDS AND RATINGS

Class B fire rating American National Standard Institute—ANSI Z124.1.2–2005 International Association of Plumbing and Mechanical Officials (IAPMO)—listed cUPC listed—Certified to CSA Standard B45 by IAPMO American Society for Testing and Materials National Electrical Manufacturers Association

SUPPORT DOCUMENTS

Installation instructions available on line at www.swanstone.com

MAINTENANCE AND CLEANING INFORMATION

Everyday cleaning with liquid cleaners such as Dow or Lysol foaming bubbles, Top Job, Mr. Clean or similar type products with a sponge or Mr. Clean Magic Eraser. To remove hard water stains or mineral build-up, scale removers such as Lime Away, Rust-out or Whink are recommended. Abrasive cleaners are not recommended on shower bases because they are designed with high sheen areas to help prevent soap scum build up. Prolonged scrubbing will dull the surface over time and promote buildup and soap scum. Do not use "leave on" cleaning products such as the Automatic Shower Cleaner. Prolonged contact with harsh chemicals could have an adverse reactive over time and discolor your surfaces. Do not use cleaning agents that caution use on acrylic, polyester or plastics.

106