

Veritek® Shower Alcove Walls

SHOWER ALCOVE WALLS


Manufactured from Veritek®

(see page 2 for detailed information)

WARRANTY
Limited Lifetime – Residential
Limited 5-year – Commercial

FEATURES

- Nails directly to studs for fast installation
- Sturdy interlocking system for one-piece appearance
- Panels easily fit through existing doorways and can be installed by one person
- Made of Veritek composite material with no surface coating to chip or crack
- The SA Series is a 3-piece compression molded material with molded-in color and a natural gloss surface

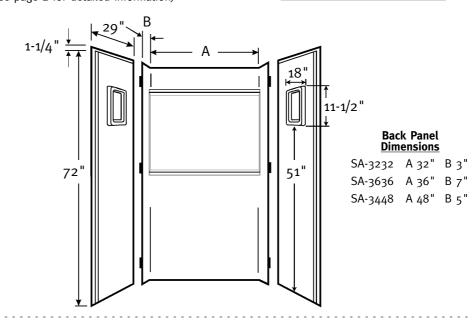

SPECIFICATIONS

Veritek® Shower Alcove Walls

Model	Part	Wall Area Designed To Fit	Ship Wt. Lb.	Ship UPS	Carton Dims. In.	Cu. Ft.
SA-3232		32" D x 32" W x 72" F 313 mm x 813 mm x 1829		-	76 x 35 x 10	15.97
Fits shower floor size 32" D x 32" W x 4" H (813 mm x 813 mm x 102 mm)						
SA-3636		36" D x 36" W x 72" F 314 mm x 914 mm x 1829		-	80 x 40 x 10	20.37
Fits shower floor size 36" D x 36" W x 4" H (914 mm x 914 mm x 102 mm)						
SA-3448	2,,	34" D x 48" W x 72" F 64 mm x 1219 mm x 1829		-	76 x 52 x 10	23.39
Fits showe	r floor size 34'	" D x 48" W x 4" H (864	mm x 1219	mm x	102 mm)	

^{*1-1/2&}quot; additional area required on outer edges of wall panels to accommodate nail-up flange.

STANDARDS AND RATINGS

Class B fire rating American Society for Testing and Materials National Electrical Manufacturers Association

SUPPORT DOCUMENTS

Installation instructions available on line at www.swanstone.com



COLORS

(See inside back cover for color sample.)

- White (010)
- Bermuda Sand (040)
- Bone (037)
- Gray Granite (042)
- Bisque (018)
- Tahiti Desert (050)

Each Kit Includes: One right side panel, one left side panel, one back panel with six factory installed wall mounting clips, and complete installation instructions.

Packaging: Each kit is packed in a flat, rectangular carton.

MAINTENANCE AND CLEANING INFORMATION

Wash regularly with non-abrasive, liquid cleaners, a sponge, soft cloth or Mr. Clean Magic Eraser. For hard water stains or mineral build-up, scale removers such as Lime Away, Rust-out or Whink can be used. To protect the finish, fiberglass wax or automotive paste wax can be applied. **Do not** use abrasive cleaners or pads. **Do not** use "leave on" cleaning products such as the Automatic Shower Cleaner. Prolonged contact with harsh chemicals could have an adverse reactive over time and discolor your surfaces. **Do not** use cleaning agents that caution use on acrylic, polyester or plastics.