

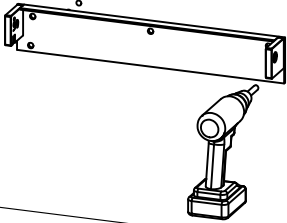
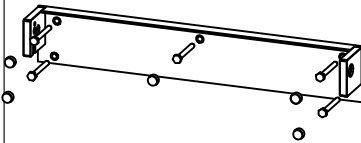


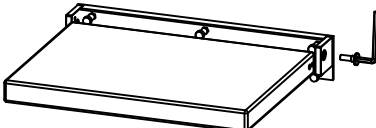

QUICK INSTALLATION TIPS OF SEAT

Product Kit Overview			
Seat Pad  1 Piece	Seat Bracket  1 Piece	Allen Key  1 Piece	Screws M6.5 × 75mm Self-Tapping Screw  5 Piece
Wall Plugs  5 Piece	Decorative Caps  5 Piece	Screws  2 Piece	304 SS M10X35.large flat socket head bolt 
1 	2 	3 	4 

Installation Instructions

1.A.Use an Allen key to unscrew the two connected screws on the seat bracket. Position the seat bracket on your chosen wall and check that it is horizontally aligned using a spirit level. Use a pencil to mark out the required drill holes on the wall.

B.Move the seat bracket aside, and use a 10mm drill bit to drill the holes into the wall.

2.Insert the wall plugs into the drilled holes and lightly tap into place using a rubber mallet until they become level with the wall.

3.Fix the seat bracket over the wall plugs. Fix the provided screws into place using a screwdriver. Install the decorative caps onto the screws.

4. Fit the seat pad onto the seat bracket and tighten it with the two connected screws. Please refer to figure(4).

Warranty Requirements

Please follow the instructions provided within this guide, as any damage caused by improper installation, use, or maintenance will void your warranty

- Do not use acid cleansers.
- Do not use abrasive cleaners.
- Do not use abrasive cloths.

Maintenance Instructions

- To clean the shower seat, gently apply water or glass cleaner to its surface and wipe it dry with a soft cloth.
 - To remove surface marks, use a non-abrasive, neutral cleansing solution.
 - Avoid any contact with acidic and/or abrasive cleaning solutions and cloths.
- ★ The consumer needs to take responsibility for any damage caused by improper maintenance and incorrect cleaning products.