







FLOOR-MOUNTED LAUNDRY TUB ASSEMBLY INSTRUCTIONS

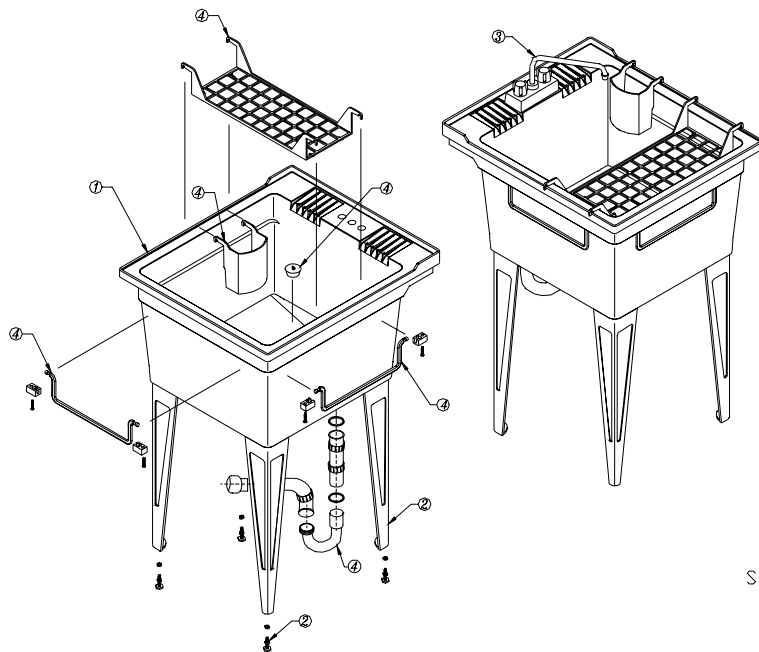

Accessory Package
consists of the following:

- (1) Drying Rack
- (2) Towel Bars
- (1) Bottle Holder
- (1) P-trap kit.

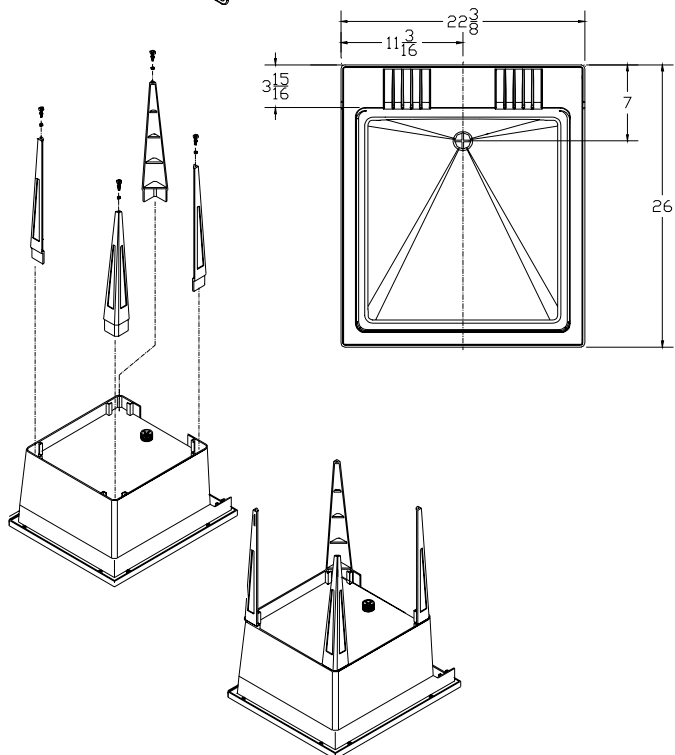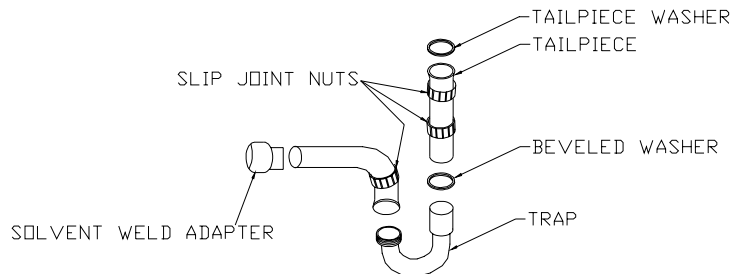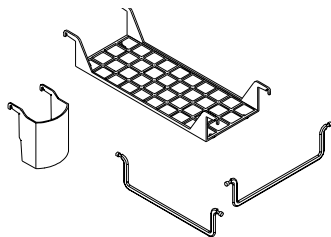



Instructions:

Set laundry tub upside down on a clean, smooth surface, this will help prevent any damage to the tub rim. Insert legs into corner sockets as shown above. A wood block can be used if needed. Turn tub right-side up and adjust the provided leveling stubs to desired height. Tub can now be put in place, leveled, and water supply connections added in accordance with local water code requirements.



WALL-MOUNTED LAUNDRY TUB ASSEMBLY INSTRUCTIONS

Set the wall-mount bracket against the wall, making sure it is level, and mark the hole positions. The holes will be 2 ½" below the top of the back of the tub. Drill the four holes for the ¼" diameter anchor inserts (A). Push the plastic anchors into the holes in the wall. Make sure the wall is of a material that is sufficient to hold the anchors once the tub is attached and full of water. Concrete walls are recommended. If the wall is not concrete, the floor-mounted model is recommended. Mount the bracket to the wall using the four #12 x 1 ¼" phillips pan head bracket screws (B).

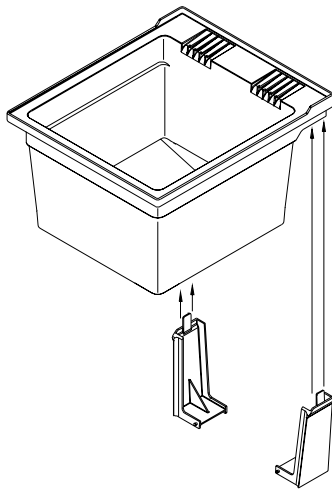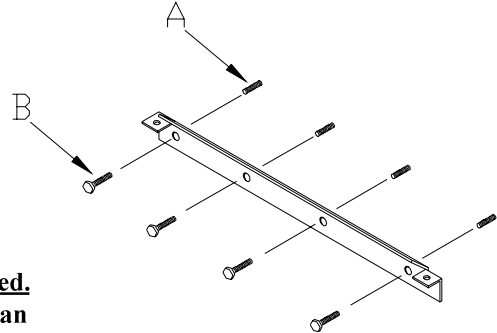

Attach the filler plates to the back of the tub as shown. The tongue on top of the filler plate should fit into the groove under the backside of the tub. The attachment pins on the bottom of the filler plates will align with the holes in the tub. Note that there is a left and right filler plate. If they are not used on the correct side the pins will not align with the holes. The filler plate may need to be tapped with a hammer to push the pin into the hole completely.

Hang the backside of the tub on the tapered top of the bracket so that the tub is centered on the bracket. Align the remaining two holes in the bracket with the two plastic bosses on the underside of the back of the tub. Attach the tub to the bracket using the two #8 x 5/8" phillips button head screws. This must be done from the underside of the tub.

