



Stratus/Stratford By-pass Shower Door

INSTALLATION GUIDE

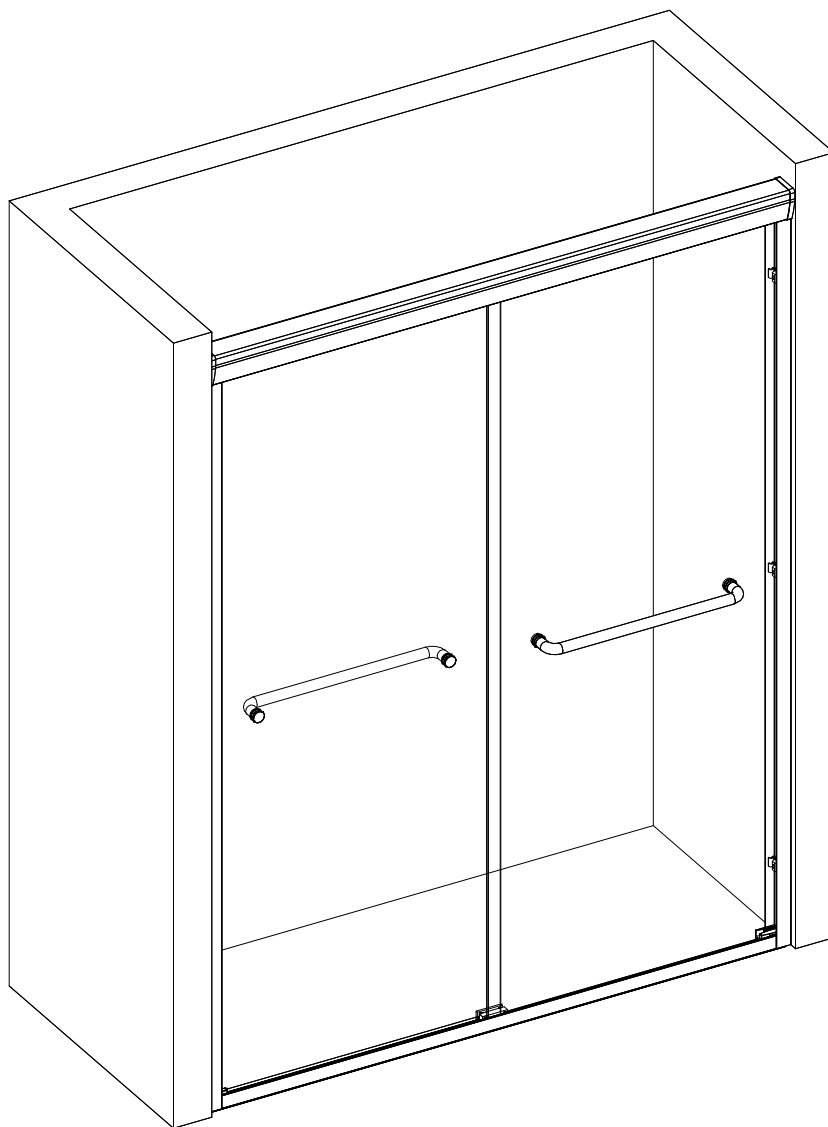


TOOLS REQUIRED (Supplied)

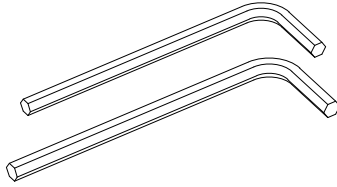


2.5mm&4mm&5mm


TOOLS REQUIRED (Not Supplied)

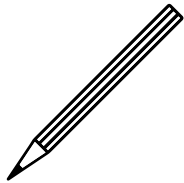

Pencil

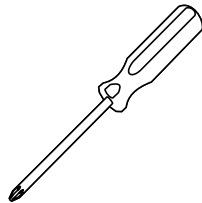


Screwdriver

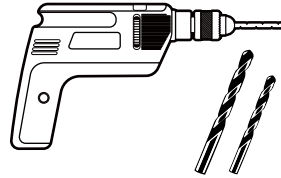

Drill and drill bits
Ø8/25"[8mm]
Ø6/25"[6mm]
Ø1/8"[3mm]




Cutter




Measuring tape



Level

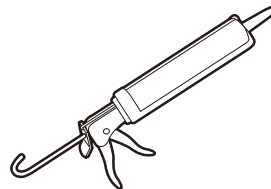

Silicone

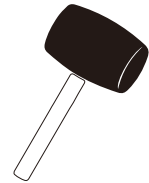

Rubber mallet



Safety gloves




Safety glasses



Hacksaw



Masking tape



Wooden Spacer



Professional-grade
Glass suction cup



**Wrenches
(included)**



SAFETY INFORMATION


CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always read and follow all the steps in the installation instructions.
- Inspect all contents and glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Handle the tempered glass with caution! Improperly handling the glass can cause it to break suddenly in small pieces (never in pointed fragments).
- Always take all precautions not to touch the tempered glass with any tools during the installation, or after installed.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage; if there is damage to the unit prior to installation, please contact customer service
- Install the shower on a floor that is level and able to accommodate the weight of the unit and an occupant.
- Consult local building codes and compliance standards prior to installation and ensure conformity.
- After installation, and from time to time, check the glass for fit and finish to ensure that nothing has come loose since installation.
- Keep this installation manual for future reference.

NOTICE

- Any modification or alteration from what is specified in this instruction manual will void any and all warranty on this product.
- The distributor is not responsible for any damage to the unit or personal property caused by improper installation. If you disregard instructional warnings, you will void your warranty and possibly deal with water damage.
- Consult the distributor's website for any additional information or question on this product's installation.

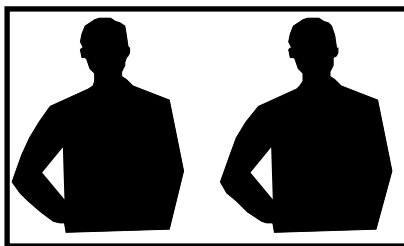


- You will need at least two people to install this unit properly.
- Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.
- Estimated Assembly Time: 2 hours













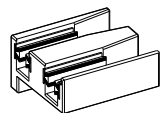
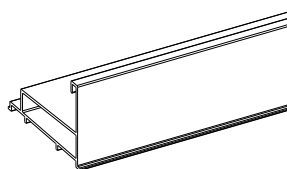
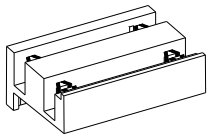
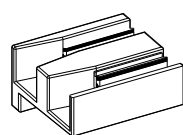
CARE AND MAINTENANCE

- For the daily maintenance, use a wet cloth and a soft liquid cleaner.
- Never use abrasive cleaners containing some acetone, chlorine or strong bleach, scrapers, metallic brushes, nor other objects or the products which can graze or tarnish surfaces.
- Check every 4 months and re-tighten them if necessary.

PACKAGE CONTENT

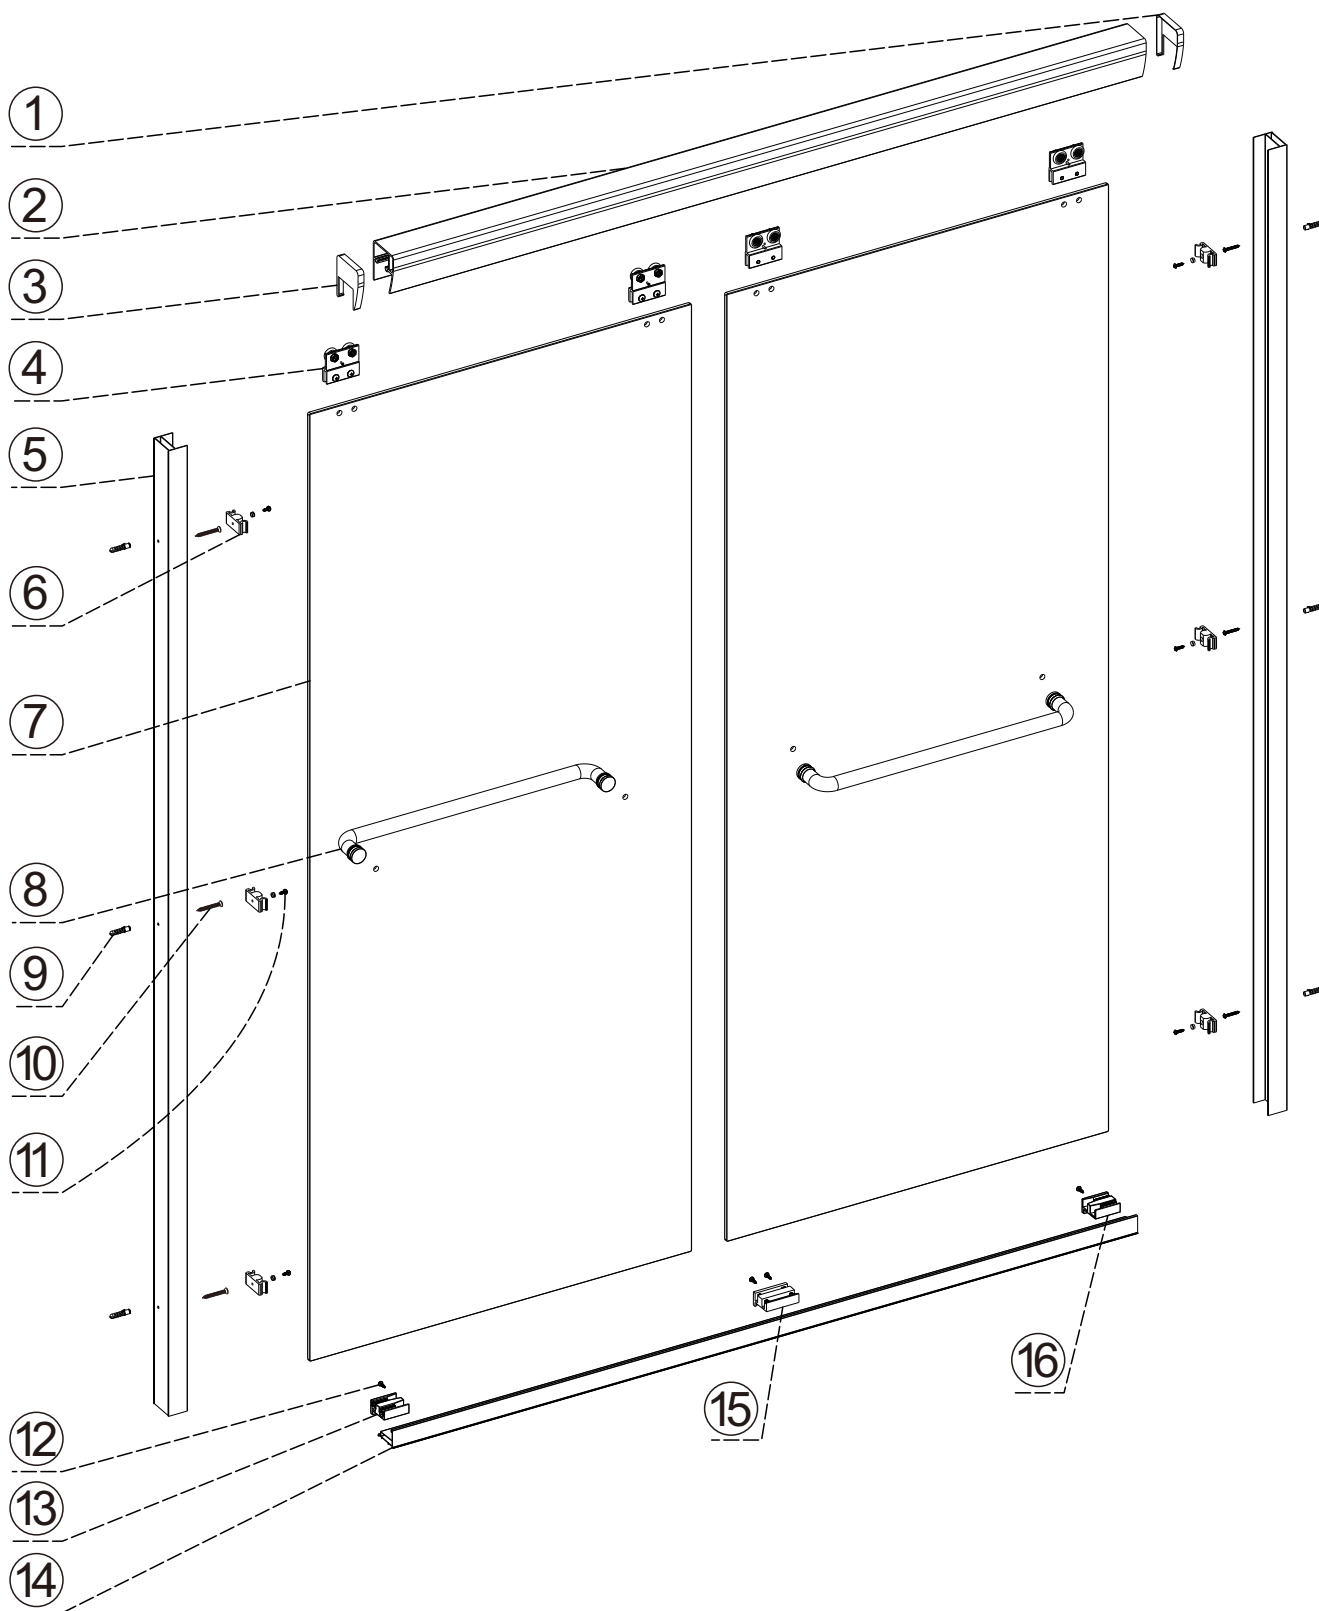

PACKAGE CONTENT

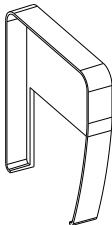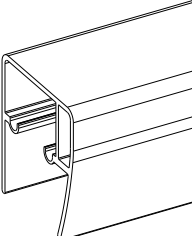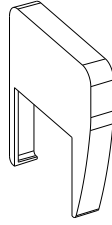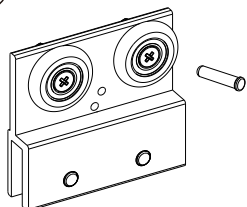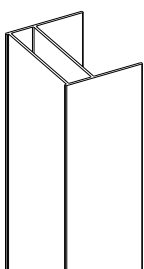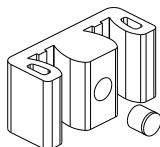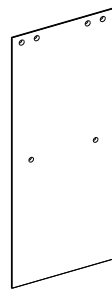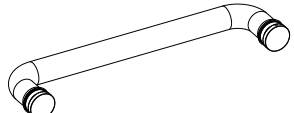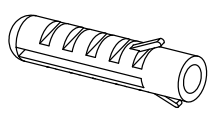
 <p>X1</p>	 <p>X1</p>	 <p>X1</p>	 <p>X4</p>
 <p>X2</p>	 <p>X6</p>	 <p>X2</p>	 <p>X2</p>
 <p>X6</p>	<p>⑩ ST4X35</p>  <p>X6</p>	<p>⑪ ST4X16</p>  <p>X6</p>	<p>⑫ ST4X16</p>  <p>X4</p>
 <p>X1</p>	 <p>X1</p>	 <p>X1</p>	 <p>X1</p>

PART LIST

Part number	Description	Quantity	Code
1	Right Decorative cover	1	
2	Top Track	1	
3	Left Decorative cover	1	
4	Roller	4	
5	Wall profile	2	
6	Bumper blocks	6	
7	Door Panel	2	
8	Handle	2	
9	Wall Anchor	6	
10	ST4x35 Countersunk Screw	6	
11	St4x16 Countersunk Screw	6	
12	St4x16 Countersunk Screw	4	
13	Left guide block	1	
14	Bottom Track	1	
15	Middle guide block	1	
16	Right guide block	1	
XX indicate hardware finish: PC = Polished Chrome; BS = Brushed Stainless; MB = Matte Black; CB = Champagne Bronze			

INSTALLATION STEPS

1. Measure the finished opening width at the bottom and the model height. Use these dimensions as "**W1**"(**TOP**) and "**W2**"(**bottom**). Compare W1 and W2, use the smaller number as finished opening size. Verify that the model size ordered will fit the finished opening before beginning installation.

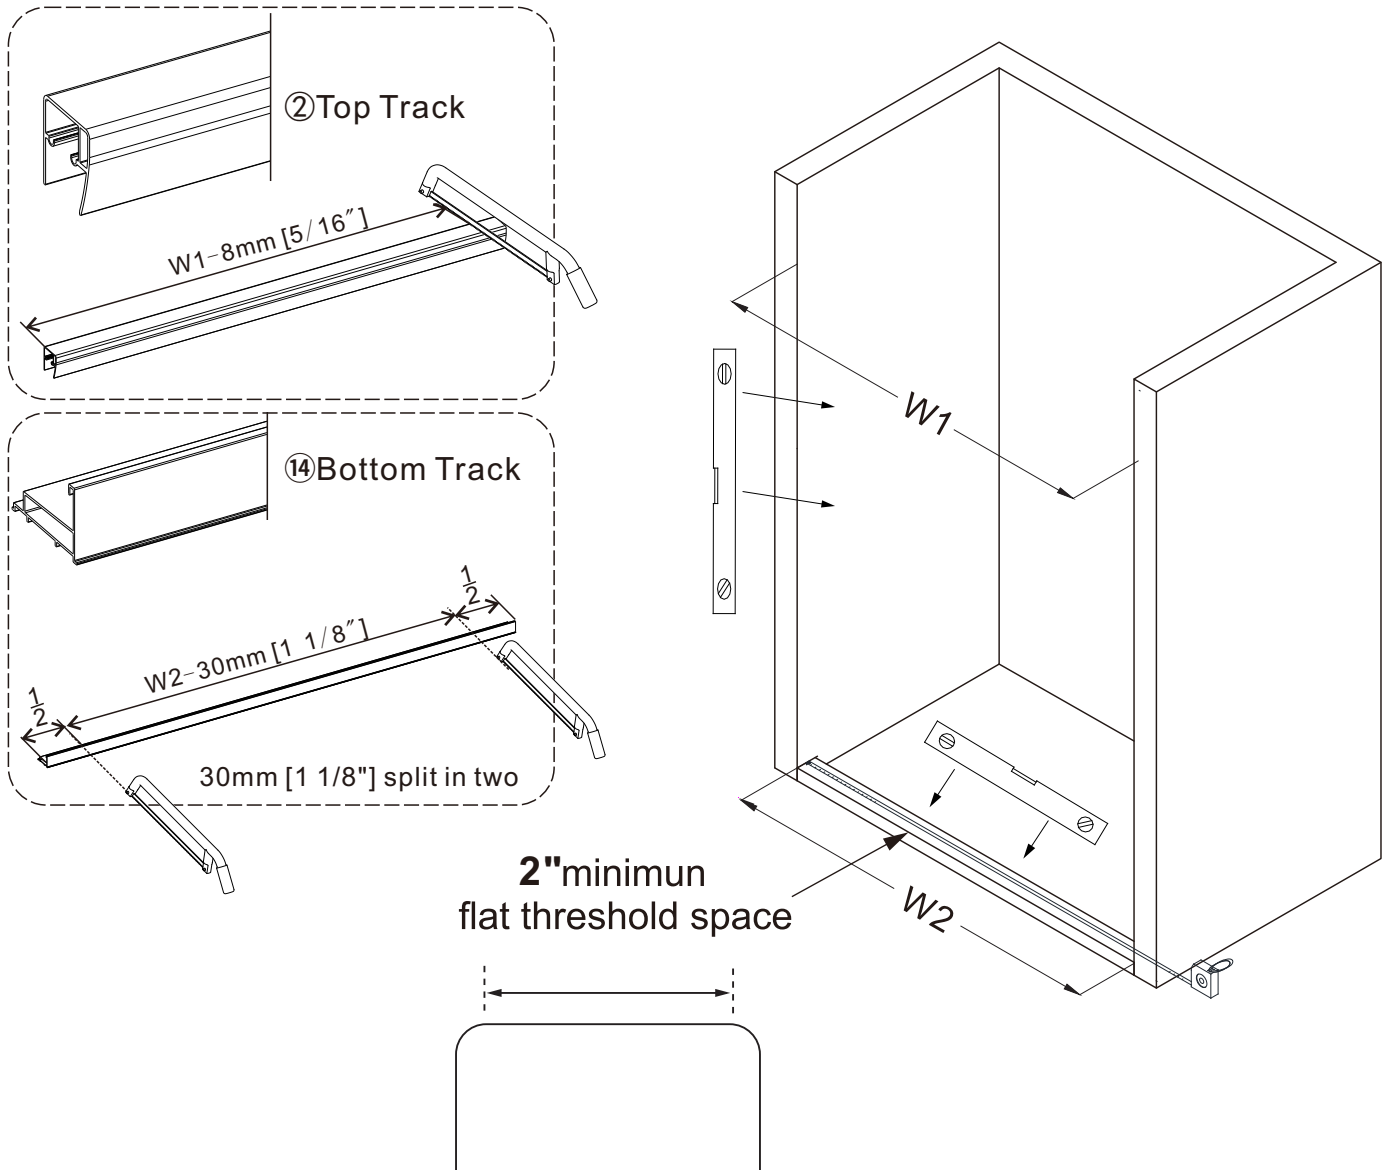

! WARNING!

This door requires a minimum 2" flat threshold space for installation





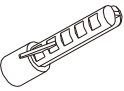
! WARNING!

Threshold must be level. The door may not function properly if the threshold is out-of-level.


! WARNING!

This door has limited out of plumb adjustment. Each wall profile allows up to $1/4"$ out of plumb adjustment. Out of plumb adjustments greater than $1/2"$ may cause the door not to function properly.


◆ Installation Steps

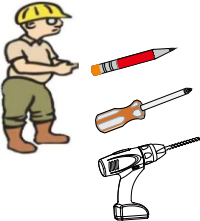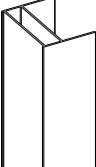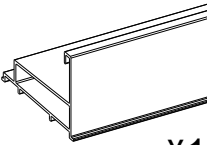	5 Wall profile	14 Bottom Track	10 Screw ST4*35	9 Wall Anchor
	 X2	 X1	 X6	 X6


Step 1

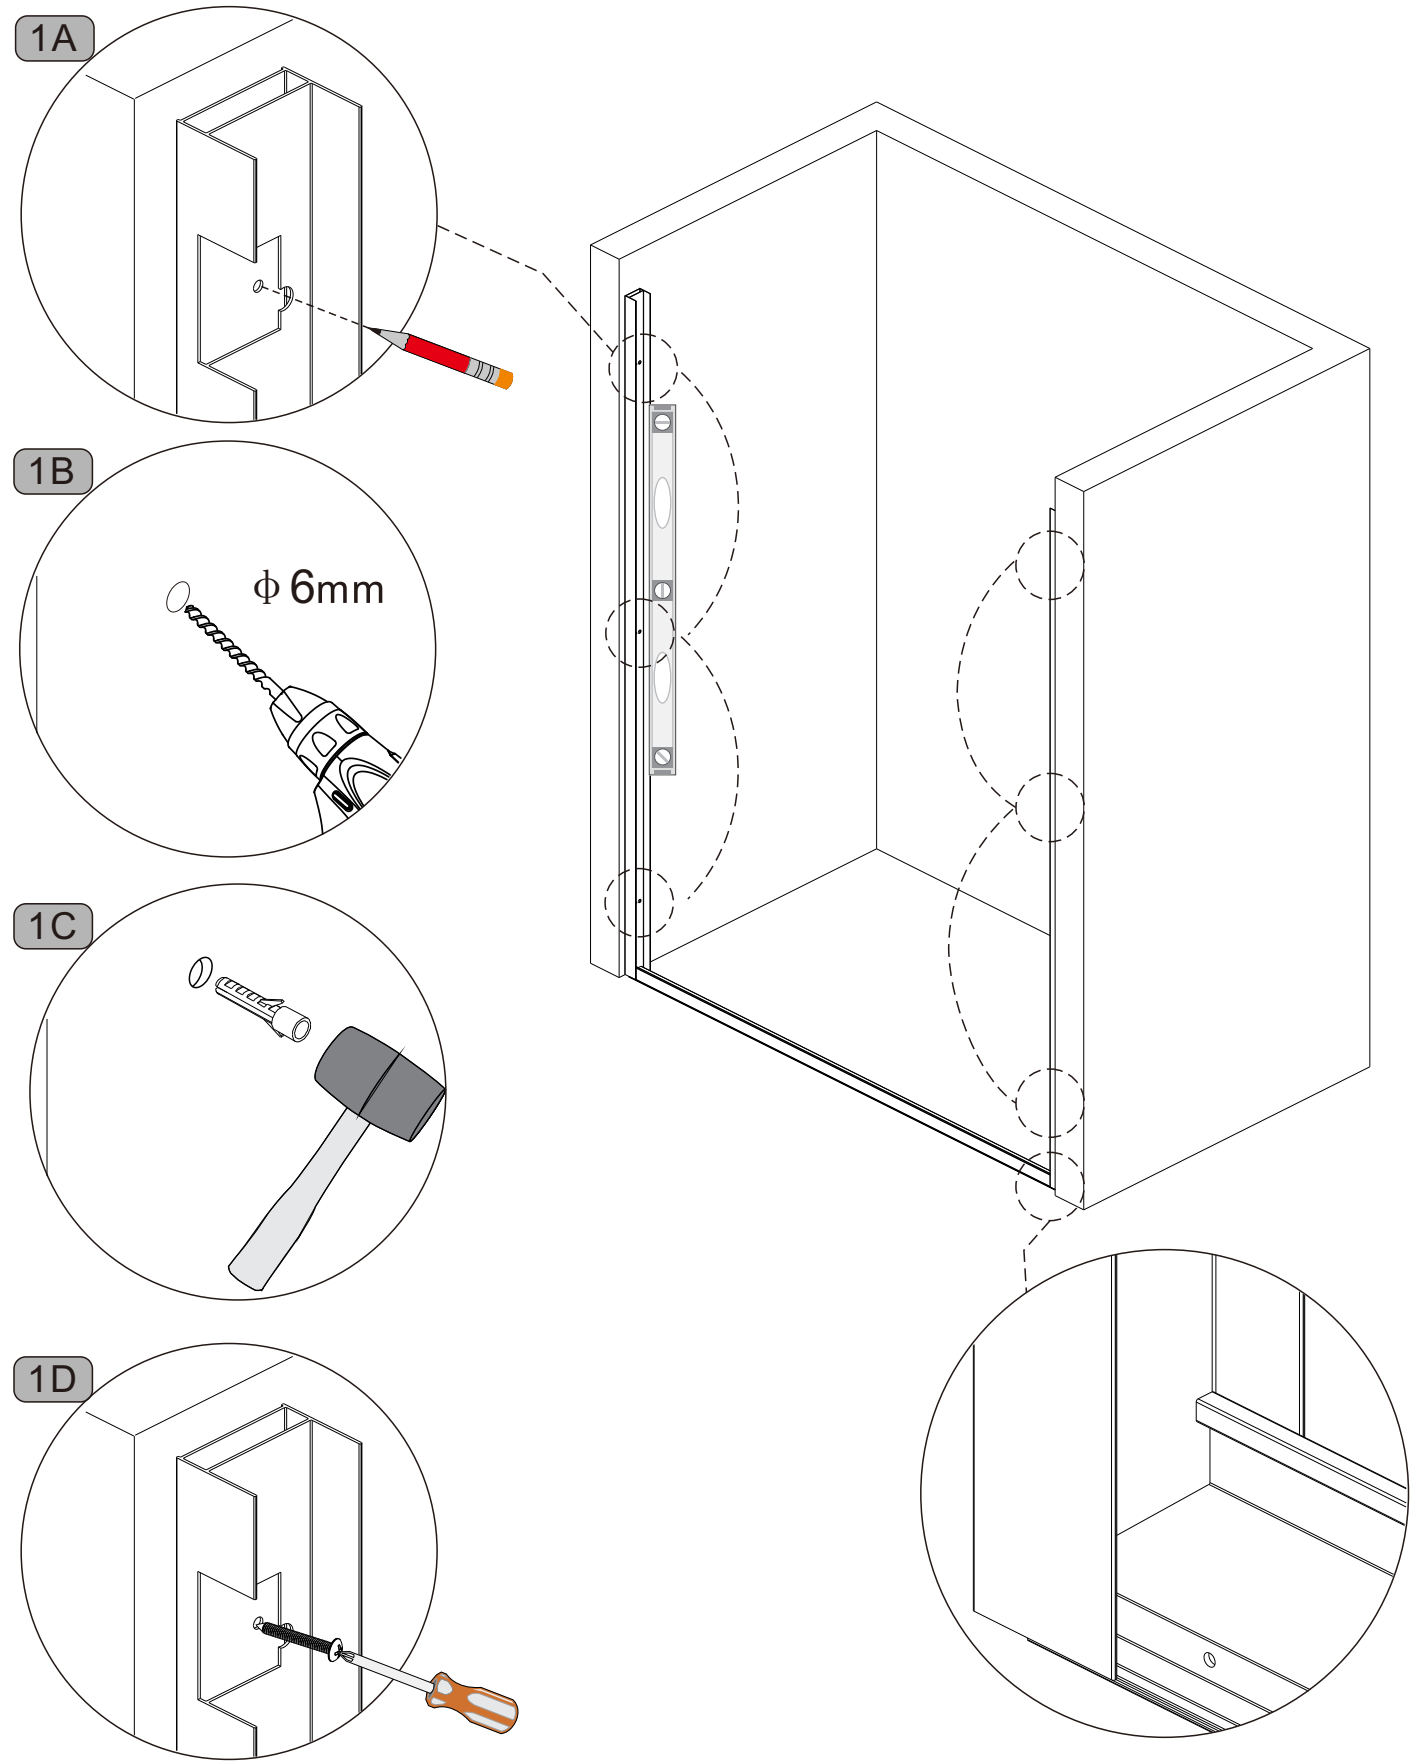


◆ Installation Steps

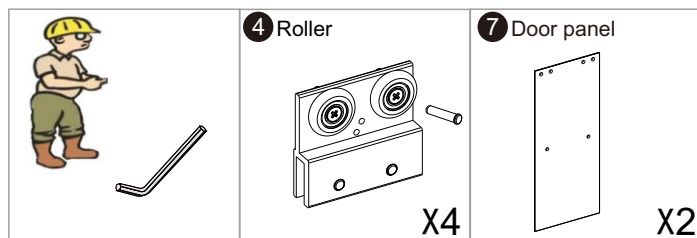


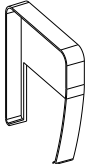
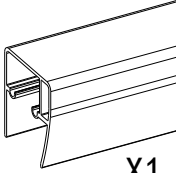
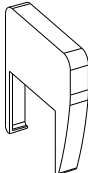
Step 2

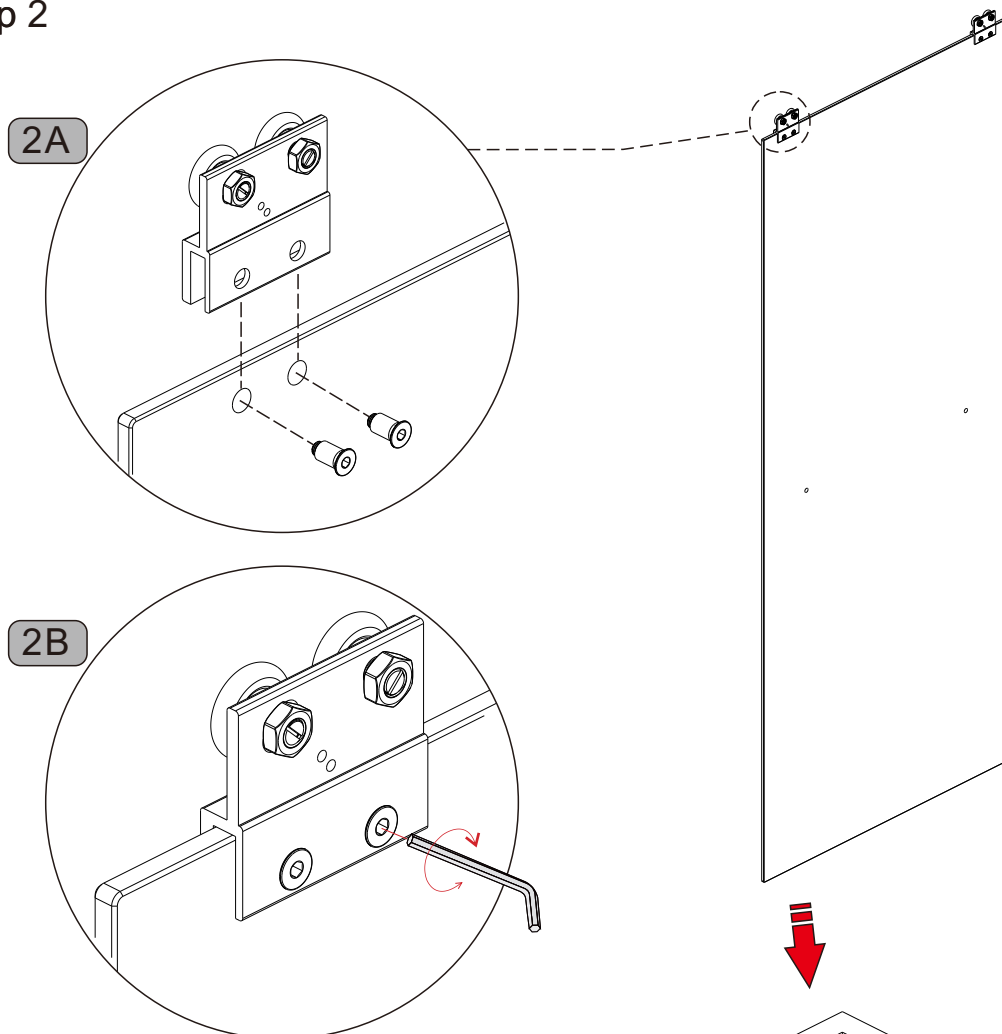


The assembled rollers and glass with black corner protectors are moved to the shower area

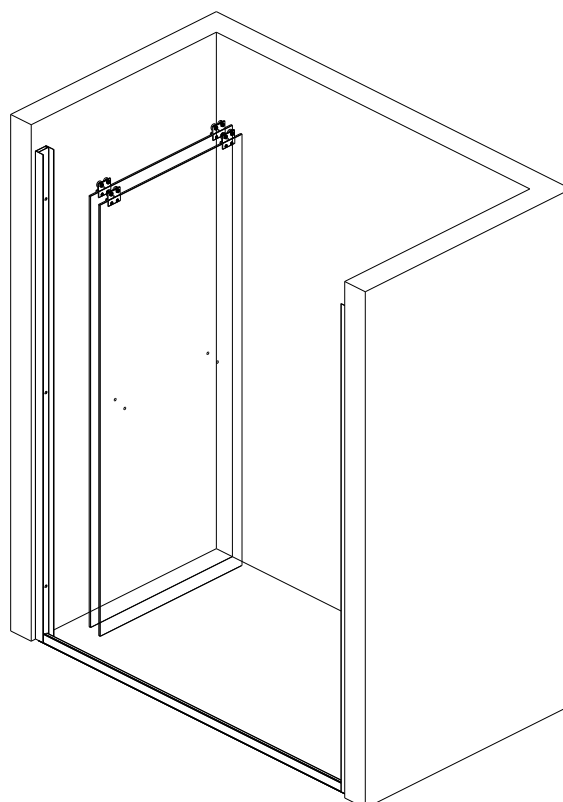


◆ Installation Steps

	1 Right Decorative cover  X1	2 Top Track  X1	3 Left Decorative cover  X1
---	--	---	---



Step 3

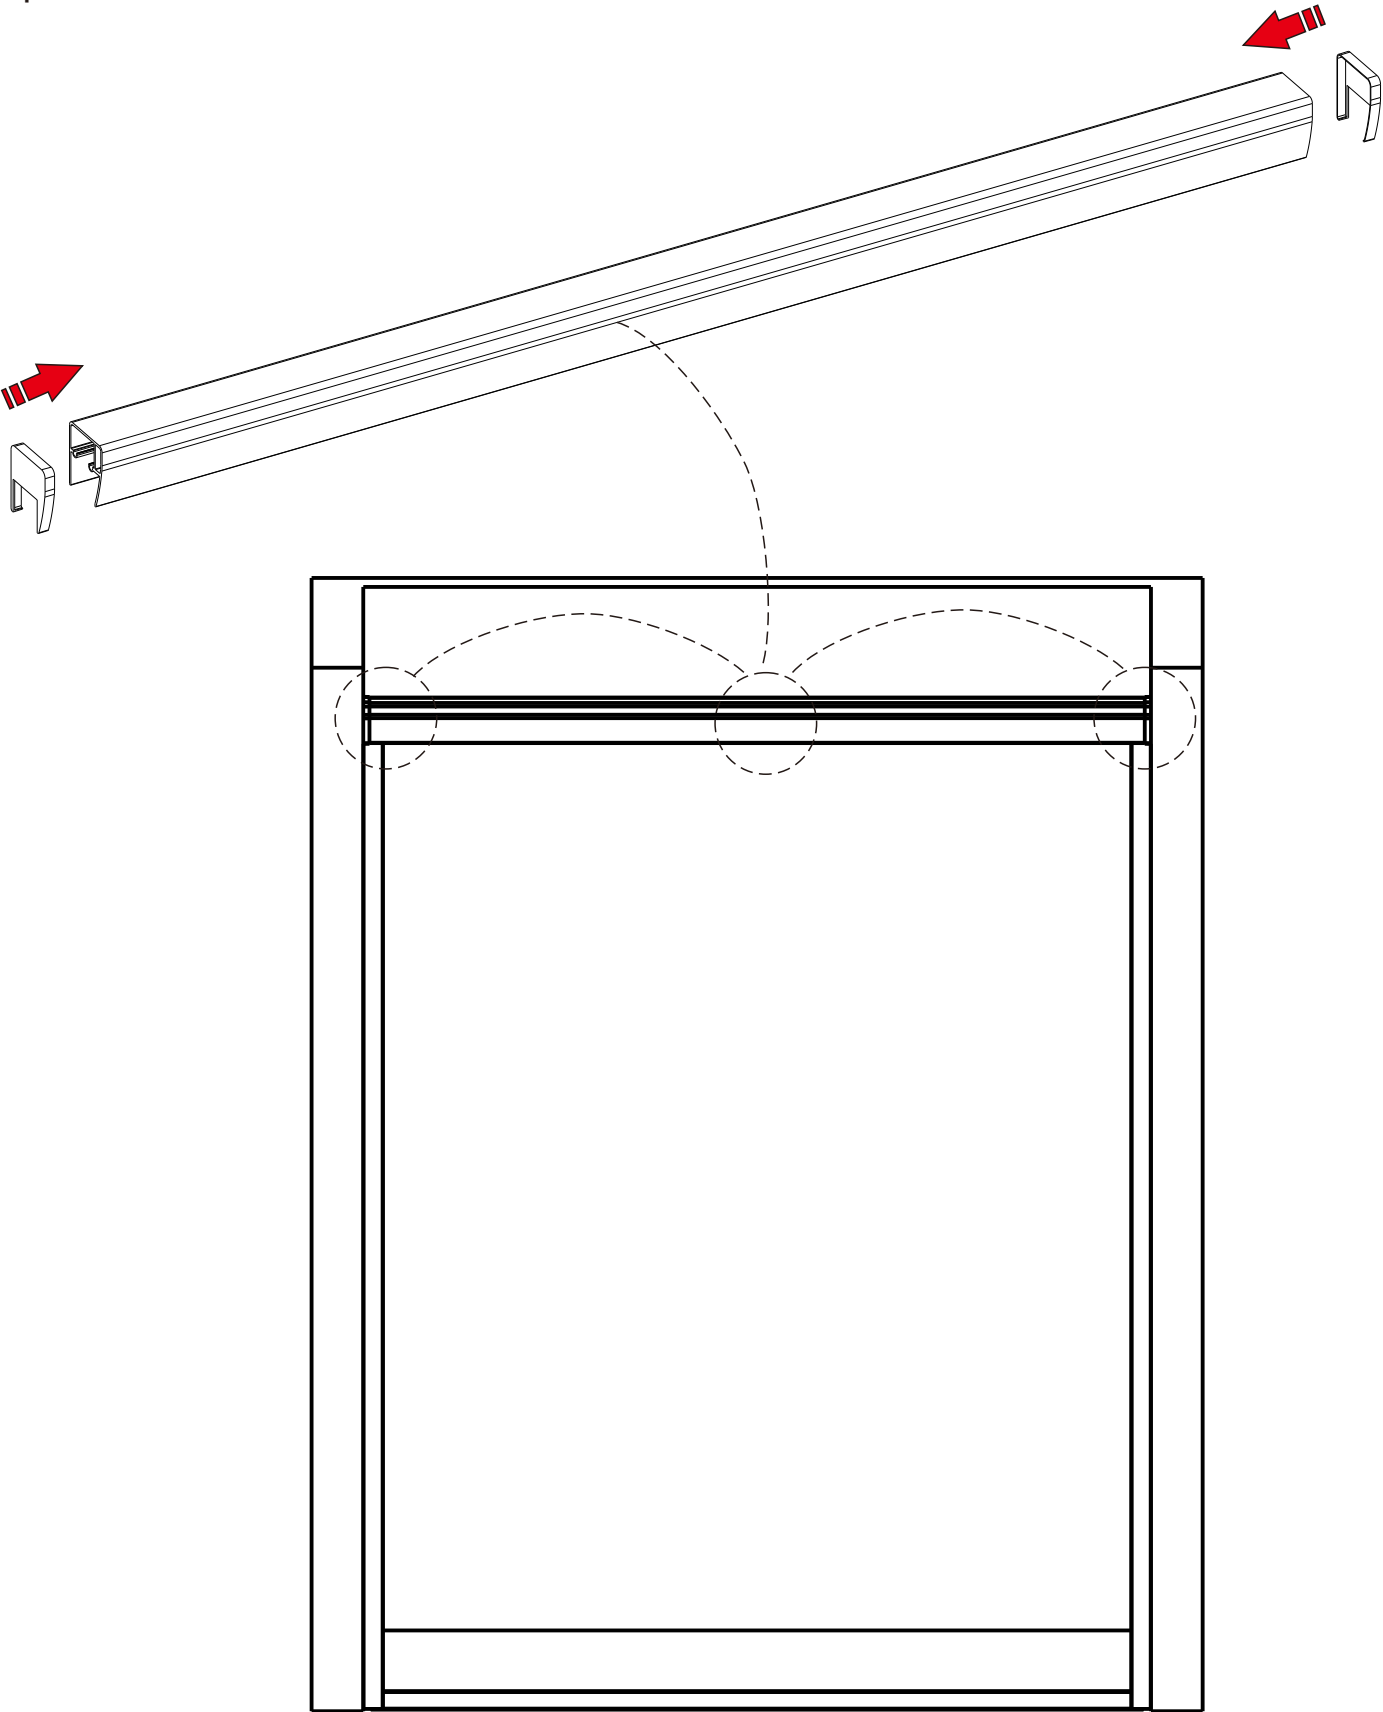







◆ Installation Steps

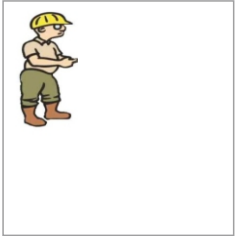


Step 4

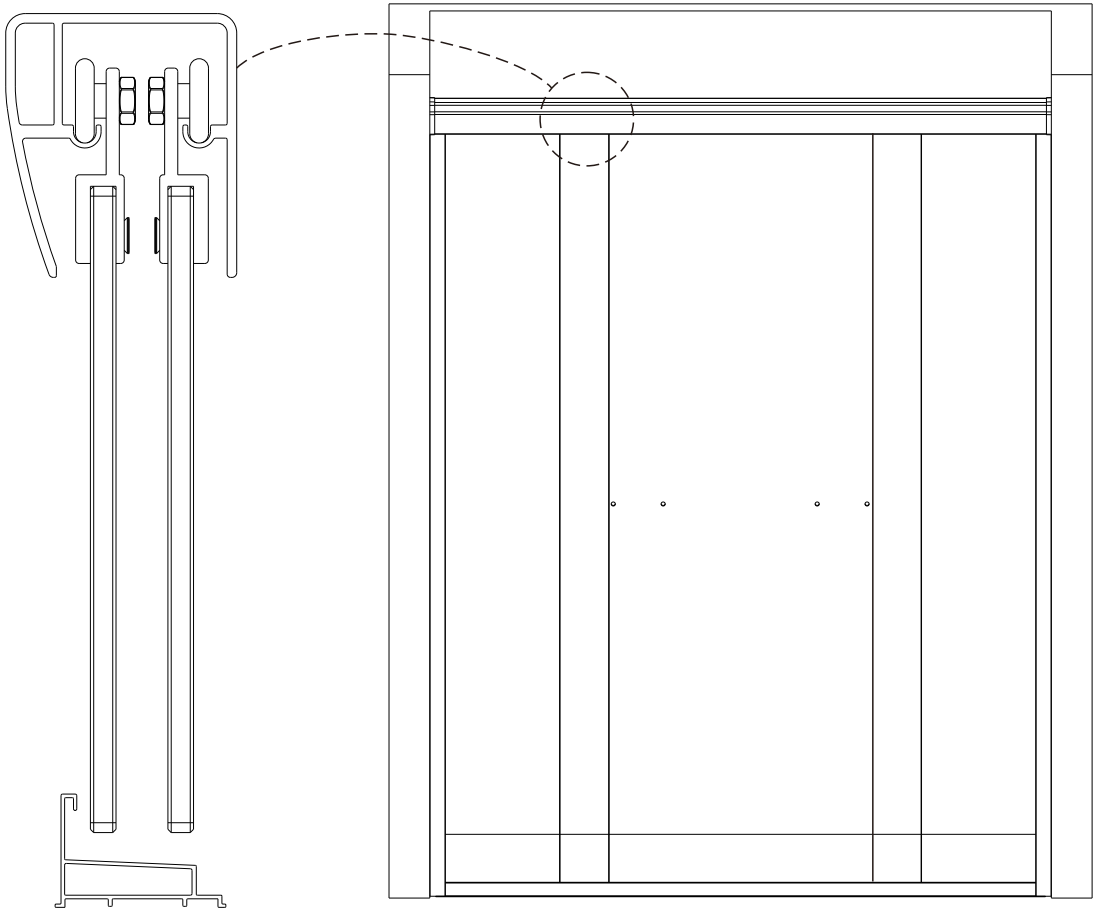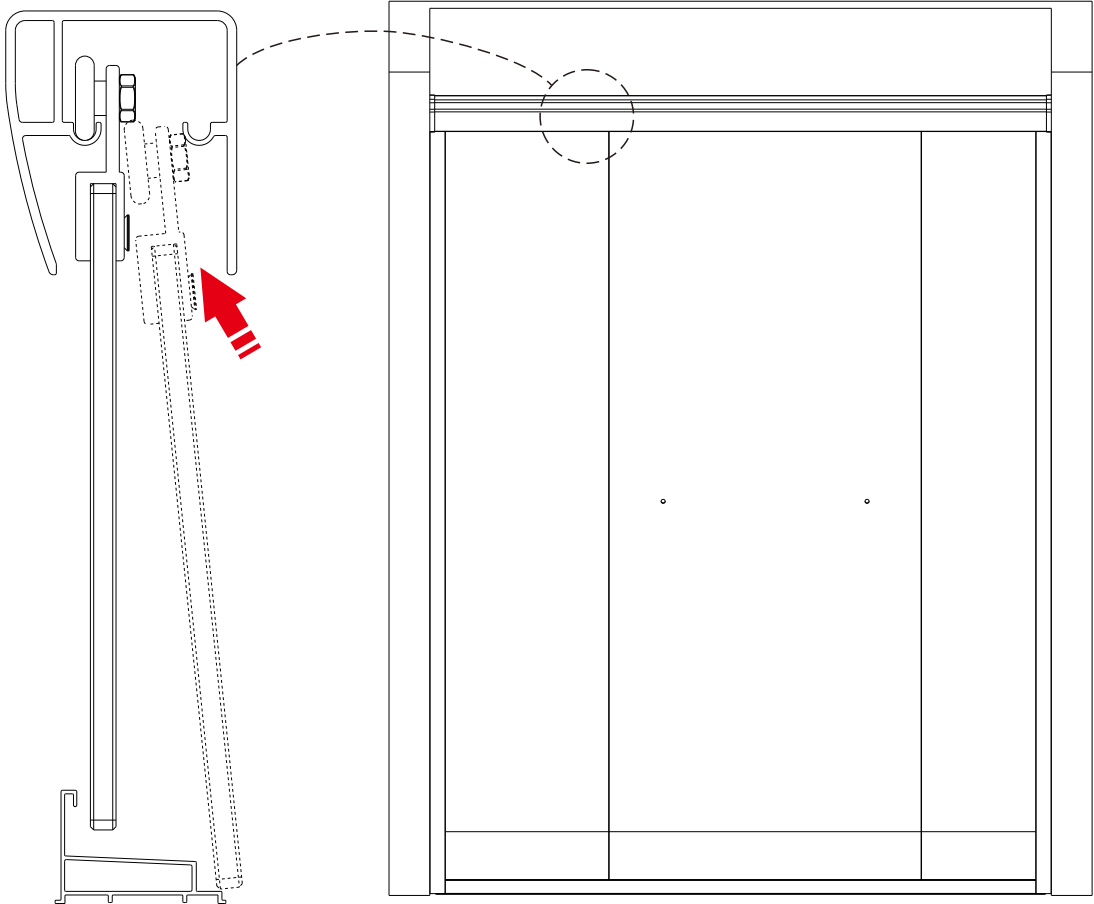


◆ Installation Steps

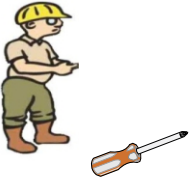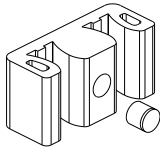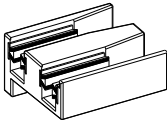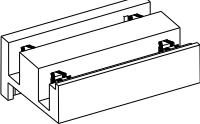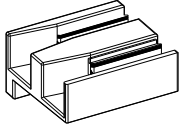	6 Bumper blocks  X6	13 Left guide block  X1	15 Middle guide block  X1	16 Right guide block  X1	11 Countersunk Screw 12 Countersunk Screw ST4X16  X10
---	---	---	---	--	--


Step 5

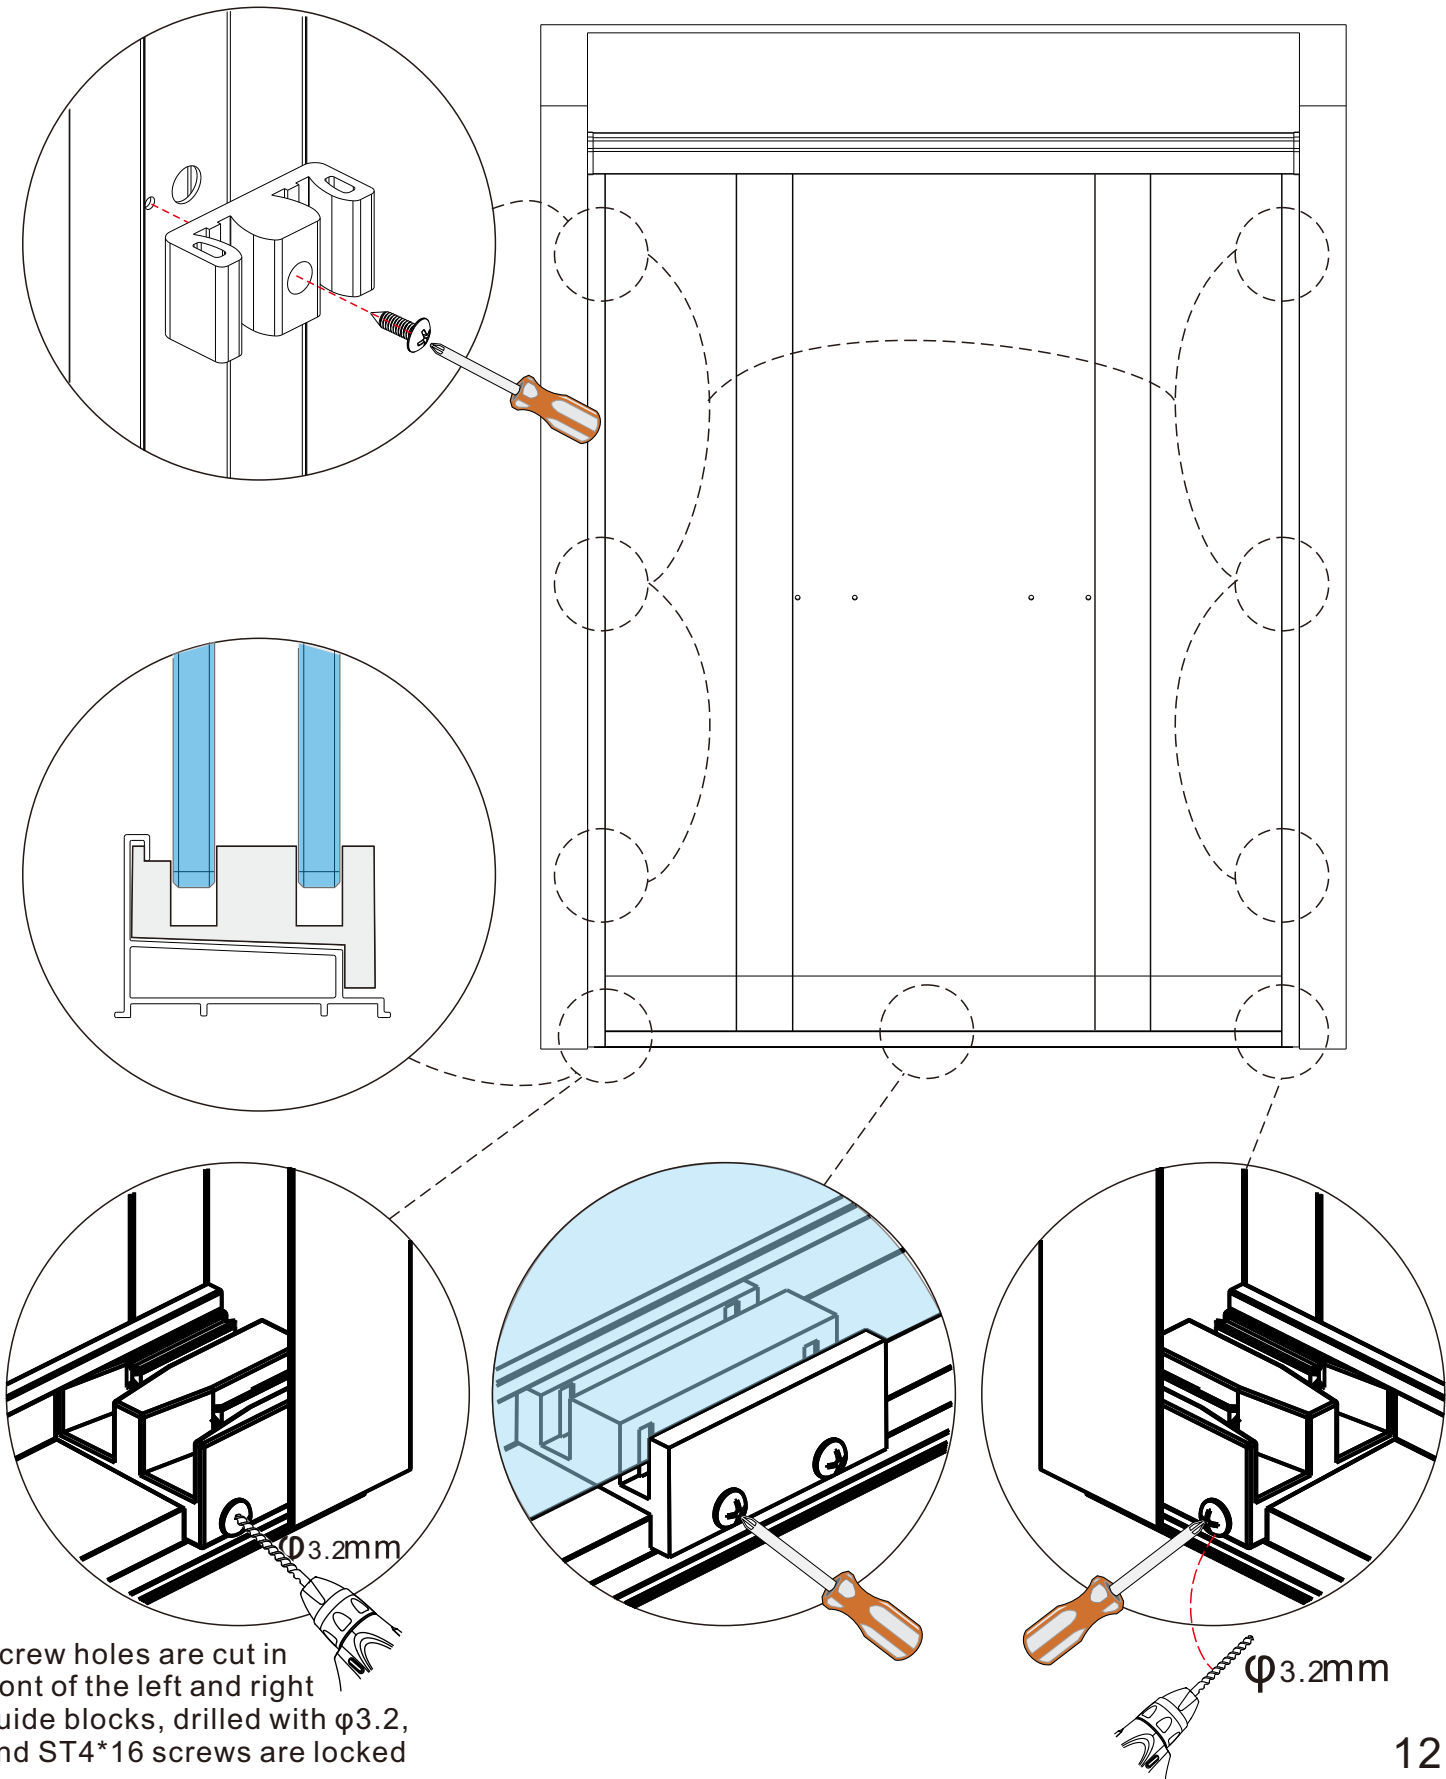

◆ Installation Steps

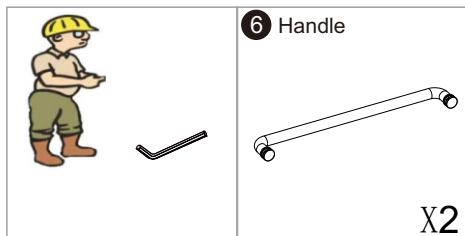


Step 6

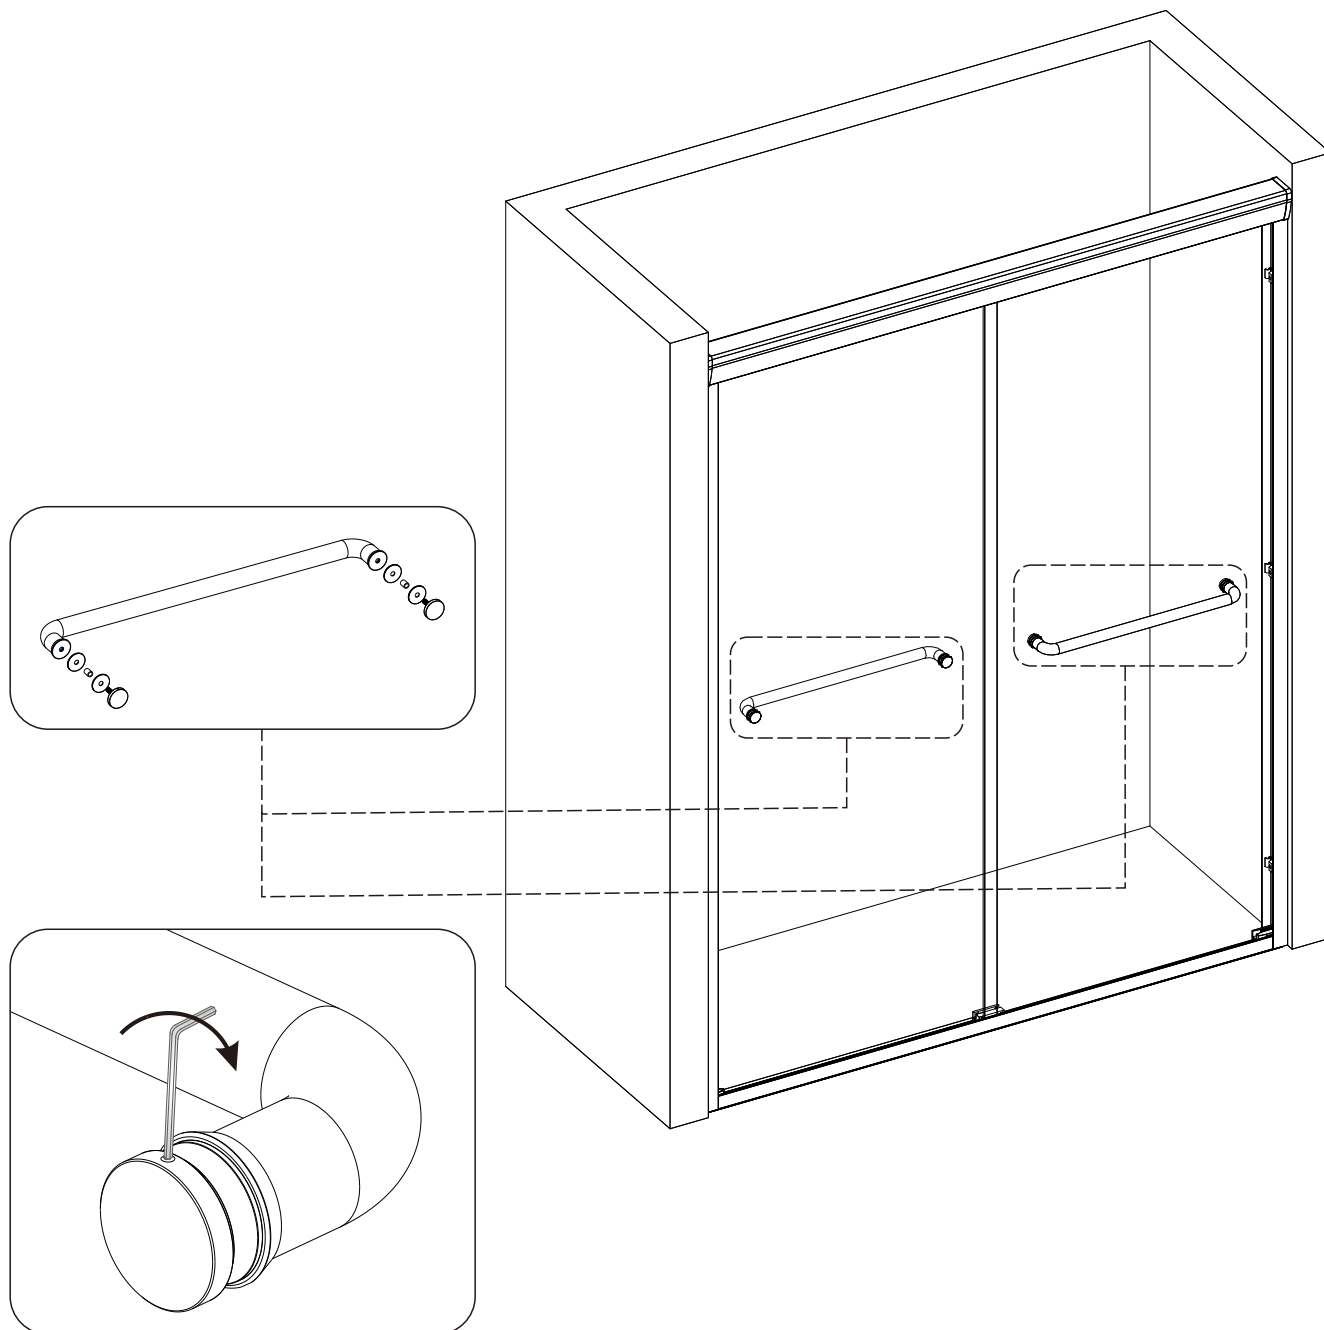


Turn the metal sleeve to the right to tighten the handle.

◆ Installation Steps


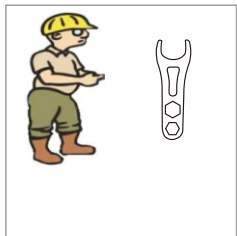


Step 7

The roller is loose to the top, and the opening under the movable glass is large


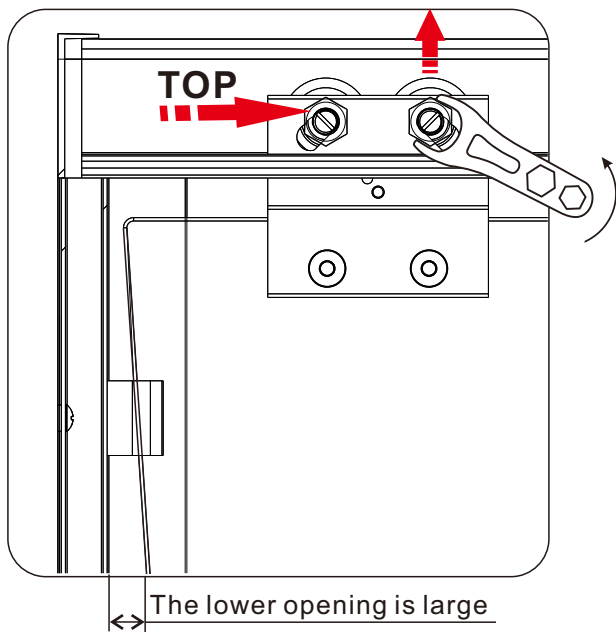


The roller is loosened to the bottom, and the glass is parallel to the frame

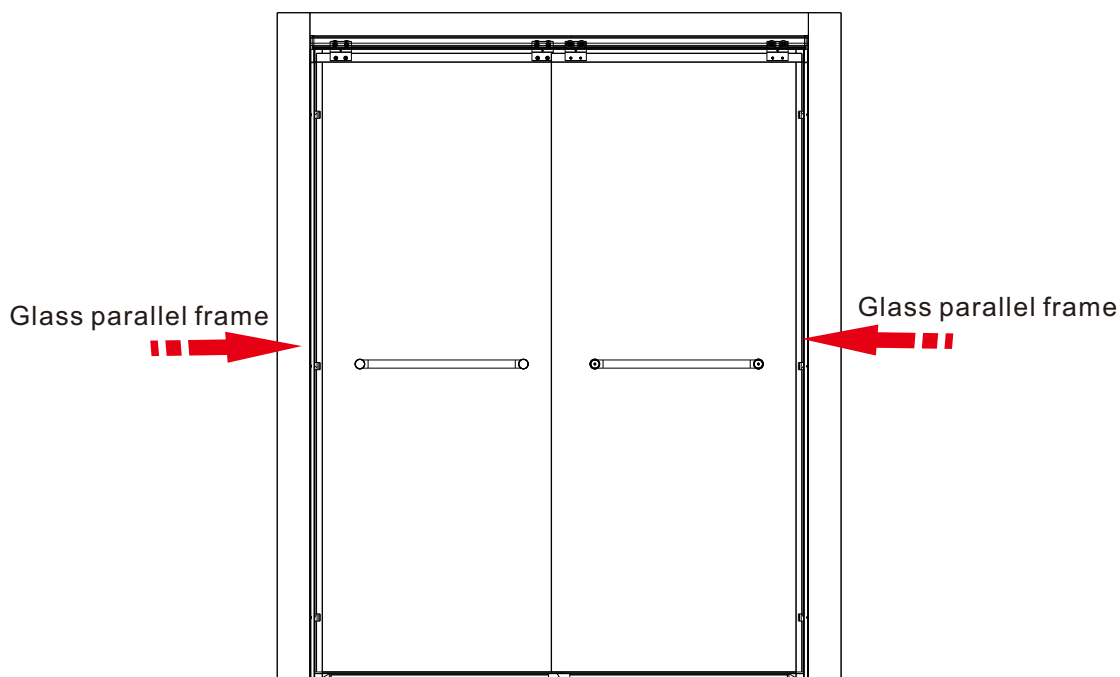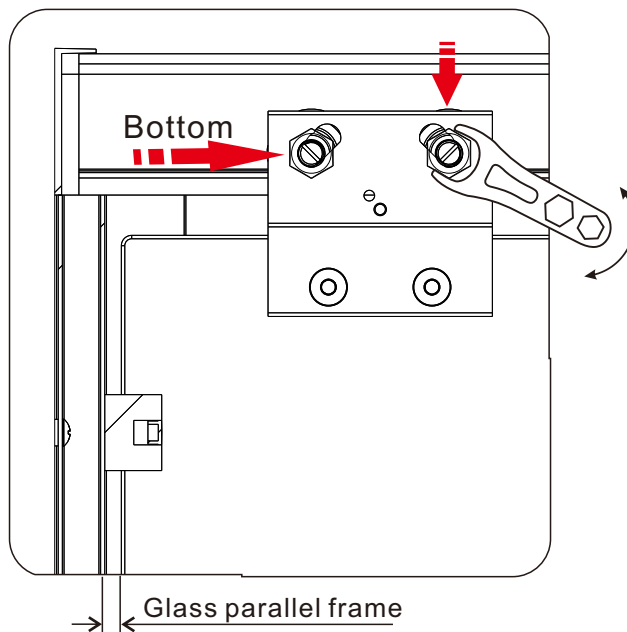



Loosen main allen screw and turn metal bushing left or right to raise or lower door. Tighten main allen screw.

◆ Installation Steps

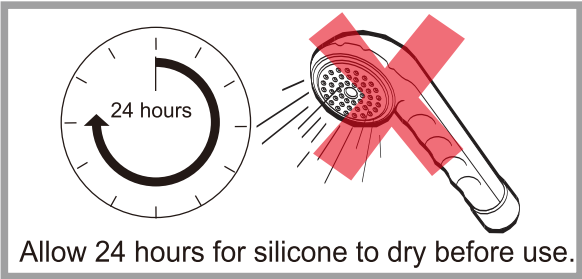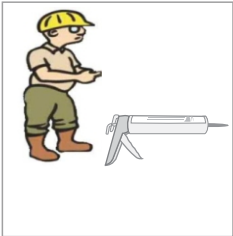

Allow 24 hours for silicone to dry before use.

Step 8

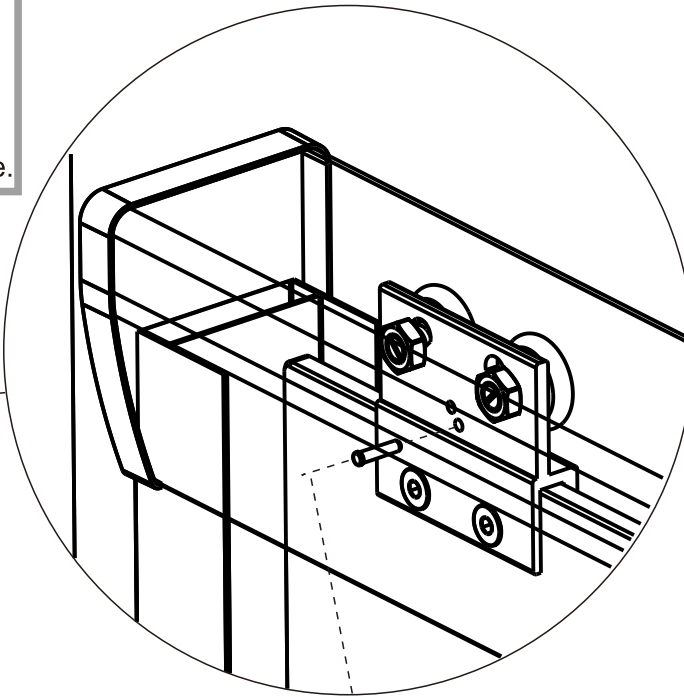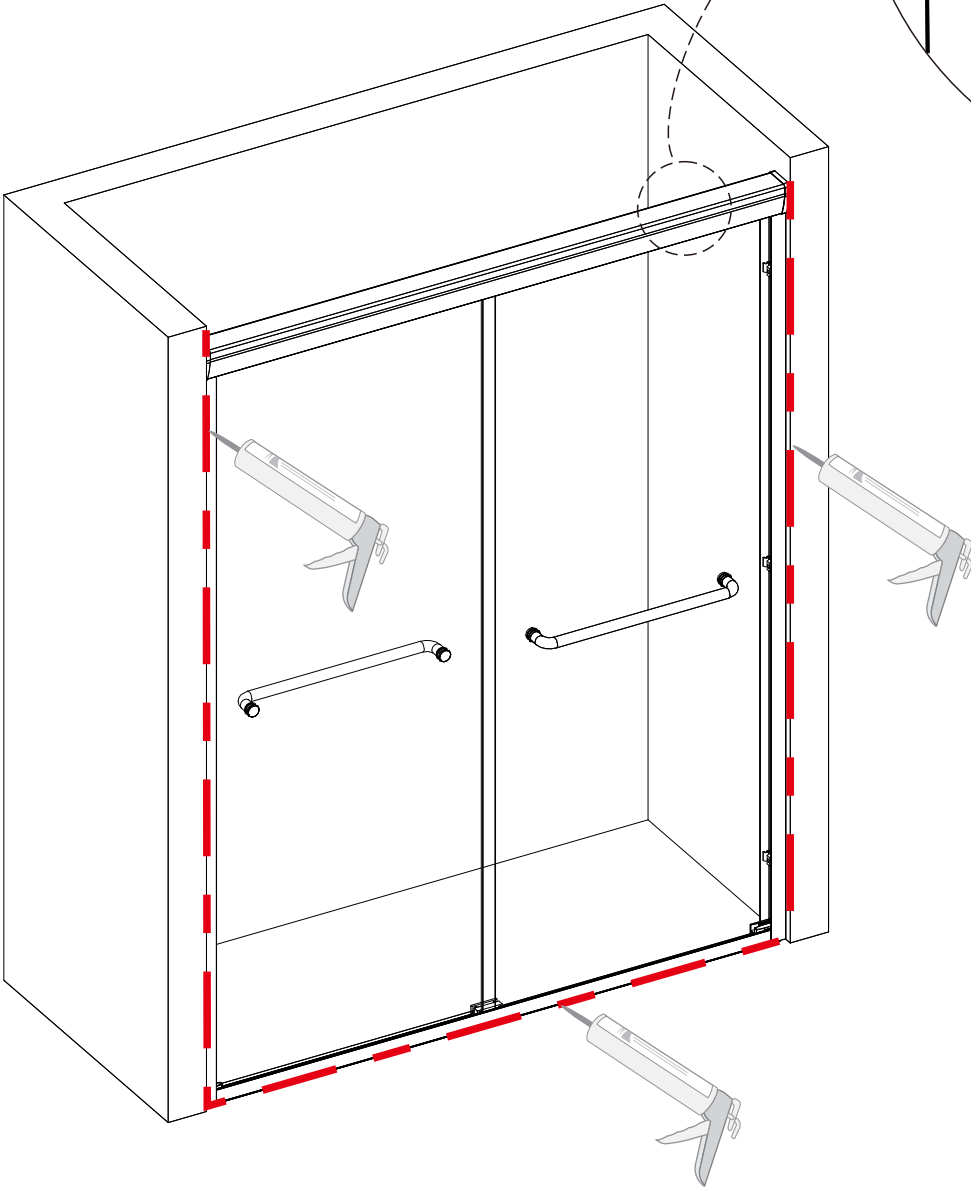

Install the safety latch