

FEATURES

- 48" x 36" Shower Walls for existing construction.
- Thick 1/4" 100% Solid Surface material for superior strength, beauty and easy cleaning. Surface will not support bacteria growth.
- Walls can be attached to moisture-resistant wall board, or directly over tile with supplied adhesive. Walls are trimmable for custom fit.
- Integrated pieces fit together for an easy, clean installation. Lap joint connection between upper and lower back wall forms a watertight seal.
- Two wall shelves included for convenient storage
- Wall Kit includes two wrap around front edge trim pieces, front and side top bullnose trim pieces with coped, mitered inside corners and a bullnose trim piece for use over backwall lap joint, one 1-oz. tube mounting adhesive, four 11-oz. tubes 100% silicone adhesive and one roll mounting tape.
- 10 Year Limited Residential Warranty / 3 Year Commercial Warranty

COLORS

3 Transitions colors with a 16" x 16" square tile pattern.
3 Transitions and 3 Classic colors with plain pattern.


OPTIONS

- Extension wall panels add up to 24" of height to extend shower walls to ceiling.
- Shower base with concealed drain.
- 3 Wall Pockets: horizontal, vertical or arched; Window Trim Kit and Shower Seats also available. See Accessories Specification sheet for details.

Specified Model

	SIZE	MODEL NO.	DESCRIPTION	Width	Depth	Height		
SHOWER WALL KIT								
	48" x 36"	RBE4867	Wall Kit	48"	to 36"	72"		
OPTIONAL COMPONENTS								
	48" x 34"	F4834	Shower Base	48"	34"	3"		
	48" x 36"	X4862	Extension Wall Kit	48"	to 36"	24"		
COMPLETE SHOWER KITS								
	48" x 34"	RKWF4847	Walls & Base Kit	48"	34"	75"		
	48" x 34"	RKWFX4847	Walls, Base, Ext. Kit	48"	34"	99"		


To Be Specified: Pattern/Color (see below)

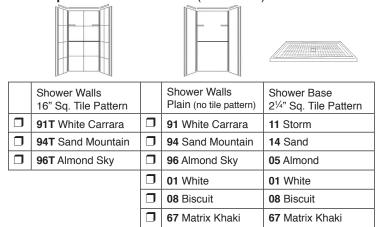

86 Sea Shore



Shown with F4834 Shower Base, X4862 Extension Wall Kit

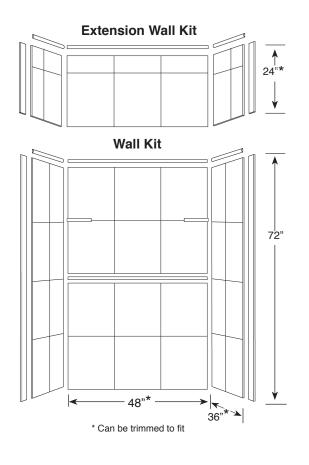


86 Sea Shore

48" x 36" shower walls **RBE 4867**



INSTALLATION NOTES:

This product is to be installed according to the installation guide supplied with shower walls. This product designed to be installed over clean, smooth tile, waterproof drywall or cement board. If installing directly over tile, remove all loose pieces and fill for a consistent, smooth substrate.

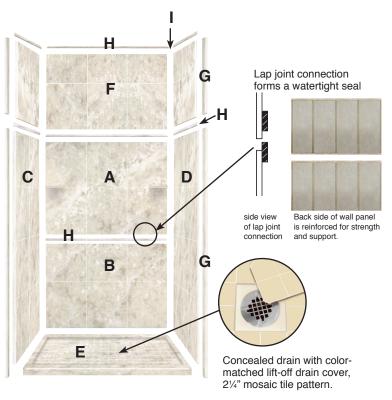

G. Outside Edge Trim



H. Bullnose Trim



The solid surface bullnose molding used along the top edge of the walls and at backwall lap joint is contoured for easy


	MODEL#	DESCRIPTION	
Α	RB487U	Upper Back Wall (1 panel)	
В	RB487D	Lower Back Wall (1 panel)	
С	RE367L	367L Left End Wall (1 panel)	
D	RE367R	RE367R Right End Wall (1 panel)	
E	F4834	34 Shower Base - center drain	
F	X4882	Extension Wall Kit	


OPTIONS: ACCESSORIES


Available for on-site installation. Must be ordered separately. See Accessories Specification for further information.
















Arched Wall Pocket WSA1522

Horizontal Wall Pocket

Vertical Wall Pocket Window Trim Kit WSV0830 WTK36

Corner Shower Seat CSS1414

Rectangular Shower Seat RSS2412

Product Information

	SHOWER DOOR		
MODEL NO.	MAXIMUM WIDTH	MAXIMUM HEIGHT	
RBE4867	45-1/2"	72"	