

Windward®

6' BubbleMassage™ Bath K-1114-GRF

GREENGUARD PRODUCT CERTIFICATION LUCOMACCI. ULCOMACCI. ULCOMACCI.

Features

- Integral flange.
- Right drain.
- Integral lumbar support and armrests for comfort.
- 72" (1829 mm) x 42" (1067 mm) x 21" (533 mm)

Material

Acrylic

Hydrotherapy

- 120 BubbleMassage™ airjets.
- Zones of Control feature allows you to target massage to back, midsection, or feet.
- Automatic purge cycles remove residual water from air channels after use.
- Built-in 300 W heater.
- Lighted keypad control.

Installation

Alcove

Recommended Accessories

K-11677 Bath Drain K-7166-AF Bath Drain K-24916 Wireless Music Kit



Codes/Standards

ASME A112.19.7/CSA B45.10 CSA B45.5/IAPMO Z124 ASTM E162 ASTM E662 UL 1795 Greenguard UL 2818 - Gold CARB P2

KOHLER® One-Year Limited Warranty

See website for detailed warranty information.

Available Color/Finishes

Color tiles intended for reference only.

Color	Code	Description
	0	White
	96	Biscuit
	47	Almond







Windward®

6' BubbleMassage™ Bath K-1114-GRF

11-1/16" (281 mm)

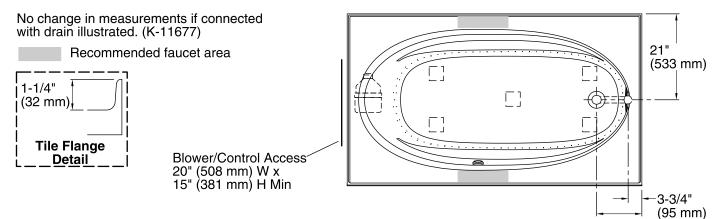

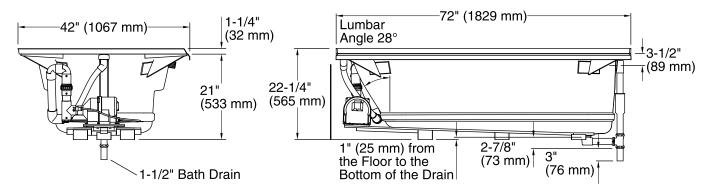

Required Electrical Service

One dedicated circuit required, protected with Class A Ground-Fault Circuit-Interrupter (GFCI) or Residual Current Device (RCD).

Blower: 120 V, 15 A, 60 Hz

Technical Information

All product dimensions are nominal.

Installation:

3-Wall Alcove

Drain location: Right

Basin area, bottom: 55" x 23-1/4" (1397 mm x 591 mm)
Basin area, top: 64" x 32" (1626 mm x 813 mm)

Weight: 132 lbs (59.9 kg)
Minimum floor load: 39 lbs/ft² (190.4 kg/m²)

Water depth: 15" (381 mm)
Water capacity: 78.5 gal (297.2 L)

Electrical component Blower: 120 V, 10 A, 60 Hz, 300 W

rating:

Minimum flat for door: 3-1/16" (78 mm)

Notes

Measure your actual product for rough-in details. Install this product according to the installation instructions.

The hot water supply should be 70% of the capacity of the bath or greater. Installations will vary.

Provide one grounded electrical outlet within 24" (610 mm) of each component.

If installing a rim-mount faucet, make sure there is no interference with the drain overflow and circulating system before drilling any holes. Consult local and national codes for minimum air gap requirements if installing a spout on the faucet deck.

Remote blower installation kit K-1446 is available for relocating the blower. Provide access for servicing the blower.

Do not relocate or alter the PVC tee or coiled flexible tubing connected to the blower. Follow the blower relocation instructions exactly.

USA/Canada: 1-800-4KOHLER (1-800-456-4537)

Kohler Co. reserves the right to make revisions without notice to product specifications. For the most current Specification Sheet, go to www.kohler.com.



