

kitchen sinks

Features

- 25" (635) x 22½4" (559) x 9" (229) top mount kitchen sink.
 Offset single compartment with faucet deck on right.
- 16 gauge 304 stainless steel.
- Offset center drain location.
- Brushed finish with highlight rim.
- · Superior undercoating for added sound insulation.
- 3mm sound deadening pads on all 4 sink sides and bottom. Up to 3 times heavier than competitive models.
- Fits 30" base cabinet width.

Components

Product includes: **Cutout Template** Installation Hardware Installation Instructions

Options

TSGM25221 Stainless Steel Bottom Sink Grid TCBM916 Bamboo Cutting Board 2210R Covered Sink Strainer 4010 Covered Disposer Strainer

Warranty

Lifetime Limited Warranty

Specified Model


Model	EPT316-25
Overall Dimensions	L25" x W221/4" x D9" 635 x 559 x 229
Bowl Dimensions	L21 ²⁷ / ₃₂ " x W18 ⁵⁵ / ₄ " / 15 ³³ / ₄ " x D9" 555 x 479 / 394 x 229
Drain holes:	35/6" (92mm)
Shipping Weight	23 lbs.
Material	16 gauge 304 stainless steel
Installation	counter top mounted
Required	template, included

To Be Specified:

see back for configurations available for this sink

Faucet Hole Drillings
1 Hole
2 Holes MR2
2 Holes MR2-8
3 Holes

101.6mm [4.00"] 101.6mm [4.00"] 3-38mm [1.50"]

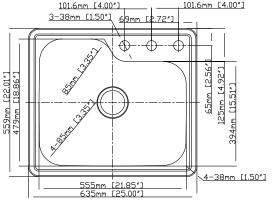



Codes/Standards

ASME A112.19.3/CSA B45.4


Notes


Install this product according to the installation instructions.





kitchen sinks

Faucet Hole Configurations available for this sink model











Optional Accessories

TSGM25221 Bottom Sink Grid

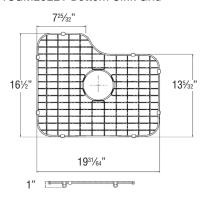


2210R Covered Flip Top Sink Strainer.



Water drains easily when cover is in place. Cover flips up with easy touch. Cover makes a flat surface at the sink bottom that prevents food waste from getting into the strainer basket for easy sink clean up. Polypropylene housing. Fits standard 3½" opening.

2310 Remote Covered Flip Top Sink Strainer.

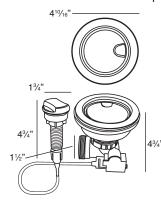

Turn the remote knob to open and close drain. Water drains easily when cover is in place. Cover flips up with easy touch.

Cover makes a flat surface at the sink bottom that prevents food waste from getting into the strainer basket for easy sink clean up.

Polypropylene housing. Fits standard 3½" opening. 1¾" hole required in countertop for remote installation. Remote cable 251/2" L.

4010 Covered Flip Top Disposer Strainer.



Water drains easily when cover is in place. Cover flips up with easy touch. Polypropylene housing. Top mount installation for 3½" opening.