

kitchen sinks

Features

- 32⁶³/₆₄" (838) x 22½/₆₄" (559) x 9" (229) top mount kitchen sink.
 Offset super single compartment with faucet deck on right.
- 16 gauge 304 stainless steel.
- Offset center drain location.
- Brushed finish with highlight rim.
- Superior undercoating for added sound insulation.
- 3mm sound deadening pads on all 4 sink sides and bottom. Up to 3 times heavier than competitive models.
- Fits 36" base cabinet width.

Components

Product includes: **Cutout Template** Installation Hardware Installation Instructions

Options

TSGM33221 Stainless Steel Bottom Sink Grid TCBM1416 Bamboo Cutting Board 2210R Covered Sink Strainer 4010 Covered Disposer Strainer

Warranty

Lifetime Limited Warranty

Specified Model

Model	EPT316-33
Overall Dimensions	L32 ⁶ % ₄ " x W22½ ₄ " x D9" 838 x 559 x 229
Bowl Dimensions	L29 ²⁷ / ₃₂ " x W18 ⁵⁵ / ₄ " / 15 ³³ / ₄ " x D9" 758 x 479 / 394 x 229
Drain holes:	35/8" (92mm)
Shipping Weight	30 lbs.
Material	16 gauge 304 stainless steel
Installation	counter top mounted
Required	template, included

To Be Specified:

see back for configurations available for this sink

Faucet Hole Drillings	
1 Hole	
2 Holes MR2	
2 Holes MR2-12	
3 Holes	
3 Holes MR3	
4 Holes	


Codes/Standards

ASME A112.19.3/CSA B45.4

Notes

Install this product according to the installation instructions.



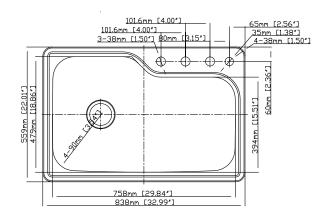







kitchen sinks

Faucet Hole Configurations available for this sink model

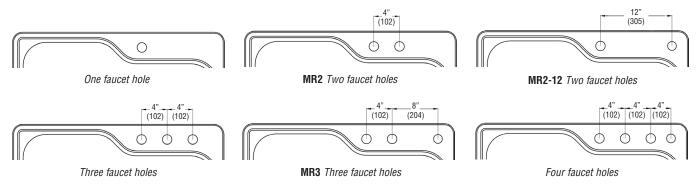

Optional Accessories

TSGM33221 Bottom Sink Grid

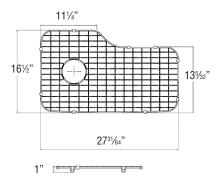


2210R Covered Flip Top Sink Strainer.




Water drains easily when cover is in place. Cover flips up with easy touch. Cover makes a flat surface at the sink bottom that prevents food waste from getting into the strainer basket for easy sink clean up. Polypropylene housing. Fits standard 3½" opening.

4010 Covered Flip Top Disposer Strainer.

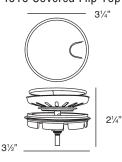

Water drains easily when cover is in place. Cover flips up with easy touch. Polypropylene housing. Top mount installation for 31/2" opening.

2310 Remote Covered Flip Top Sink Strainer.

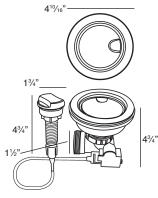

Turn the remote knob to open and close drain. Water drains easily when cover is in place. Cover flips up with easy touch.

Cover makes a flat surface at the sink bottom that prevents food waste from getting into the strainer basket for easy sink clean up.

Polypropylene housing. Fits standard 3½" opening. 1%" hole required in countertop for remote installation. Remote cable 251/2" L.